

Honeywell NCR 1900 Barcode Instructions Cheat Sheet

1.



DEFOVR.
Remove Custom Defaults



DEFALT.
Activate Defaults

2.



Auto Trigger

or



Manual Press Trigger

3.



Carriage Return

4.



Low Volume



Medium Volume



Volume Off

5.



Save