

Overview

Power Bank Functionality:

1. Turn on the switch to turn on/off power display.

2.LED indicator:

Turn on the switch, LED will indicate power reserve. After 3 seconds LED will gone out . If LED doesn't glow. Please recharge device.

 
Recharge devices

Recharge devices:

1.Turn on the switch to show the current power varied by the lights.

2.Power indicator cannot be turned on when power bank is out of battery.

3.Please recharge power bank with genuine power adapter for safety purpose.




Algorithm:

Total output = capacity × 75% (battery step-up converting consumption) × line-board transferred consumption

Products Specifications

Model Number	A1028
Type	Lithium Battery
Input	DC 5V 1000mA (MAX)
Output	DC 5V 1000mA (MAX)
Capacity	10000 mAh
Life cycle	≥800 until the nominal capacity may drop to around 50%
Working Temperature	-10~45°C
Size	88*47*22 mm
Weight	180g

Products Specifications

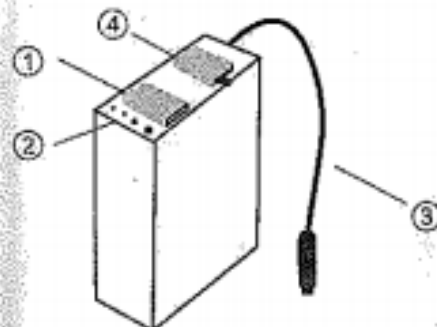

- 1.Micro USB Input
- 2.LED indicator light
- 3.DC Output
- 4.Switch

LED indicator color	one light	Two light	Three light	Four light
Status	1~25%	50%	75%	100%

Recharge Power Bank

1.Indicator lights shows remaining power during charging process.

2.When all lights are on, Power bank is completely recharged .

3.Genuine power adapter or cable are preferred when wall plug is used as recharging source.

4.Charging time takes about 9-10 hours.

Reminder

Lithium batteries does not have memory effect. It means whenever you recharging battery does not affect its capacity.

1. when phone battery is below 15%-20%, power bank is needed to start recharging the battery. If phone battery is too low, it may become deeply discharge, which may damage phone battery.

2. Please avoid long time charging when the phone battery is completely recharged. Overcharging may damage both phone battery and power bank. Please avoid overcharging in order to protecting the battery life when it is completely charged.

3. Capacity of power bank can not be fully converted due to the consumption of converting process. The process may also generate heat over power bank, and this considered as normal mechanical phenomenon.

Safety Notice

Caution!

1. Please recharge power bank every 3-month in order to maintain its proper functionality when it is not frequently used.

2. Keep power bank dry at all times and avoid exposing it under wet or hot circumstances.

3. Do not use any chemical compound, such as soap or detergents, to cleanse power bank.

4. Dismounting or throwing power bank into water or fire is extremely dangerous and strongly forbidden.

5. Please stop using power bank immediately when it appears to be expanded, leaked or smelled.

6. Power bank is not designed and suitable for disabilities and children.