


K3 Camera

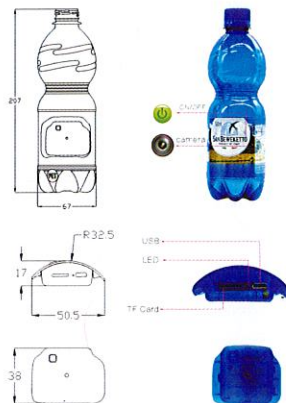

Manual



1. Turn Camera on

Press the button 2 seconds, blue lights on long time after flash once. then enter into standby mode, waiting for user key operation. No memory card: Blue light flash twice, after 0.5 second later, flash twice again. Camera turn off. Memory card is full: Indicator light flash twice quickly then save the files and turn off.

2. Video

Resolution 1920 * 1080 AVI format, support 64G TF card. Please format the memory card before using. Press the button one time instantly in standby mode, blue light flash 3 times, then Start recording, no Indicator light on when recording. Press the button once again, blue light on long time, save the videos and enter into the standby mode. It can record about 180 minutes video shooting time.

3. Turn camera off

In standby mode, press the button for 3 seconds, blue light turn off, then camera shuts down.

4. Removable disk Mode

Turn off the camera, connect it to the pc, then enter into the removable disk mode.

5. Time stamps Setting

Videos will be saved in the root directory of the TF card, when recognized as removable disk. Create a file named "time.txt" in the root directory of the TF card, the contents of the file is: 2015-01-01 23:59:59 by this format to modify the date and time and save the file. After rebooting, the camera recording time is the new time as set.

6. Low power

The camera will detect the built-in battery power automatically, if the power is low, the camera will shut down directly after saving the videos.

7. Charging status

The camera is equipped with 5V charger, connect the USB cable to charge it. Blue LED flash slowly when charging. Blue Lights on long time when full charged.

8. Camera accessories

1* Charger 1* USB cable, 1* Cap 1* Bottle body 1* Camera body 10* Stickers.

13 Additional support

1. Material used in the food industry PET material, can withstand high temperature 60 degrees. Can be filled with pure water, drink.

2. Can't turn on camera: please charge camera 2 hours before test.

3. Turn on camera but can't work: please check if the memory card insert into the camera, or format the memory card.

4. Can't recognize to the pc: Please check if the camera connect to pc well, it is best to connect to the USB port on the back of the computer.

5. Can't play the video well on the computer: Please check the computer configuration, player software, VLC player is recommended.