

# HD Sunglasses Hidden Camera

---

## *User's Guide*



## HD Sunglasses Hidden Camera

---

The HD Sunglasses Hidden Camera is a 720p high definition covert DVR that supports up to a 32GB micro SD card. The device records continuous video. It also can capture photos and record audio files. This hidden camera is battery powered. The battery life is about 1 hr long for continuous recording and requires about 4hrs to fully charge

### **In the Box:**

You will find the HD Sunglasses Hidden Camera, USB Cable, and this User's Guide.

## Getting Started

---

The first step in using your HD Sunglasses Hidden Camera is to charge the device via the USB cable provided for 4 hours before use.

This device does not have internal memory and relies on a micro SD card for video recording to be saved. The micro SD card should be inserted with the gold contacts facing inward. Before inserting a micro SD card, make sure the card is formatted correctly. The device can record in the FAT16/32 format. If you aren't sure how to format an SD card, you can find instructions here: <http://l.bhs.net/sd-format>.

Next you will insert your Micro SD card into the camera located next to the USB port.

---

To Power On and Off

To Power On the HD Sunglasses, push and hold the power button for 3 seconds.

When the device is turned on, the blue LED indicator will glow and stay steady. Once the power has cycled the LED will turn Solid Red.

To Power Off the HD Sunglasses, push and hold the power button until the LED light disappears.

---

## Changing the Date & Time

Connect the HD Sunglasses to your computer using the USB cable. Most computers will automatically recognize the device and a window may pop up with options. Choose the option to “Open Folder to View Files.” This will take you to the root directory of the device. Within the root directory, you need to create a new text file. To do this, right click on an open area within the root directory window to bring up the context menu. Then select “New” and choose “Text Document”. This will generate a new text file in the root directory.

Right click on the new text file and select “Rename”. Change the filename to “time” and hit enter. Now double click on the time text file and it will open up a text window. In the text window, type in the following: [date] YYYY/MM/DD HH:MM:SS

---

Replace the YYYY with the 4 digit year, MM with the 2 digit month, and DD with the 2 digit date, HH with the 2 digit hour, MM with the 2 digit minute, and SS with 2 digit second.

When done, click on “File” on the menu bar and select “Save”. Now you can safely disconnect your HD Sunglasses from your computer.

Power On the device and it will save the text file you create and adjust the time/date stamp on the future recordings.

### *To Record Video*

To begin recording video, you will need to hold the Power button for 3 Seconds. The Red LED Indicator will flicker every second. To save Video recording you will hold the power button for 3 seconds the Red LED indicator will remain Solid. The Camera will save a video file every 30 minutes.

### *To Take a Photo*

You will Gently press the Camera Function button, Blue LED Indicator will remain solid, You will then press the Power Mode button to take a Photo.

To return to Video you will then press the Camera Button Red LED Indicator will remain solid until you press the Power Mode Button to enable Video Function.

*Recording Audio:* Press the Mode Button until the LED becomes solid Red and Blue together. Then you can simply press the Power/Record Button to record an audio only file (no video, just sound). To stop the recording, simply press the Power/Mode Button once again and the LED will go back to solid red/blue and be in Standby Mode.

