




Connect the Advertiser to Wi-Fi

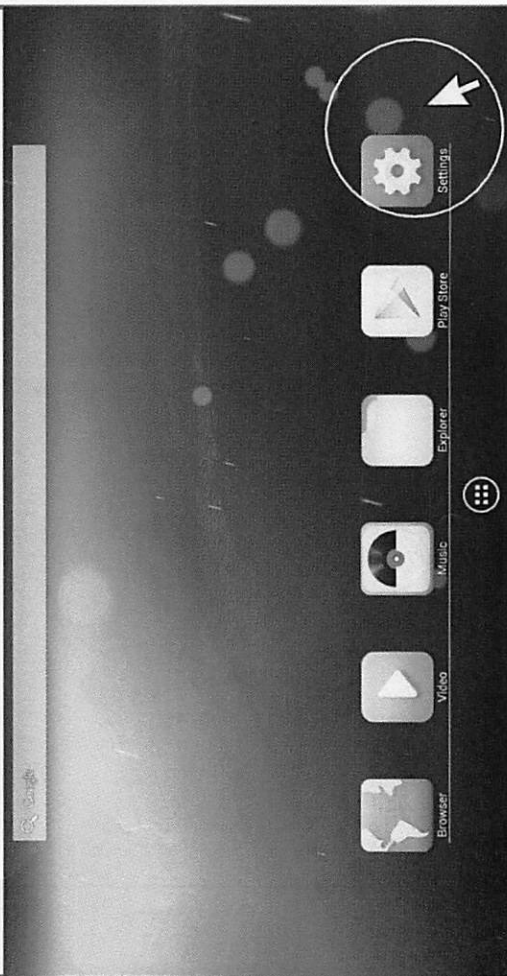


1 Select Settings

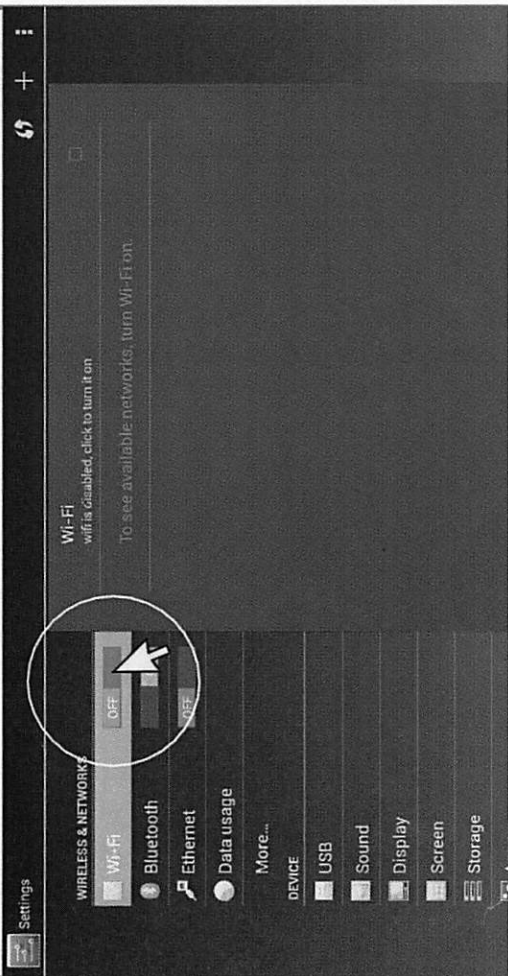

2 Turn on Wi-Fi

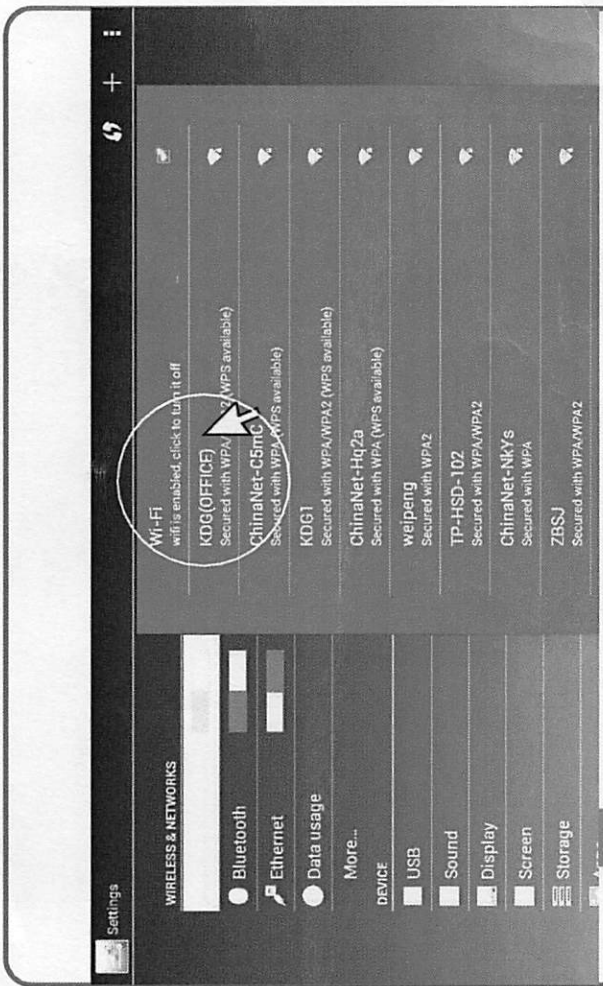

3 Select Access Point.

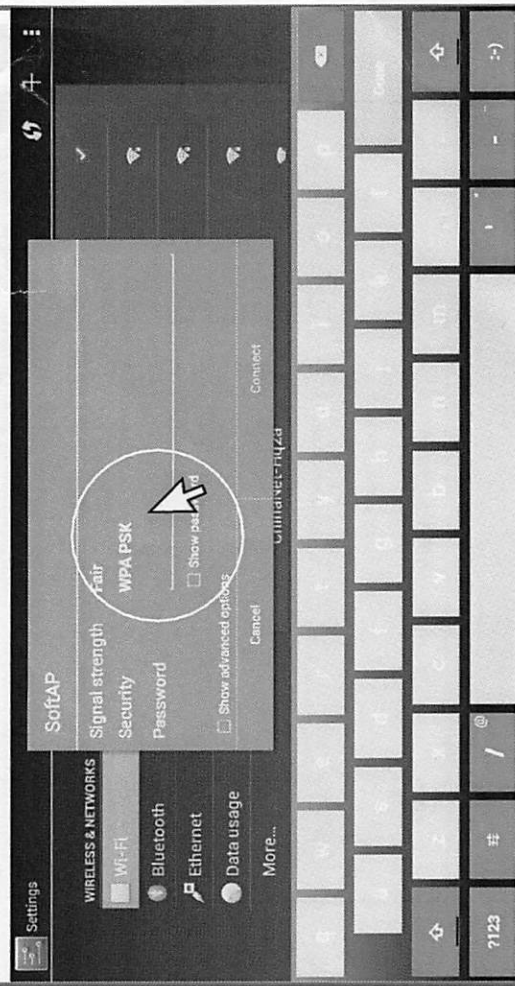


4 Type in the corresponding password, then open the APP.


ADVERTISING CONTENT MANAGEMENT SYSTEM



1 Type in your Login ID and Password to log into your account.
(Login ID and Password are printed on the back of the product.)

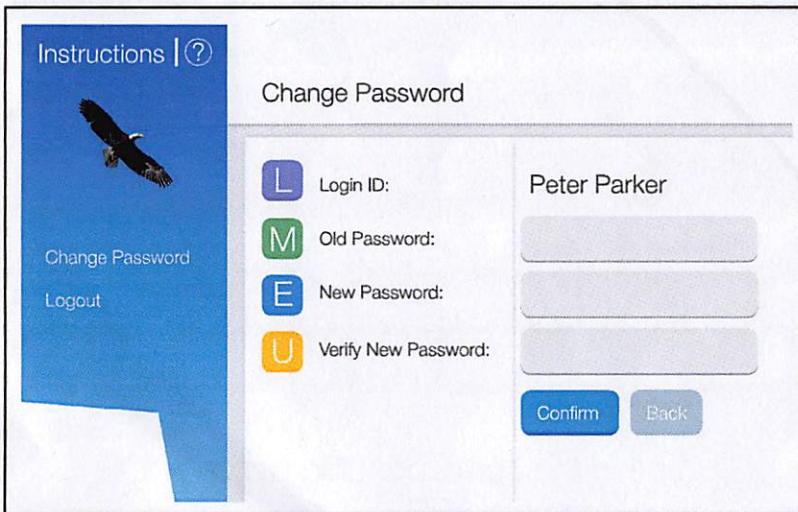

2 Change password at first login.

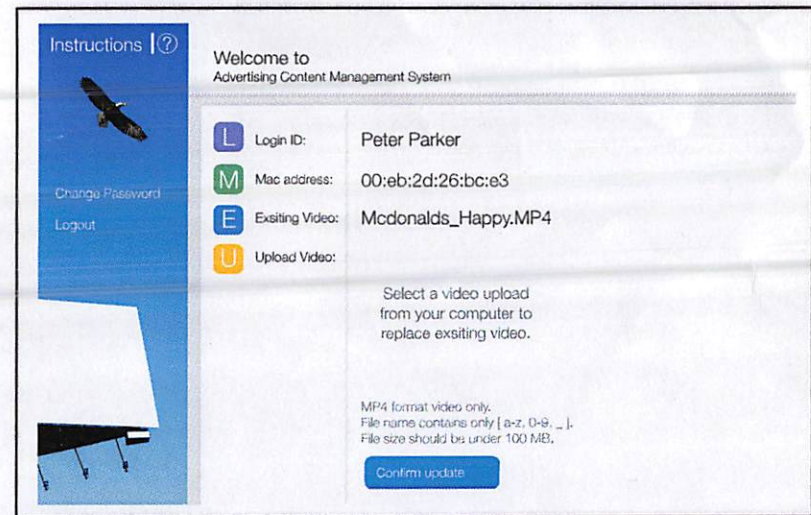

3 Select a video to be uploaded from your computer.
Uploaded video will replace your existing video.


(Mac address indicates which device you are uploading video to.)

Cautions:

MP4 format video only.

File name contains only [a-z, 0-9, _].

File size should be under 100 MB.

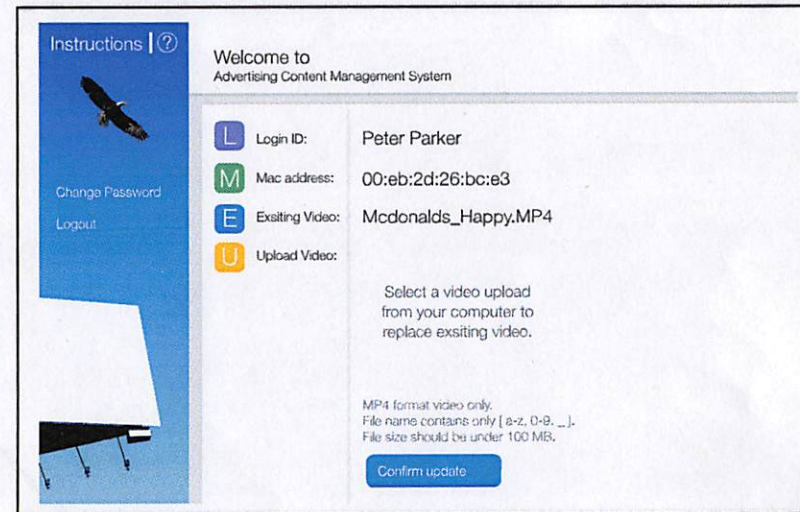

4 Restart your devices after confirming the update.