


This knowledge base article shows you how to program your coin changer to:

- ▲ Accept tokens
- ▲ Program it to either a free vend or a token value.

## TOKEN TEACH

You can then find the **Token teach** menu by the following: **Menu -> Setup -> Coin Config -> Token teach.**

- 1 Turn the coin changer power on.
- 2 Press the **Menu**  button.
- 3 Pressing the button **E** button to access the **Setup** menu.



- 4 Pressing the **E** button again to enter the **Coin config** menu.



- 5 Press the **A** button to enter the **Token teach** menu.

**Note:** Units manufactured before week 3 of 2020 may require a firmware update to enable **Token teach**. If the **Token teach** option is not listed, contact CPI Technical Support for help.



6 Select token: 1 to 3.



7 Select the **Token type**:

- a. **Vend token** (to allow a free vend).
- b. **Value token** (to set the value of the token, ex: USD 0.25 or USD 1.00).
- c. **Reject token** (to reject a token).
- d. **Delete** (to delete an existing **Teach token**).





8 Define the **Token name** to display on the coin changer when accepted.



9 Define the **Token value** of the selected token.



10 Define the **Teach tolerance** (change to **Normal**).



11 Insert between **10** and **32** tokens. **32** is the preferred for number for the best acceptance rates among the tokens.



12 Check the message shown while inserting the tokens for any errors.  
(ex. A coin cannot be taught if it is too close to an existing one).



13 Press the **F** button to **Save** the setting.



14 Make sure the **Success** message displays.



15 Exit the menu to restart the unit for changes to become active.

## **SUPPORT**

For more information, contact CPI Technical Support.

800-628-8363

[support@cranepi.com](mailto:support@cranepi.com)

[CPI Technical Support](#)