


PROGRAM A PRECONFIGURED CASSETTE


1. Press the yellow Menu button.

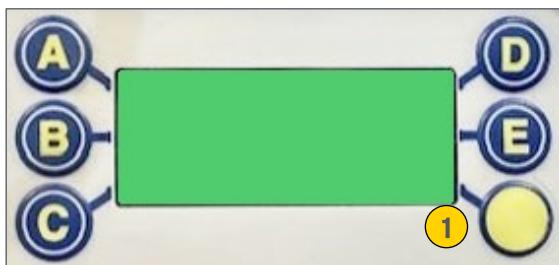

2. Press the **Cassette** button.



3. Enter the **Cassette Model** code on the label with the A-E buttons. See the list of **Key Codes**.

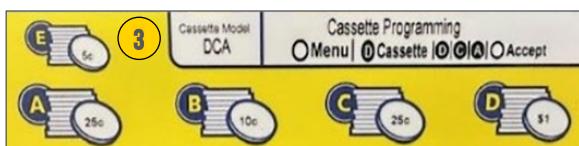

Pre-Programmed USA Cassettes					
Key Code	Tube A	Tube B	Tube C	Tube D	Tube E
AA	10	5	25	25	5
AB	10	5	25	\$1	5
BA	25	5	25	25	25
BB	10	5	10	25	5
CC	Custom cassette 1 - defined in factory or by service tool.				
CD	Custom cassette 2 - define yourself using cassette teach.				
DAC	25	5	\$1	\$1	25
DCA	25	10	25	\$1	5
DCB	25	10	\$1	\$1	5
DCC	25	10	25	25	5
DCD	5	10	10	10	5
DCE	10	10	10	10	5

4. Make sure that the denominations on the display agree with the coin tubes in the cassette.


5. Press the **Accept** button.



6. The operation is complete.

PROGRAM A CUSTOM CASSETTE

1. Press the yellow **Menu** button.

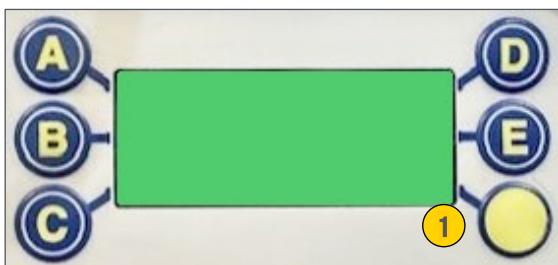

2. Press the **Cassette** button.



3. Put in a coin.




4. Press the A-E button for the tube that agrees with the denomination of the added coin.

- a. If multiple tubes have the denomination, press the button for each tube.




5. Repeat Steps 3 and 4 until you program all tubes.

6. Press the **Next** button.

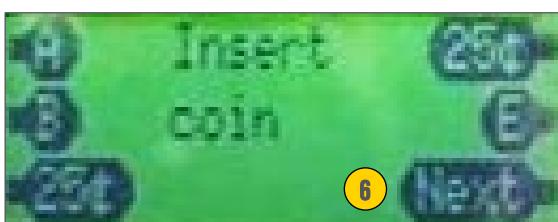

7. Press the **Accept** button.

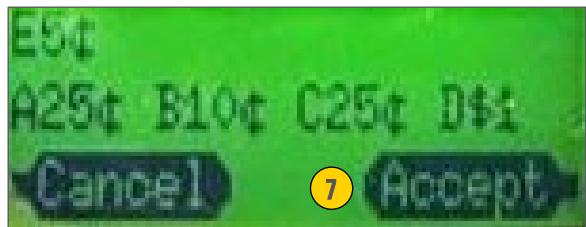

8. The operation is complete.