



REFLECT TOUCH

INSTRUCTION MANUAL





Hello,

I am Lou Lentine, President of Echelon, and I would like to welcome you to the Echelon community. You've made a great decision for yourself and your family. The Echelon Experience is an innovative combination of fitness products integrated with our state-of-the-art Echelon Fit App. This brand-new, fitness lifestyle connects your family, friends, the Echelon community, and Echelon instructors together to help you with your fitness goals. With thousands of live and on-demand classes, no matter your schedule or experience, there is always a new and exciting class for you to join.


We embrace your decision to join our Echelon family in the pursuit of living a healthier lifestyle. We are committed to continue engineering cutting edge, world-class fitness products to improve quality of life through workout experiences that make an active lifestyle more accessible and sustainable.

Thank you again for choosing Echelon and I look forward to seeing you in the next live class!

Best personal regards,

Lou Lentine
CEO, Echelon Fitness Multimedia, LLC

A handwritten signature in white ink, appearing to read 'Lou Lentine', is positioned at the bottom of the page.

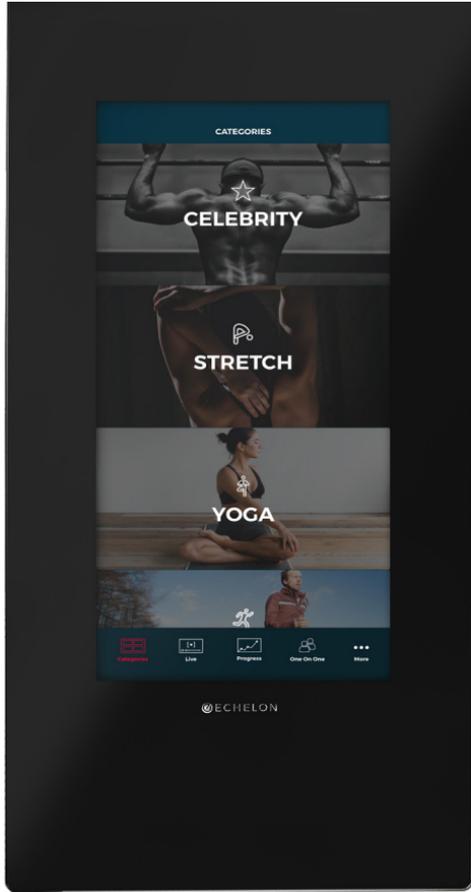

1

2



3



4



5



6



INCLUDES

1. Echelon® Reflect Fitness Mirror
2. Bolt (4)
3. Lag screw (2)
4. Washer (6)
4. Zip toggle anchor (4)
6. Wall mount



ACCOUNT CREATION

If this product was purchased on the **echelonfit.com** website, you should have received an activation email.

Go to **member.echelonfit.com** and follow the on-screen instructions to choose a plan and setup your account. This info will be needed to login to your account on the Echelon Fit™ App.

All account info and plans are managed at member.echelonfit.com and use the same login. After creating your account login on member.echelonfit.com, write down your login info. This will be the same login for the App.

1. CHOOSE "SIGN UP NOW"

5. ENTER PERSONAL ACCOUNT INFO

2. SELECT PURCHASE LOCATION

Select purchase location and follow the on-screen instructions.

6. VIEW YOUR ACCOUNT

Where you can edit your billing info, add family members, manage subscriptions, and (if on your mobile device) download the app and sign in.

3. CHOOSE YOUR PLAN


Monthly / 1 Year / 2 Year

4. SET UP PAYMENT METHOD



The Echelon® Reflect is required to be mounted directly to a wall stud or suitable floor stand.

NOTE: Standard installation height is 69" to the top of the wall mount.

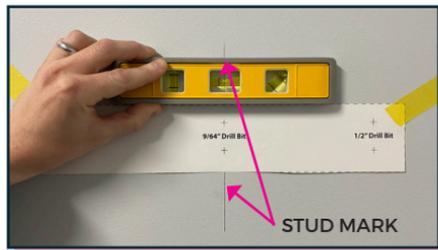


1. Locate stud within the wall you intend to hang your Reflect and mark with a pencil. Level and tape wall mount template with middle two cross marks centered over stud mark.



2. Mark all six holes by pressing the tip of a lag screw through the center of each cross mark.

* Ensure that you press hard enough to leave a hole in the drywall behind the template.

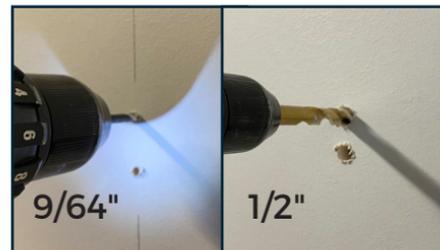


3. Using a 9/64" drill bit, drill two pilot holes for the lag screws. Using a 1/2" drill bit, drill four holes for the zip toggles.




4. Insert zip toggles into 1/2" holes and push the zip toggle plate until it is flush against the wall.

* Ensure eyelet of zip toggle is oriented as shown above.

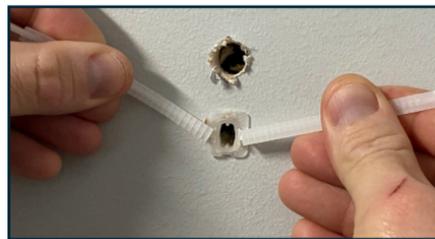

5. Snap off excess plastic from the zip toggle.

**Before starting the next step, make sure wall mount is facing upright as shown by the arrow in next step.

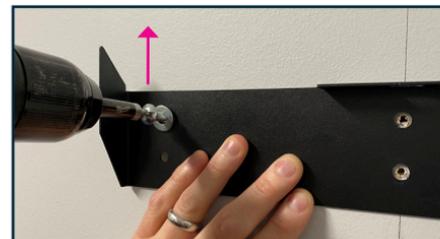

6. Hand screw in bolts into the zip toggles. Use drill to tighten down.

* If installing onto an insulated wall, ensure anchor sits flush inside inner wall before tightening down.



7. Drive in the two lag screws into the pre-drilled pilot holes.





We also have an installation and setup tutorial videos available at:

<https://www.echelonfit.com/help>
or simply scan the QR code.


BEFORE HANGING REFLECT ON THE WALL MOUNT, be sure to write down your product's serial number for registering your product on the Echelon Fit™ App.

The serial number can be located on the label on the back of the Reflect.

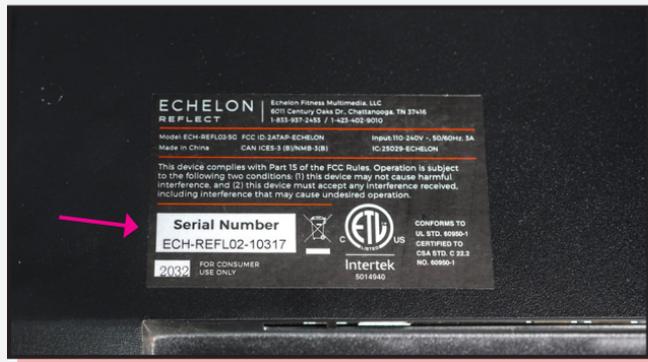

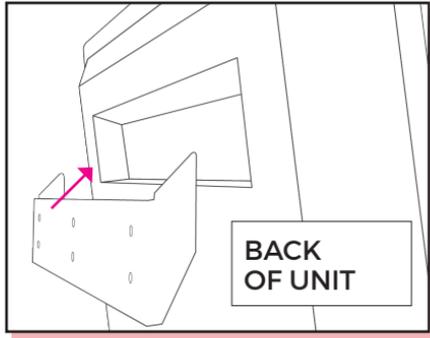


1. Place the Reflect onto the wall mount as shown above.

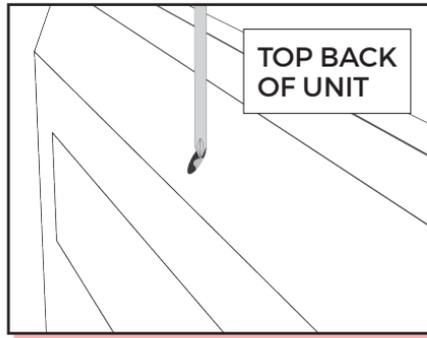

2. Using a Philips screwdriver, drive in the screw located above wall mount to secure.

NOTE: The Reflect Touch may also be attached to a 200 x 200mm VESA mount stand.

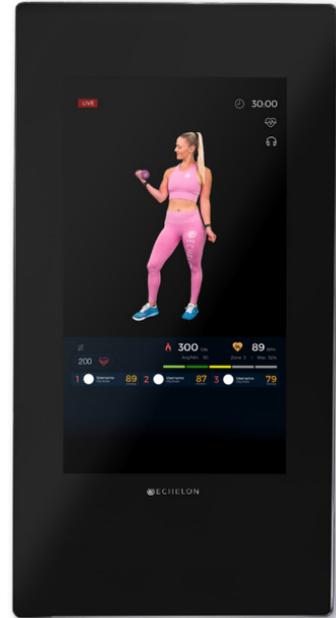

POWER CORD PORT

USB

USB


TF

ETHERNET PORT

POWER SWITCH OFF/ON



TO TURN ON THE REFLECT, FLIP THE SWITCH ON THE BACK OF THE REFLECT TOUCH TO THE RIGHT THEN TOUCH THE ECHELON® LOGO ON THE FRONT. THE LOGO WILL TURN BLUE WHEN PRESSED. (SHOWN BELOW)

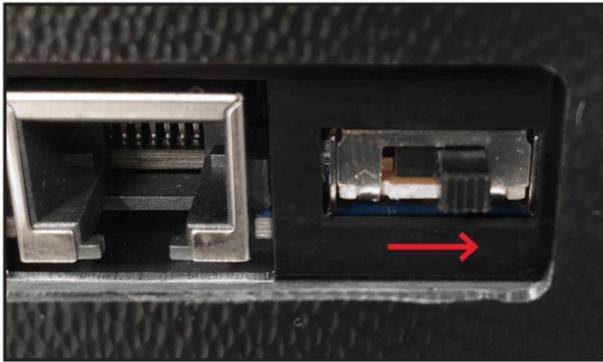

TO TURN OFF THE REFLECT TOUCH, PRESS AND HOLD THE ECHELON® LOGO FOR SIX SECONDS. (SHOWN BELOW)



**FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT****15.21**

YOU ARE CAUTIONED THAT CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PART RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

15.105(B)

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

FCC RF RADIATION EXPOSURE STATEMENT:

1. THIS TRANSMITTER MUST NOT BE CO-LOCATED OR OPERATING IN CONJUNCTION WITH ANY OTHER ANTENNA OR TRANSMITTER.
2. THIS EQUIPMENT COMPLIES WITH RF RADIATION EXPOSURE LIMITS SET FORTH FOR AN UNCONTROLLED ENVIRONMENT. THIS EQUIPMENT SHOULD BE INSTALLED AND OPERATED WITH A MINIMUM DISTANCE OF 20 CM BETWEEN THE RADIATOR AND YOUR BODY.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND
- 2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**INNOVATION, SCIENCE AND ECONOMIC DEVELOPMENT CANADA (ISED)
INNOVATION, SCIENCE ET DÉVELOPPEMENT ÉCONOMIQUE CANADA (ISED)**

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003
CET APPAREIL NUMÉRIQUE DE CLASSE B EST CONFORME À LA NORME NMB-003.

CANADIAN NOTICE

THIS DEVICE COMPLIES WITH ISED LICENSE-EXEMPT RSS STANDARD(S). OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE INTERFERENCE, AND
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION OF THE DEVICE.

AVIS CANADIEN

LE PRÉSENT APPAREIL EST CONFORME AUX CNR D'ISED APPLICABLES AUX APPAREILS RADIO EXEMPTS DE LICENCE. L'EXPLOITATION EST AUTORISÉE AUX DEUX CONDITIONS SUIVANTES :

- (1) L'APPAREIL NE DOIT PAS PRODUIRE DE BROUILLAGE, ET
- (2) L'UTILISATEUR DE L'APPAREIL DOIT ACCEPTER TOUT BROUILLAGE RADIOÉLECTRIQUE SUBI, MÊME SI LE BROUILLAGE EST SUSCEPTIBLE D'EN COMPROMETTRE LE FONCTIONNEMENT.

CAUTION: EXPOSURE TO RADIO FREQUENCY RADIATION.

1. TO COMPLY WITH THE CANADIAN RF EXPOSURE COMPLIANCE REQUIREMENTS, THIS DEVICE AND ITS ANTENNA MUST NOT BE CO-LOCATED OR OPERATING IN CONJUNCTION WITH ANY OTHER ANTENNA OR TRANSMITTER.
2. TO COMPLY WITH RSS 102 RF EXPOSURE COMPLIANCE REQUIREMENTS, A SEPARATION DISTANCE OF AT LEAST 20 CM MUST BE MAINTAINED BETWEEN THE ANTENNA OF THIS DEVICE AND ALL PERSONS.

ATTENTION: EXPOSITION AU RAYONNEMENT RADIOFRÉQUENCE.

1. POUR SE CONFORMER AUX EXIGENCES DE CONFORMITÉ RF CANADIENNE L'EXPOSITION, CET APPAREIL ET SON ANTENNE NE DOIVENT PAS ÊTRE CO-LOCALISÉS OU FONCTIONNANT EN CONJUNCTION AVEC UNE AUTRE ANTENNE OU TRANSMETTEUR.
2. POUR SE CONFORMER AUX EXIGENCES DE CONFORMITÉ CNR 102 RF EXPOSITION, UNE DISTANCE DE SÉPARATION D'AU MOINS 20 CM DOIT ÊTRE MAINTENUE ENTRE L'ANTENNE DE CET APPAREIL ET TOUTES LES PERSONNES





WHILE CLEANING YOUR ECHELON® REFLECT TOUCH, PLEASE USE A SOFT RAG WITH MILD DETERGENT OR WATER TO WIPE DOWN THE MACHINE. DO NOT USE CORROSIVE CHEMICAL LIQUIDS WHICH MAY DAMAGE THE COVER.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using THE ECHELON® REFLECT TOUCH.

DANGER - TO REDUCE THE RISK OF ELECTRIC SHOCK:

1. Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING - TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS.

1. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
2. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
3. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this machine.



4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
6. Do not carry this appliance by supply cord or use cord as a handle.
7. Keep the cord away from heated surfaces.
8. Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
9. Never drop or insert any object into any opening.
10. Do not use outdoors.
11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
12. To disconnect, turn all controls to the off position, then remove plug from outlet.

BEFORE starting any fitness or strength program, consult with your physician or health official. This will ensure that you engage in the proper strength or fitness program for your age and physical condition.

Before using the Echelon® Reflect Touch, answer these questions:

- Have you been sick recently?
- Have you had prolonged dizziness recently?
- Have you been out of breath for no reason recently?
- Have you had chest pain recently?



- Do you currently have any injuries preventing you from exercise?
- Are you pregnant?
- Do you have any conditions or reasons you should NOT exercise?
- Are you over 35 years old and physically inactive?
- Have you been told by a doctor that you should NOT exercise?

IF YOU ANSWER “YES” TO ANY OF THE ABOVE QUESTIONS, YOU SHOULD SEEK FURTHER ADVICE FROM YOUR DOCTOR PRIOR TO USING THE ECHELON® REFLECT TOUCH.

Read the user manual fully and follow all instructions. This ensures your safety.

- ALWAYS use the Echelon® Reflect Touch in a well lit and ventilated area.
- ALWAYS check the mirror before use.
- NEVER use the mirror if it is not properly/completely assembled or is damaged in any way.
- NEVER use Echelon® Reflect Touch when sick or fatigued.
- ALWAYS wear proper attire and footwear that fully covers your feet. Long hair should be tied back or tucked away. Ensure that shoelaces are tucked into your shoes.
- ALWAYS warm up/stretch before starting exercise.
- NEVER overexert yourself or work to exhaustion. If you feel faint, dizzy, short of breath, or if you have chest or other pains, STOP IMMEDIATELY! Consult your physician before using the Echelon® Reflect Touch again.
- ALWAYS ensure that you have a water bottle filled with at least 12 oz. of water and a towel close by to absorb sweat from your body and the handlebars.
- NEVER use accessory attachments that have not been recommended by the manufacturer. Using such attachments may cause injury or damage to the mirror and will affect the warranty of the mirror.
- ALWAYS ensure that the Echelon® Reflect Touch is wiped down after each use to keep it sanitary.



- Cleaning and user maintenance shall not be made by children without supervision.

If any problems arise affecting the performance of the Echelon® Reflect Touch, contact the manufacturer immediately. Always ensure that parts which undergo wear are checked regularly.

THIS SAFETY INFORMATION AND USER MANUAL DOES NOT REPLACE THE NEED TO BE ALERT AND TO USE COMMON SENSE WHEN USING THE ECHELON® REFLECT TOUCH!



Read Instructions
Before Operating

MADE IN
CHINA



PATENT
PENDING

Rev: **021221**

ECHELONFIT.COM

For questions, assistance, or replacement parts, do not return to your retailer. Contact Echelon® customer service below. For refunds on items not purchased from Echelon® directly, please contact your retailer.

ECHELON® FIT 1-YEAR LIMITED WARRANTY

Echelon® warrants this product to be free of manufacturing defects. Should any such defect develop or become evident within one year from the date of purchase, Echelon® will replace the entire product or, at its option, repair or replace the defective part(s) without charge.

Contact Echelon® customer service at 833-937-2453 or at cs@echelonfit.com to determine whether it is necessary to return the unit. To return, securely pack the entire unit. Be sure carton clearly identifies sender by name and address. Attach a letter or card describing defect and original sales receipt.

Mail prepaid to Echelon Fitness Multimedia, LLC 6011 Century Oaks Dr. Chattanooga, TN 37416.

This warranty is void if damage or malfunction is due to abuse or failure to operate product in accordance with instructions and on recommended electrical current. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If you have any questions, or would like to learn more about Echelon®, please contact us at 833-937-2453 or at cs@echelonfit.com.

Register your product online at echelonfit.com/pages/register-warranty/

Customer Service / Le service a la clientele / Servicio al Consumidor

☎ 833-937-2453 (+1.423.402.9010) ✉ cs@echelonfit.com

Model:
ECH-REFLO2

DO NOT DISPOSE OF BATTERIES IN FIRE. ALWAYS DISPOSE OF BATTERIES PER LOCAL & FEDERAL GUIDELINES.

© 2021 ECHELON FITNESS MULTIMEDIA, LLC. All specifications are subject to change without notice. All rights reserved.
Echelon Fitness Multimedia, LLC 6011 Century Oaks Dr. Chattanooga, TN 37416