



Getac



ZX80 Self-Maintenance Manual R01



Jane

Content

- Dummy Battery Cover (P/N 441GA7500004)
- SIM & MICRO SD Tray (P/N 344GA7500029)
- Rubber corner (P/N 344GA7500022)
- IO Door (P/N 340GA7500005)
- Stylus (P/N 340GA8900001)
- Film (P/N 319008017001)
- AC Adapter (P/N 442GB2000002)
- Power Cord(UK) (P/N 332800003019)


Dummy Battery Cover (P/N 441GA7500004)

1. Slide the security lock inwards (1) and then toward the unlocked position (2).
Detach the dummy battery cover from the device.
2. Remove the dummy battery cover from the battery bay.

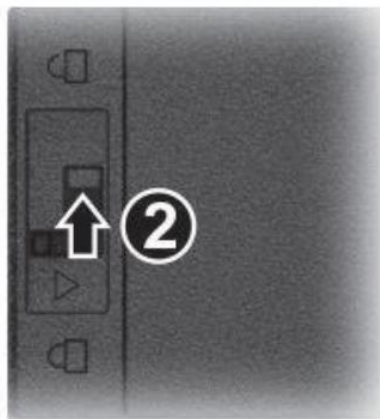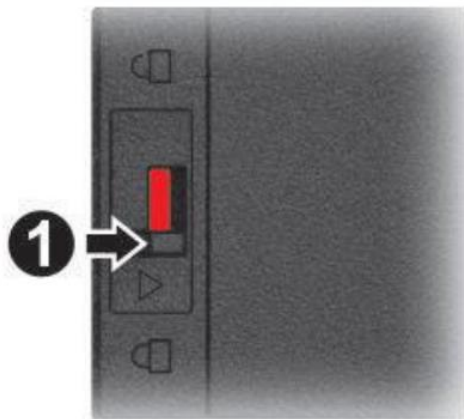


SIM & MICRO SD Tray (P/N 344GA7500029)

1. Slide the security lock inwards (1) and then toward the unlocked position (2).
Detach the dummy battery cover from the device.
2. Remove the dummy battery cover from the battery bay.

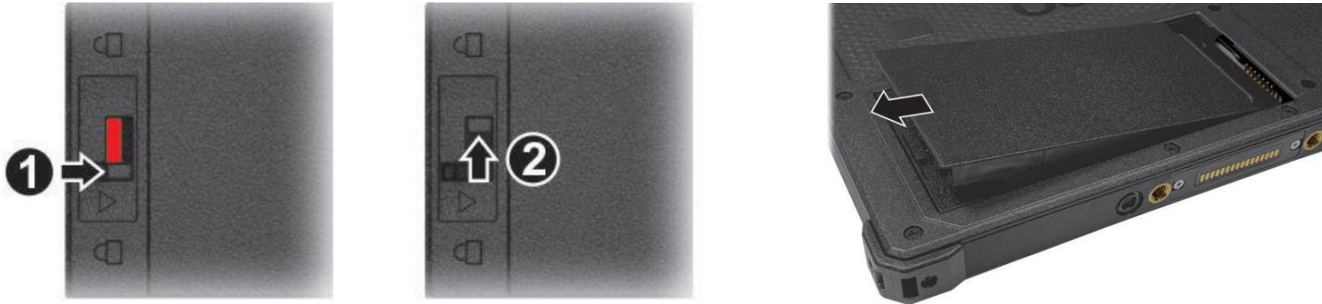

3. Remove the SIM & MICRO SD tray from the device.

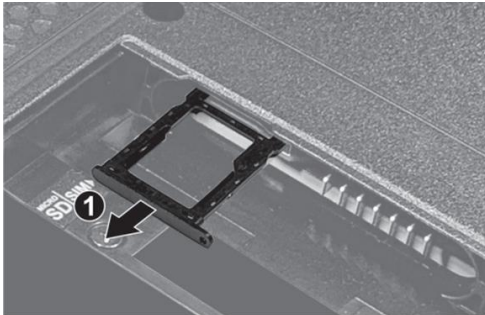

Rubber corner (P/N 344GA7500022)

Remove two screws (370102010421) lock the rubber corner. Then remove the rubber corner.



IO Door (P/N 340GA7500005)

1. Slide the security lock toward the unlocked position.
2. Remove one screw (370102010421) lock the IO door. Then remove the IO door.

