



# RX10 Parts Replacement Instructions

*This document is intended for service personnel. It provides information not found in the user manual. For information such as replacing the battery pack, see the user manual of the product.*

|                                                                               |   |
|-------------------------------------------------------------------------------|---|
| DC door (P/N 344122100010) .....                                              | 2 |
| I/O door (P/N 344871900019 / 344871900020 / 344871900021 / 344871900022)..... | 2 |
| SSD door (P/N 343871900011) .....                                             | 3 |

## DC door (P/N 344122100010)

### To remove:

1. Remove the screw that secures the door to RX10.



2. Detach the door from RX10.


### To install:

Reverse the removal procedure to install the new part.

## I/O door (P/N 344871900019 / 344871900020 / 344871900021 / 344871900022)

### To remove:

1. Open the I/O door.
2. Remove the four screws that secure the door to RX10.

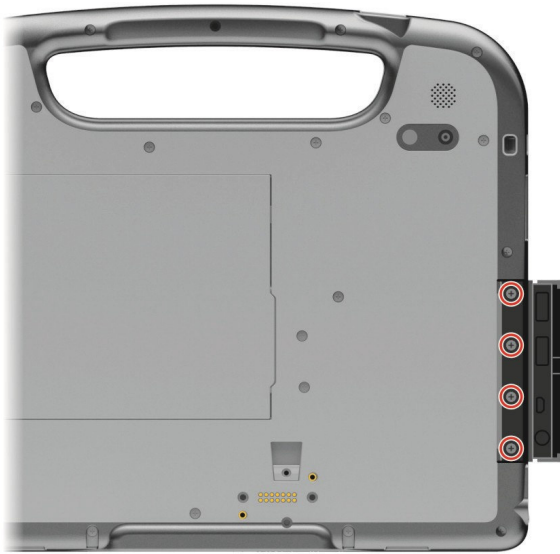

3. Detach the door from RX10.


### To install:

Reverse the removal procedure to install the new part.

**SSD door (P/N 343871900011 / 343871900010)**  
**Screw (P/N 371102010334 )**

**To remove:**

- |    |                                                      |
|----|------------------------------------------------------|
| 1. | Open the SSD door.                                   |
| 2. | Remove the four screws that secure the door to RX10. |

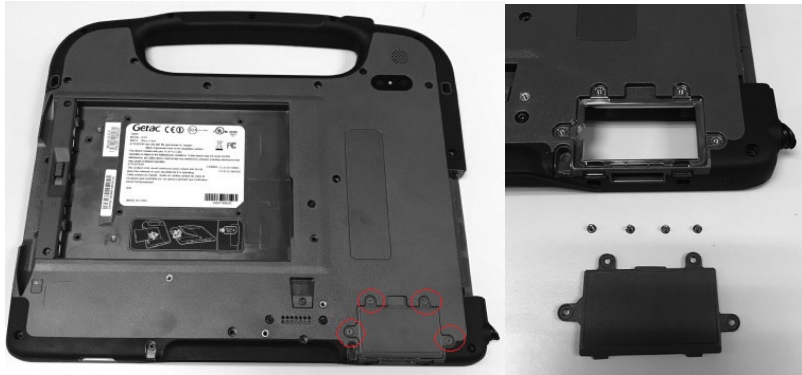

**To install:**

Reverse the removal procedure to install the new part.