



Getac
Rugged Mobile Computing Solutions

A140 Manual

Joy 2017/17/10

Getac
Rugged Mobile Computing Solutions

Content

1. Battery Pack (441140100007)
2. Handle (P/N 340140100008)
3. Rubber Hand Strap (345140100005)
4. DDR/SSD/WWAN/WLAN/Memory1 Door (344140100028)
5. Smartcard Door (340140100017)
6. USB-Audio Door (340140100020)
7. USB-SD Card Door (340140100021)
8. Fan Cover (344140100027)
9. AC Door (344140100037)

Battery Pack (441140100007)

1. Remove all Battery Packs from the Tablet PC (Battery1 and Battery2).

a) Slide the battery latch towards the right (1)

b) Then, upwards (2) to release the battery pack.



2. Remove the battery pack from its compartment.



Handle (P/N 340140100008)

Remove the six screws to disassemble the handle .




Rubber Hand Strap (345140100005)

Remove the four screws to disassemble the rubber hand strap.




DDR/SSD/WWAN/WLAN/Memory1 Door (344140100028)

1. Remove the nine screws to disassemble the DDR/SSD/WWAN/WLAN/Memory1 Door.

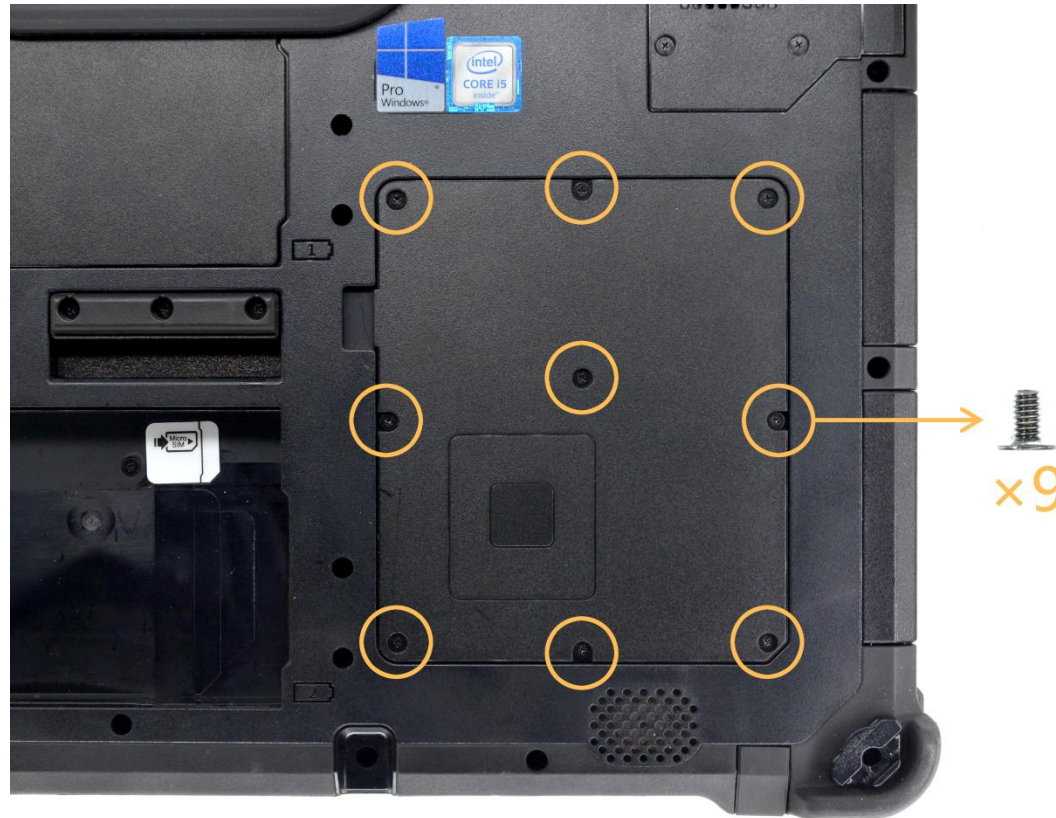


Smartcard Door (340140100017)

Remove the three screws to disassemble the Smartcard door.

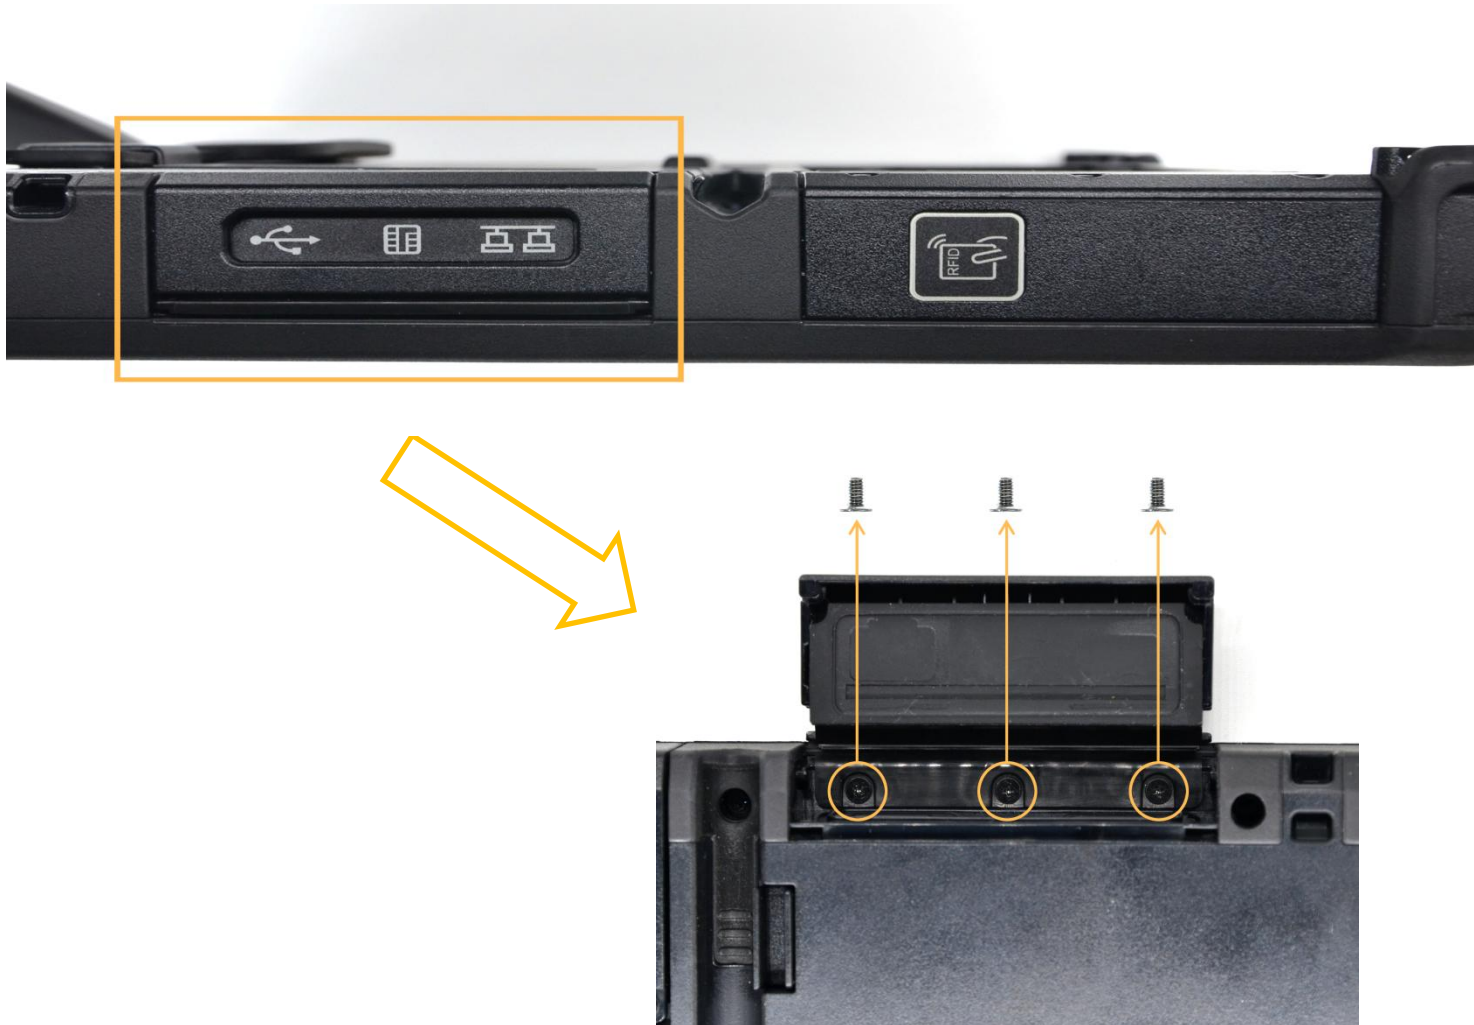


USB-Audio Door (340140100020)

Remove the three screws to disassemble the USB-Audio door.

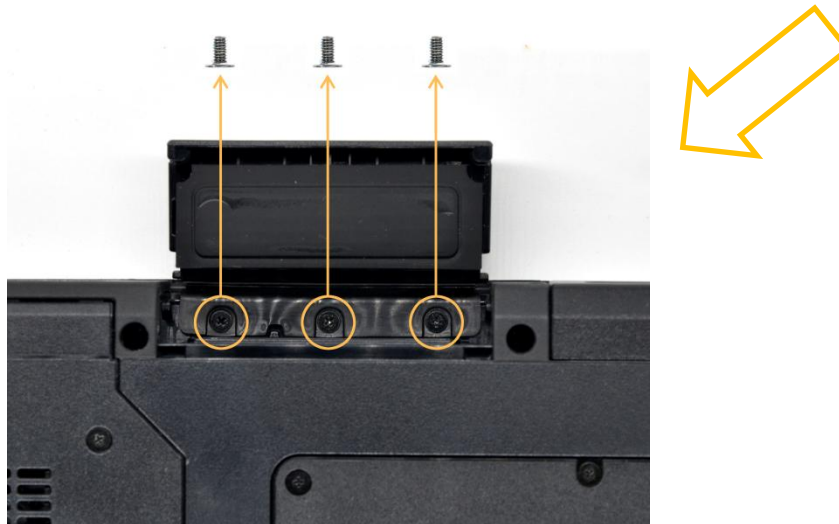


USB-SD Card Door (340140100021)

Remove the three screws to disassemble the USB-Audio door.

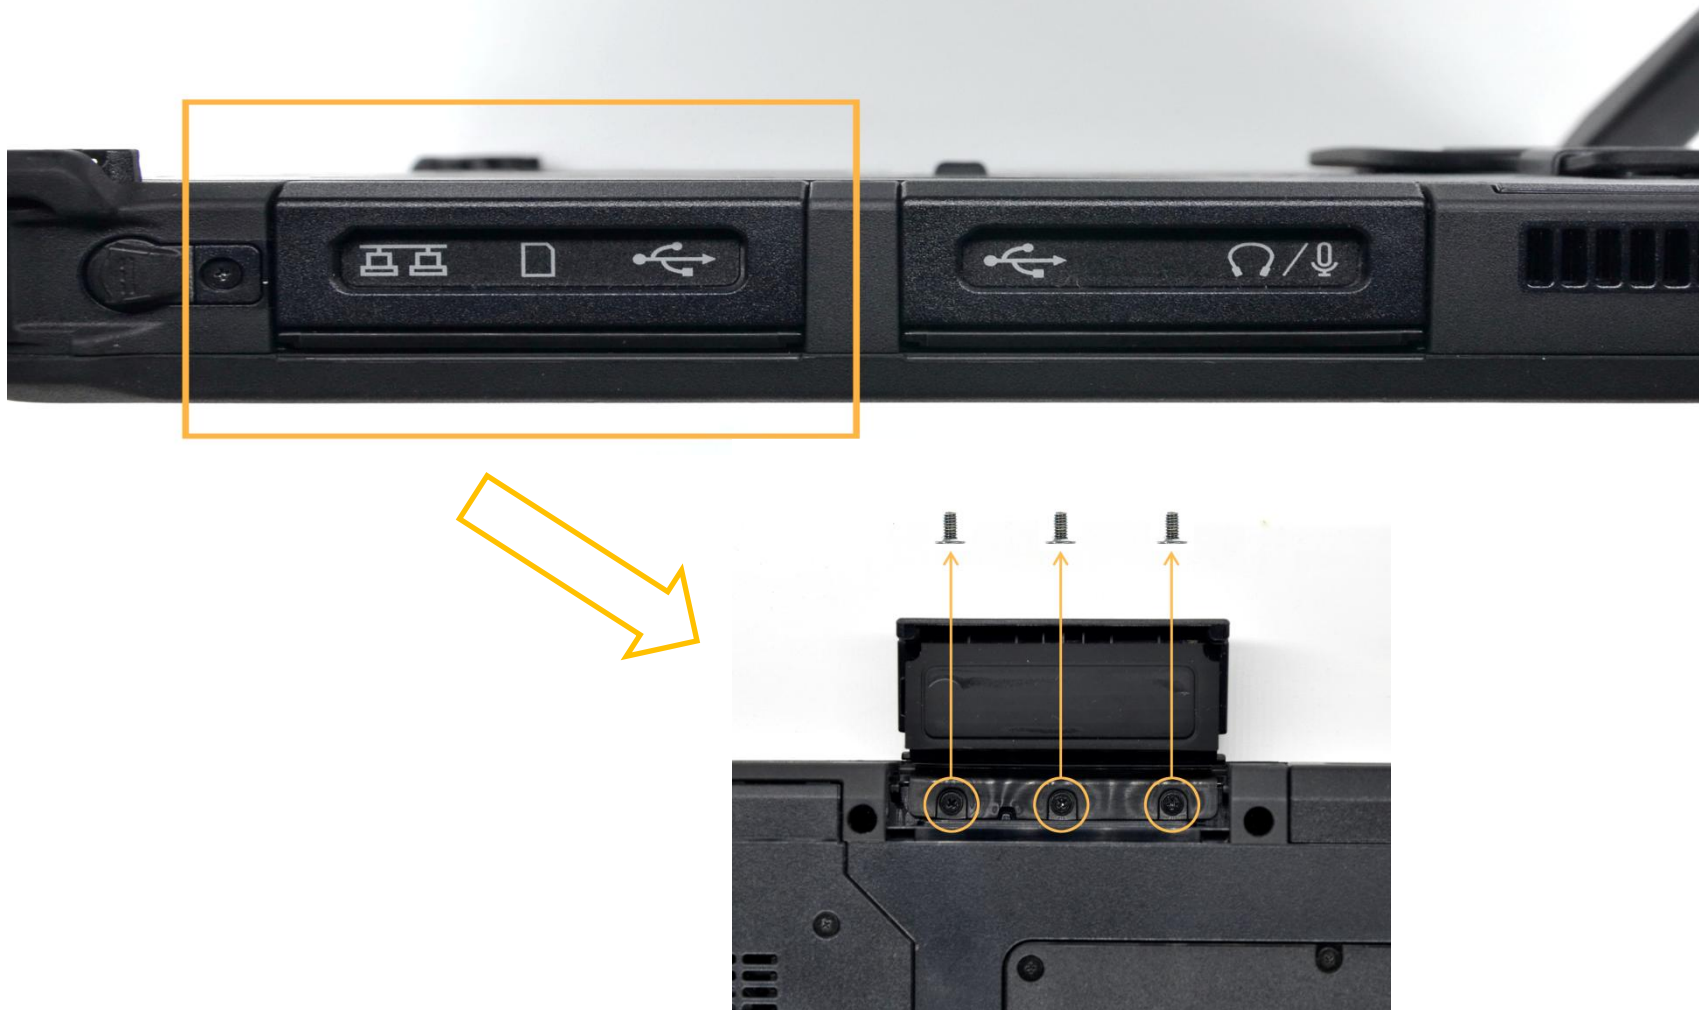

Fan Cover (344140100027)

Remove the four screws to disassemble the Fan cover.

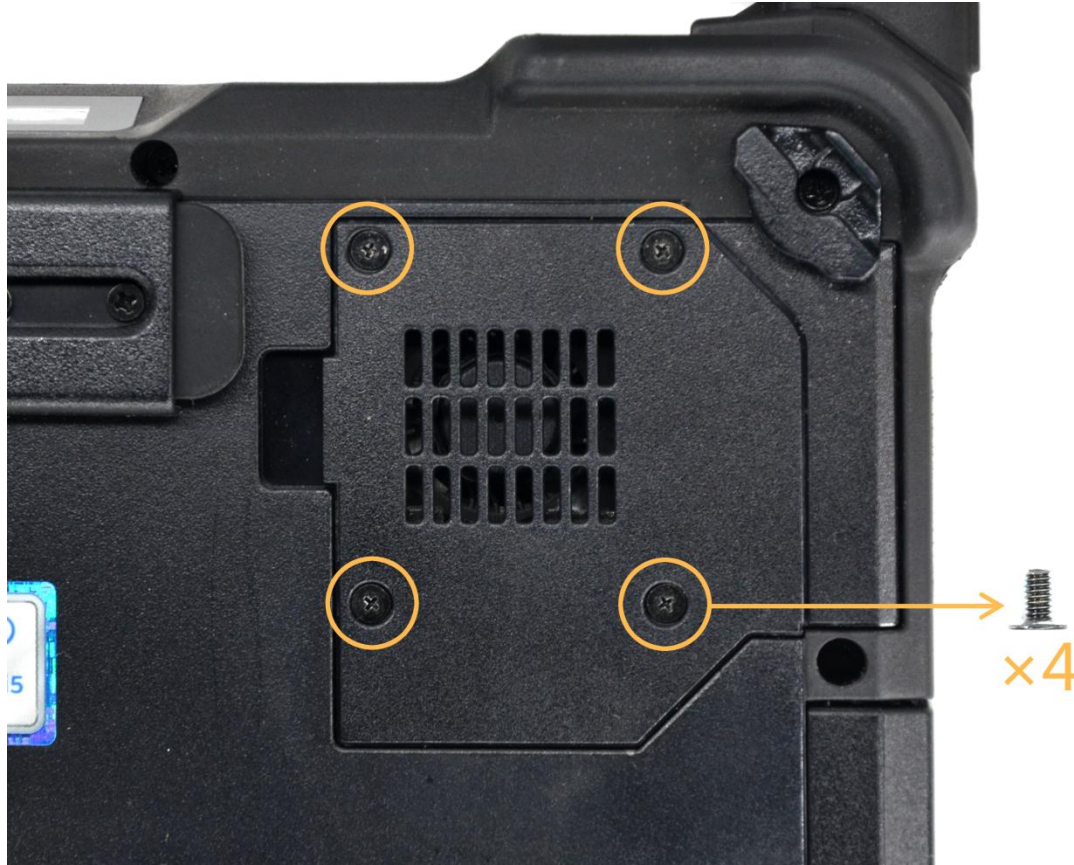

AC Door (344140100037)

Remove one screw to disassemble the AC door.





Thank You

Getac

Rugged Mobile Computing Solutions