



Getac

Getac K120

Self-Maintenance Manual

Content

SSD Canister (P/N 581114200006)
Smart Card Door (P/N 340142000012)
Option Door(P/N 340142000010)
DC Door (P/N 340142000009)
Audio Door (P/N 340142000068)
KB Dock LAN Door (P/N 340142000025)
KB Dock USB X2 Door (P/N 340142000026)
KB Dock ONLY RS232 Door (P/N 340142000027)
KB Dock HDMI&DP Door (P/N 340144600007)
KB Dock DC Jack Holder and Door (P/N 581114010011&344857100028)
KB Dock Keyboard (P/N 531014200S01)
KB Dock Front Corner (P/N 344142000058 & 344142000059)
KB Dock Rear Corner (P/N 344142000060 & 344142000061)
KB Dock Handle (P/N 451142000K03)

K120 Tablet

Smart Card Door (P/N 340142000012)

1. Unlock the two screws, and then open the door, and remove the smart card door




Audio Door (P/N 340142000068)

1. Unlock the two screws, and then open the door, and remove the audio door



Option Door(P/N 340142000010)

1. Unlock the two screws, and then open the door, and remove the audio door

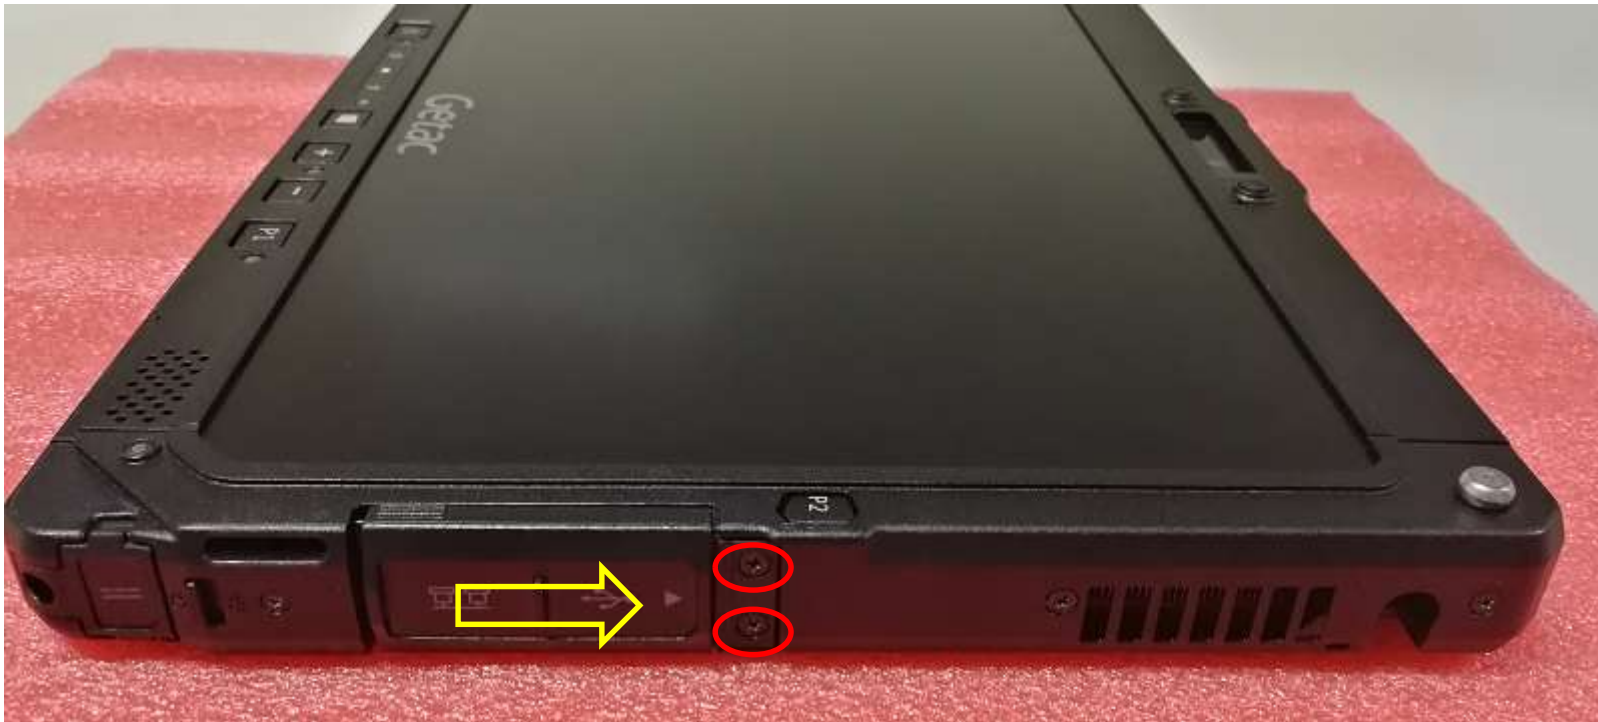

DC Door(P/N 340142000010)

1. Unlock the one screw, and then open the door, and remove the option door



SSD Canister (P/N 581114200006)

1. Remove the two screws (371102010432) and one screw (371102610025) lock the SSD cover.



SSD Canister (P/N 581114200006)

2. Remove the SSD cover and lever..



SSD Canister (P/N 581114200006)


3. Remove the SSD and connect board.



K120 Keyboard Dock


KB Dock LAN Door (P/N 340142000025)

1. Unlock the screw, and then open the door, and remove the KB Dock LAN Door

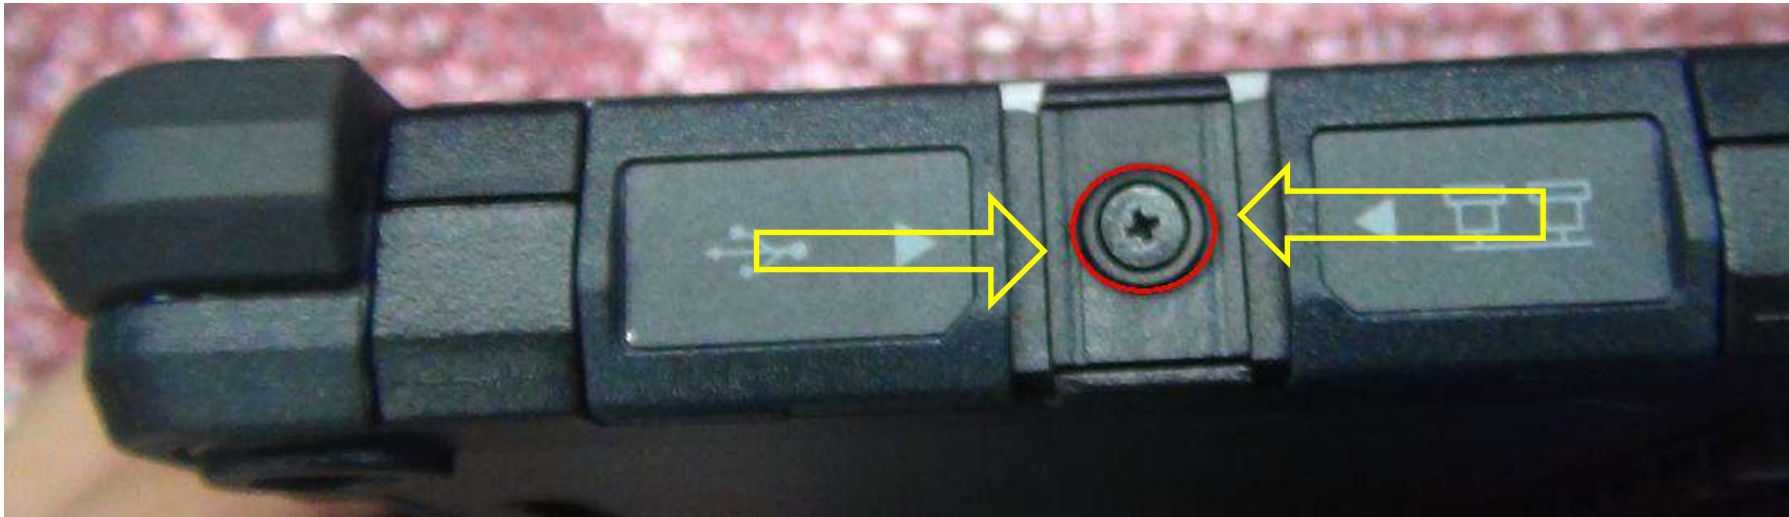


KB Dock USB X2 Door (P/N 340142000026)

1. Unlock the screw, and then open the door, and remove the KB Dock USB X2 Door

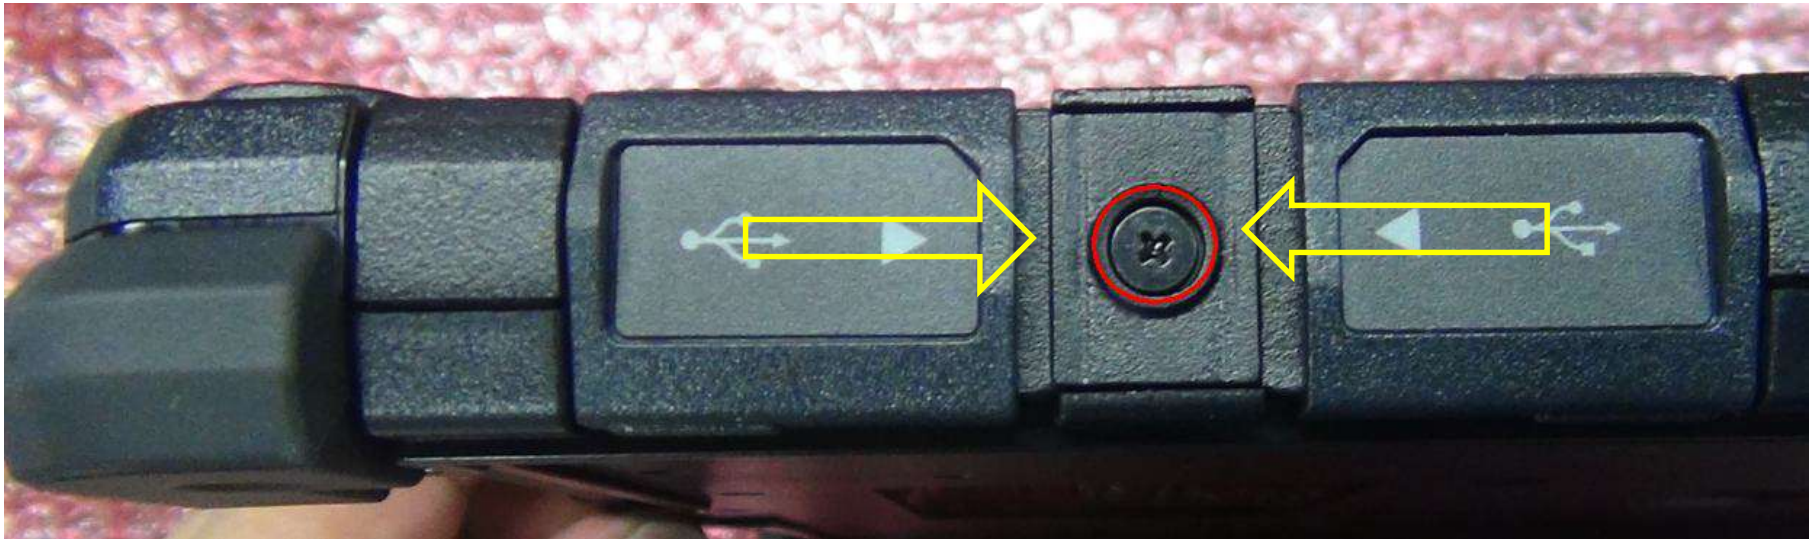


KB Dock ONLY RS232 Door (P/N 340142000027)

1. Unlock the screw, and then open the door, and remove the KB Dock ONLY RS232 Door

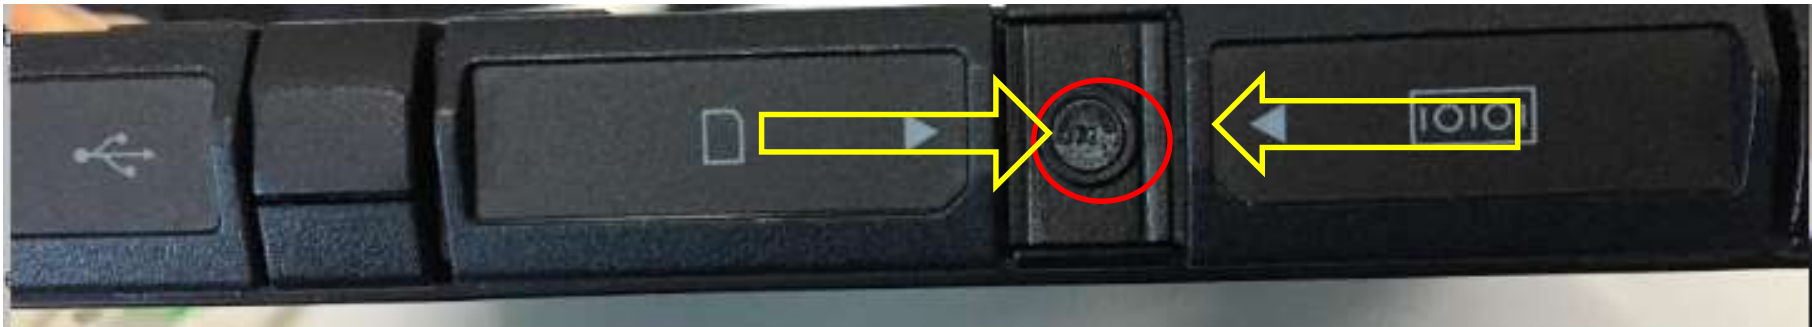

KB Dock HDMI&DP Door (P/N 340144600007)

1. Unlock the screw, and then open the door, and remove the KB Dock HDMI&DP Door

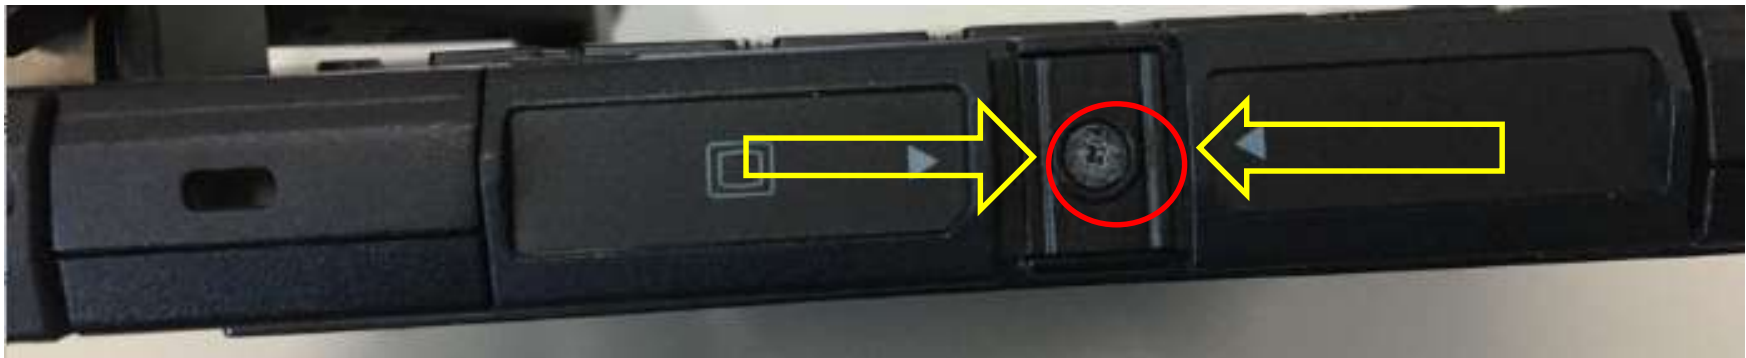

KB Dock DC Jack Holder and Door (P/N 344857100028 & 581114010011)

1. Unlock the screw, and then open the door, and remove the KB Dock DC Jack Holder and Door



KB Dock Keyboard (P/N 531014200S01)

1. Remove two screws (371102600001) lock the keyboard cover.



KB Dock Keyboard (P/N 531014200S01)

2. Remove seven screws (371102010432) lock the keyboard cover. Then remove the keyboard cover.




KB Dock Keyboard (P/N 531014200S01)

3. Remove two screws (371102010066) lock the keyboard. Then slightly lift up the keyboard.




KB Dock Keyboard (P/N 531014200S01)

4. Remove four screws (371102010432) lock the keyboard FPC cover, then remove the keyboard FPC cover.

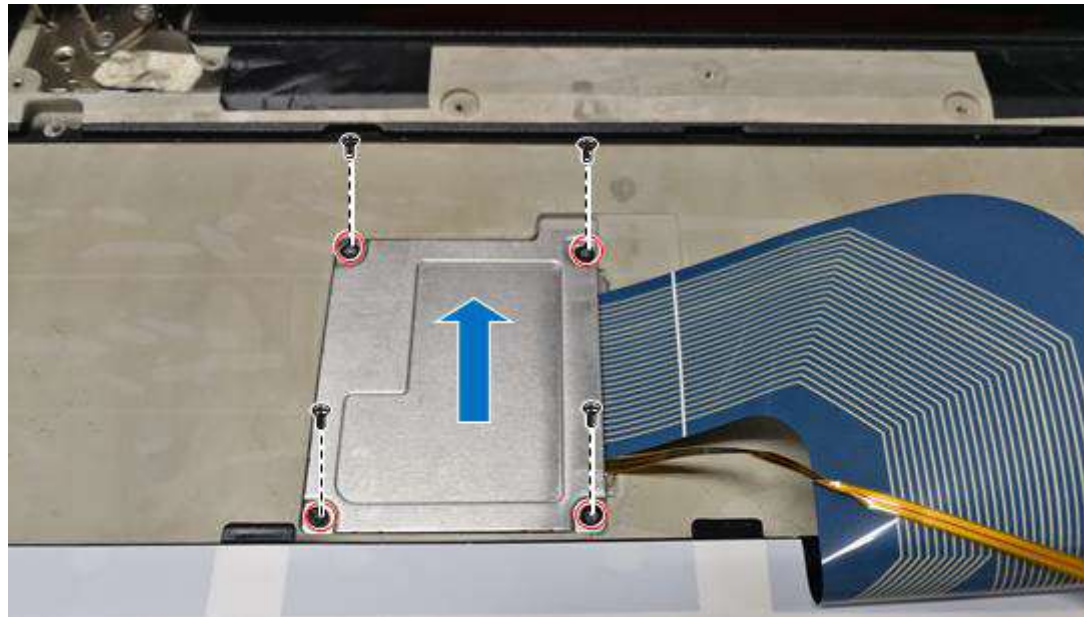

KB Dock Keyboard (P/N 531014200S01)

5. Disconnect the keyboard FPC, then remove the keyboard..

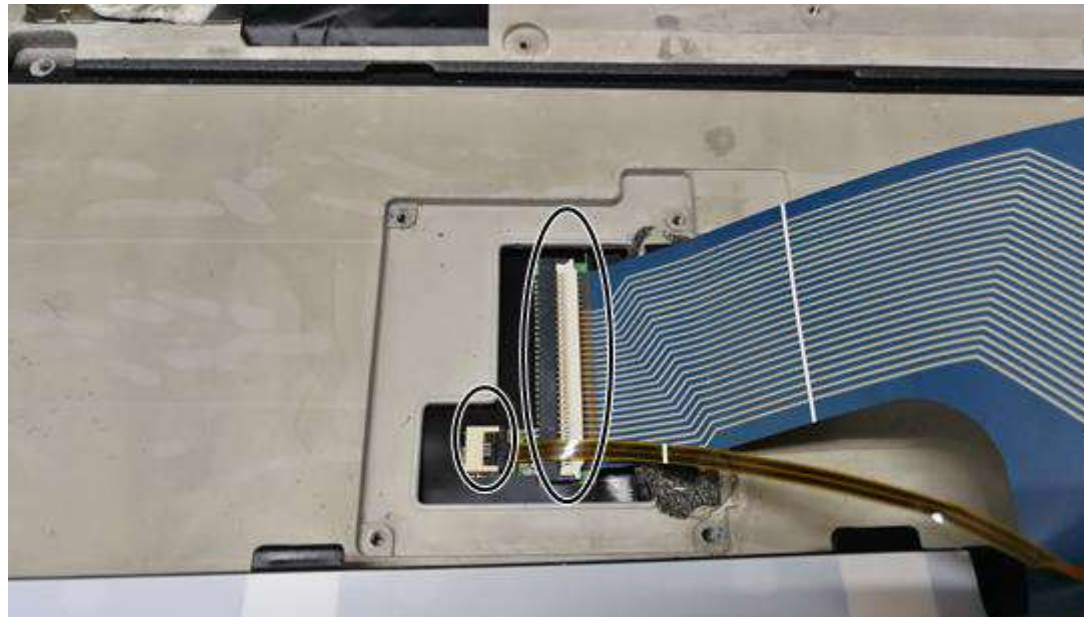


KB Dock Keyboard (P/N 531014200S01)

1. Remove two screws (371102600001) lock the keyboard cover.




KB Dock Front Corner (P/N 344142000058 & 344142000059)

1. Remove three screws (371102600001) lock the left foot, then remove the left foot.

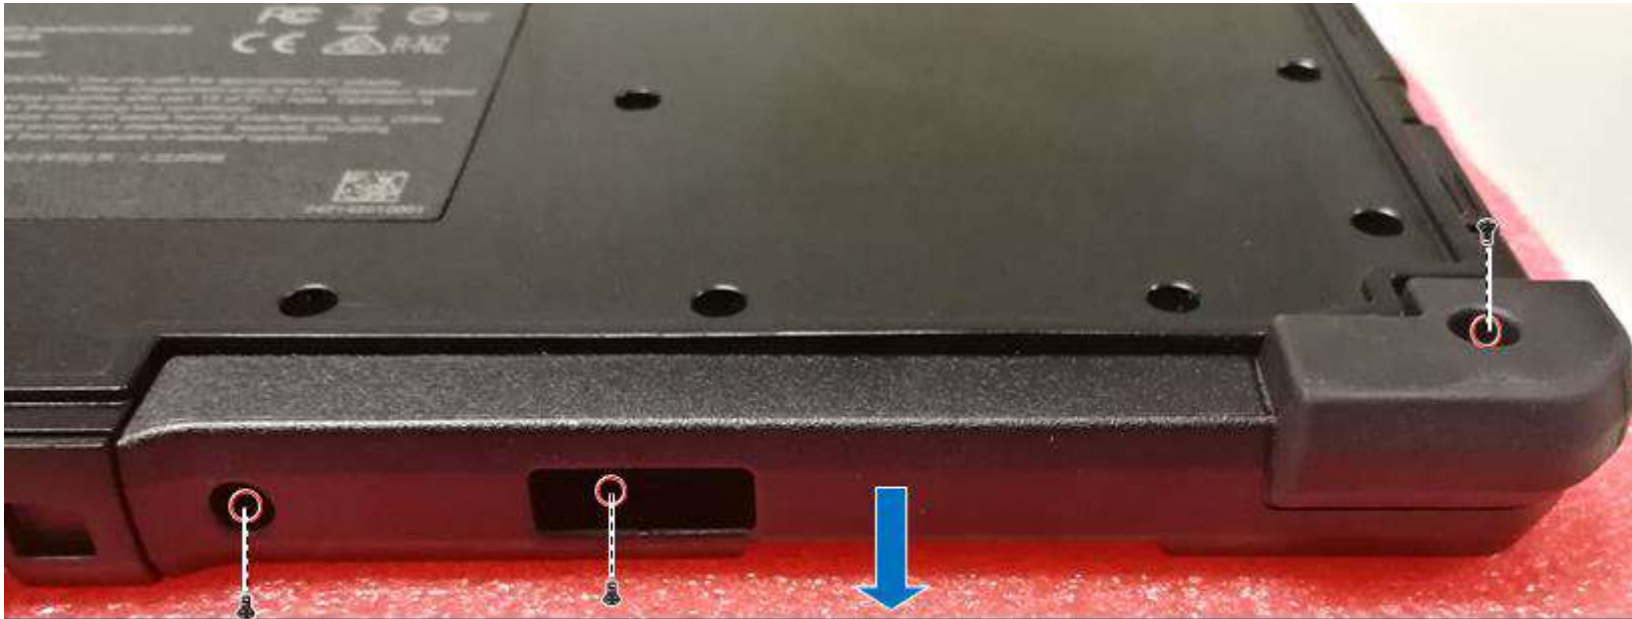

KB Dock Front Corner (P/N 344142000058 & 344142000059)

2. Remove three screws (371102600001) lock the right foot, then remove the right foot.

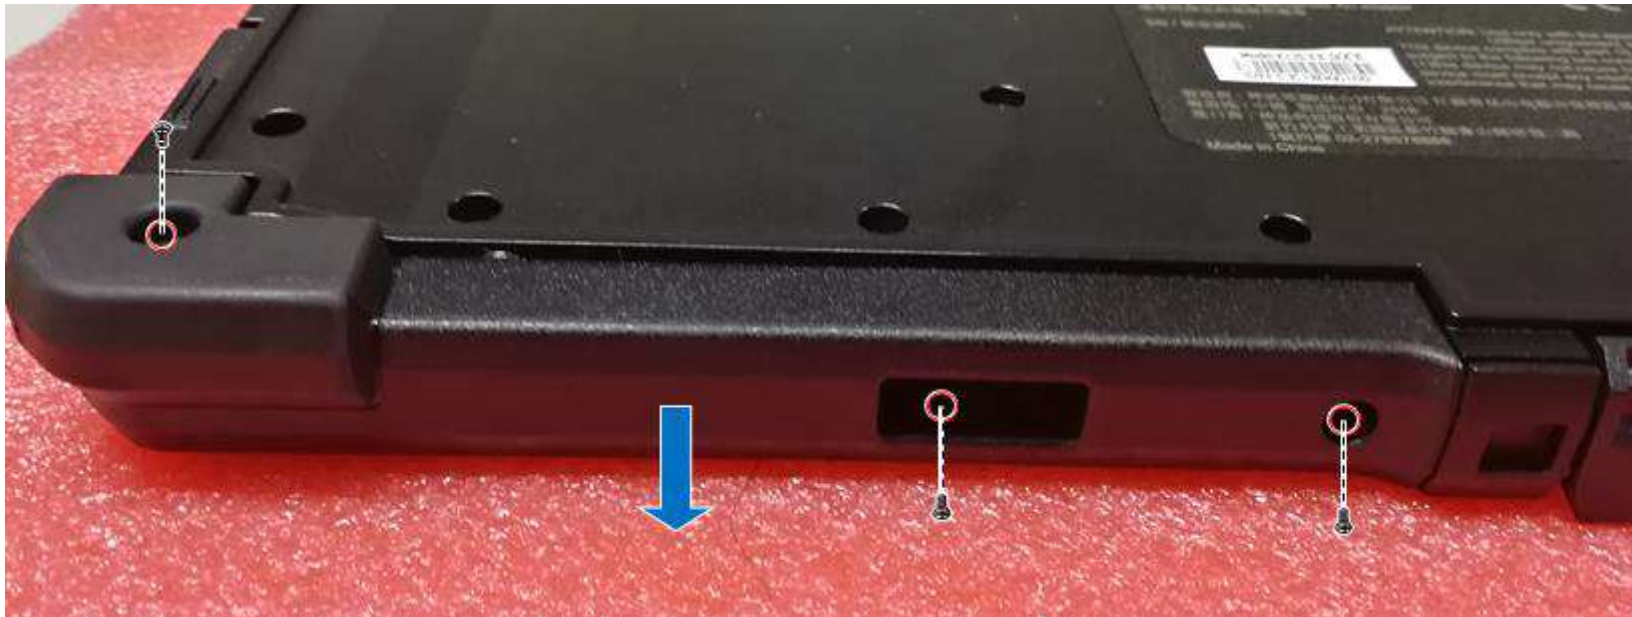

KB Dock Rear Corner (P/N 344142000060 & 344142000061)

1. Remove the eight screws (371102600001) lock the corners.



KB Dock Rear Corner (P/N 344142000060 & 344142000061)

2. Remove the two screws (342830700019) and two screws (371103010070) lock the corners, then remove the corners.



KB Dock Handle (P/N 451142000K03)

1. Remove the eight screws (371102600001) lock the corners.



KB Dock Handle (P/N 451142000K03)


2. Remove the two screws (342830700019) and two screws (371103010070) lock the corners, then remove the corners.



KB Dock Handle (P/N 451142000K03)

3. Remove the handle.



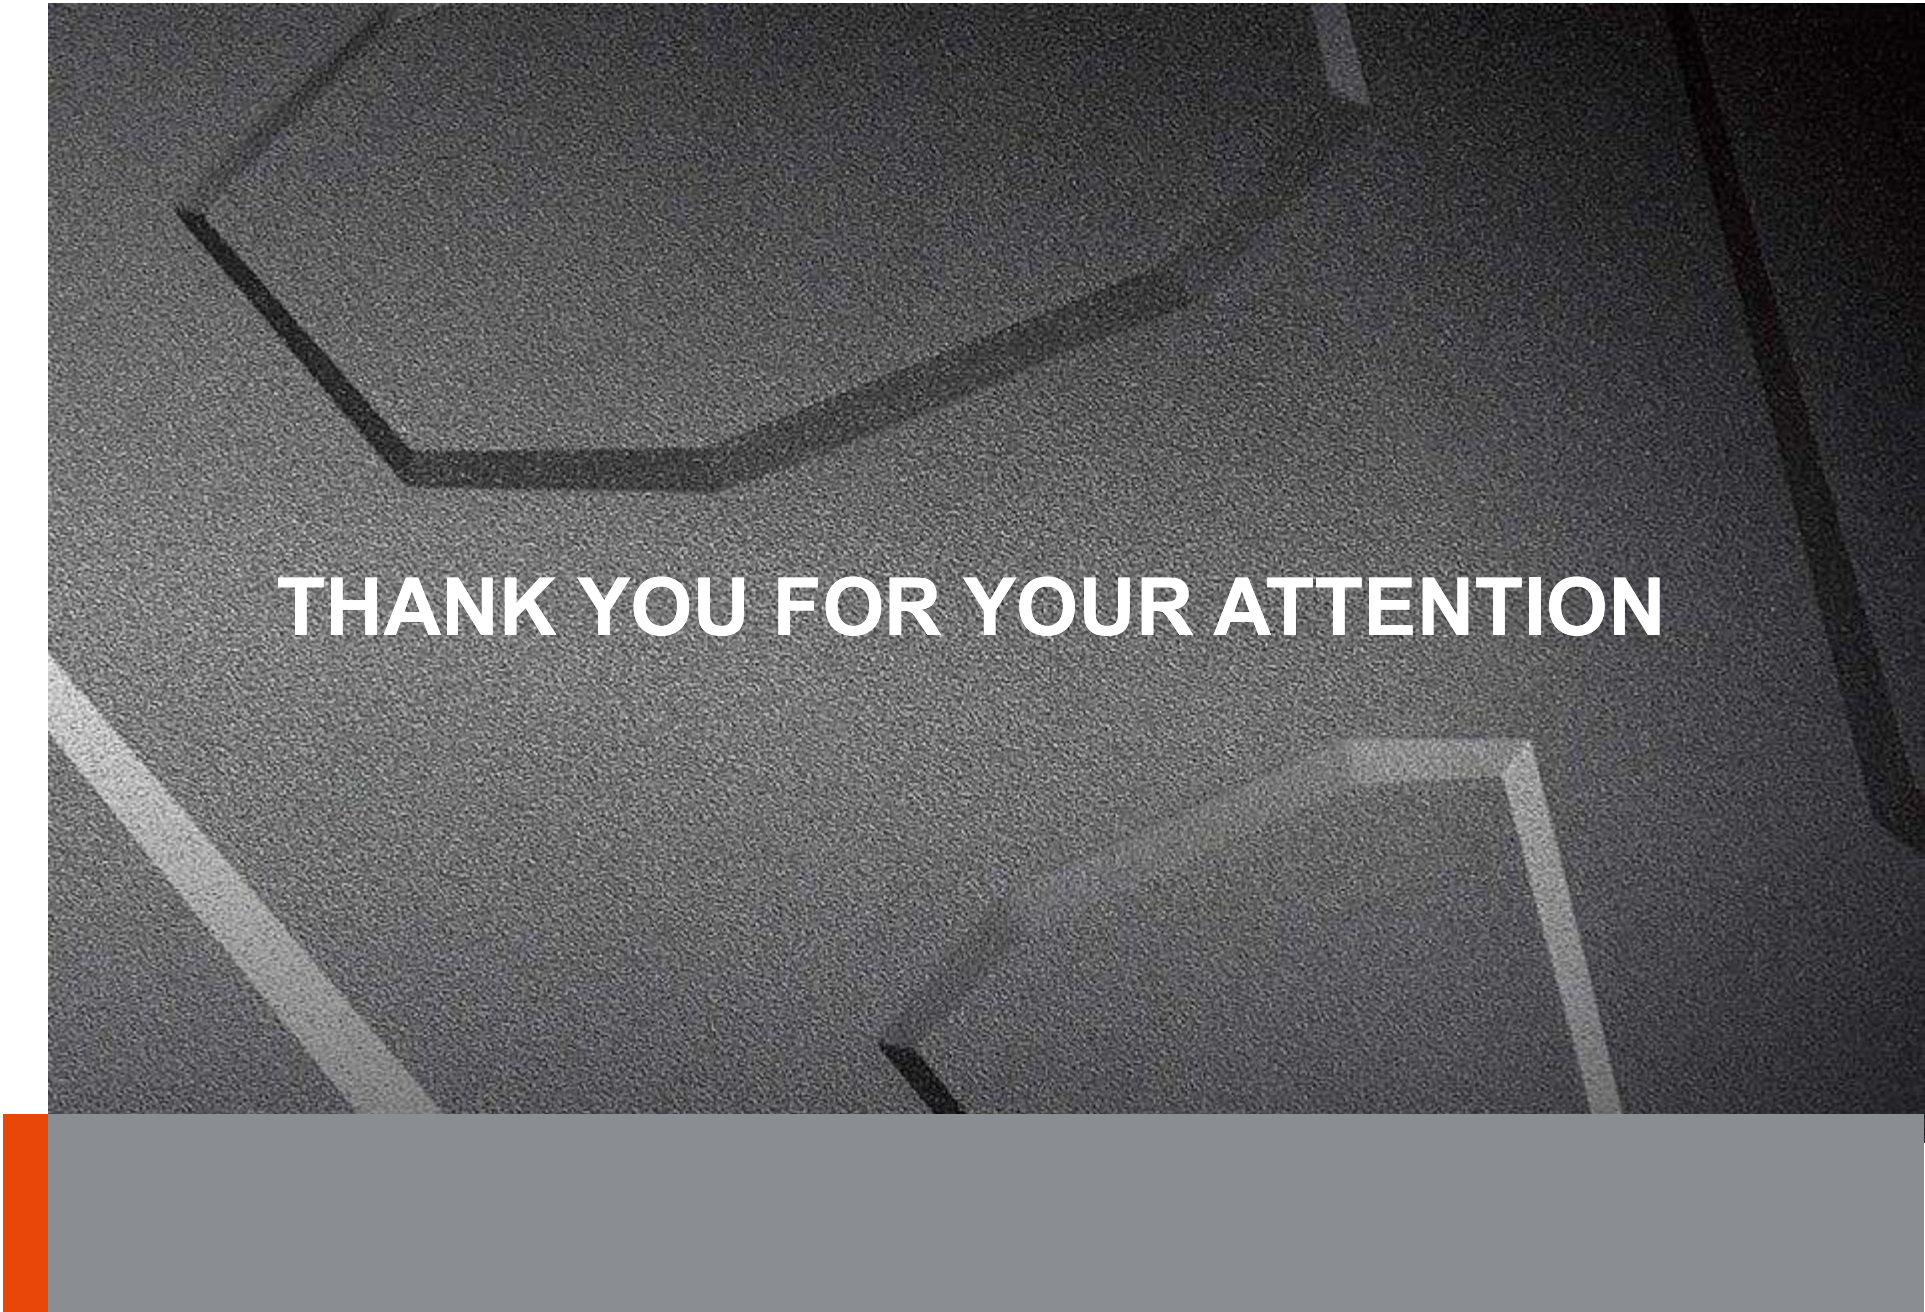

THANK YOU FOR YOUR ATTENTION