



**Getac**  
Rugged Mobile Computing Solutions

# ZX10 Self-Maintenance R01

Dec 2023

# Content

---

Battery (P/N 541391900001)

Handle (P/N 340919000005)

AUDIO Door (P/N 581191900004)

TYPE-C Door (P/N 581191900003)

DC Door (P/N 345919000001)

Stylus (P/N 340919000026)

String (P/N 340112100001)

Film (P/N 319101017008)

AC Adapter (P/N 442883100001)

Power Cord(US) (P/N 332800003012)

Power Cord(EU) (P/N 332800003018)

Button ASSY (P/N 340919000020)

# Content

| PN           | Part Description                                                                                                   | Chinese Description       |
|--------------|--------------------------------------------------------------------------------------------------------------------|---------------------------|
| 541391900001 | TF1-FRU;MAIN BATT<br>ASSY,BP1S1P4990B,BYD,CSL595490<br>H2-P,1S1P,4990mAh,1-IN-1,PI965<br>Section IB DR,BY AIR,ZX10 | 鋰電池                       |
| 340919000005 | TF1H-HANDLE ASSY;HARD HANDLE<br>WITH BASE,ZX10                                                                     | ZX10硬把手組裝料號               |
| 581191900004 | TF1-SERVICE PARTS;AUDIO DOOR<br>KIT,ZX10                                                                           | 門蓋組件                      |
| 581191900003 | TF1-SERVICE PARTS;TYPE-C DOOR<br>KIT,ZX10                                                                          | 門蓋組件                      |
| 345919000001 | TF1H-DOOR;DC,ZX10                                                                                                  | 電源門                       |
| 340919000026 | TF1H-STYLUS; 2.8mm+ 1500g+ N52<br>MAGNET+ MOVE HOLE ;ZX10                                                          | 4mm,彈力1500g,加強筆<br>尾磁性觸控筆 |
| 340112100001 | TF1H-STRING;<br>TOUCHPEN,GETAC,T800                                                                                | 彈性筆繩                      |

# Content

| PN           | Part Description                                                                                     | Chinese Description |
|--------------|------------------------------------------------------------------------------------------------------|---------------------|
| 319101017008 | TF1H-OPTICAL<br>PART;10.1",PROTECTION<br>FILM,AG,SILICON TYPE,AG100-<br>15,224.6*143.3 MM,BJTEC,ZX10 | 保護膜                 |
| 442883100001 | TF1-AC ADPT<br>ASSY;19V,3.42A,65W,3PIN,FSP065-<br>RBBN3,9NA0657801,FSP                               | 電源供應器               |
| 332800003012 | TF1-PWR<br>CORD;125V/7A,3P,BLACK,US                                                                  | 電源線(US)             |
| 332800003018 | TF1-POWER<br>CORD;250V/2.5A,3P,LP34&H03VV-<br>F,0.75MM2,3C,6',BLK&LS15,EU,LIN<br>TEK                 | 電源線(EU)             |


# Battery (P/N 541391900001)

1. Slide the battery latch toward the right (1) and then upwards (2) to release the battery pack.
2. Remove the battery pack from its compartment.



## Handle (P/N 340919000005)

Using TORX® T15 key wrench, remove the four screws (371102610027), then remove the two side screws (371102610026) to remove the two D-rings.

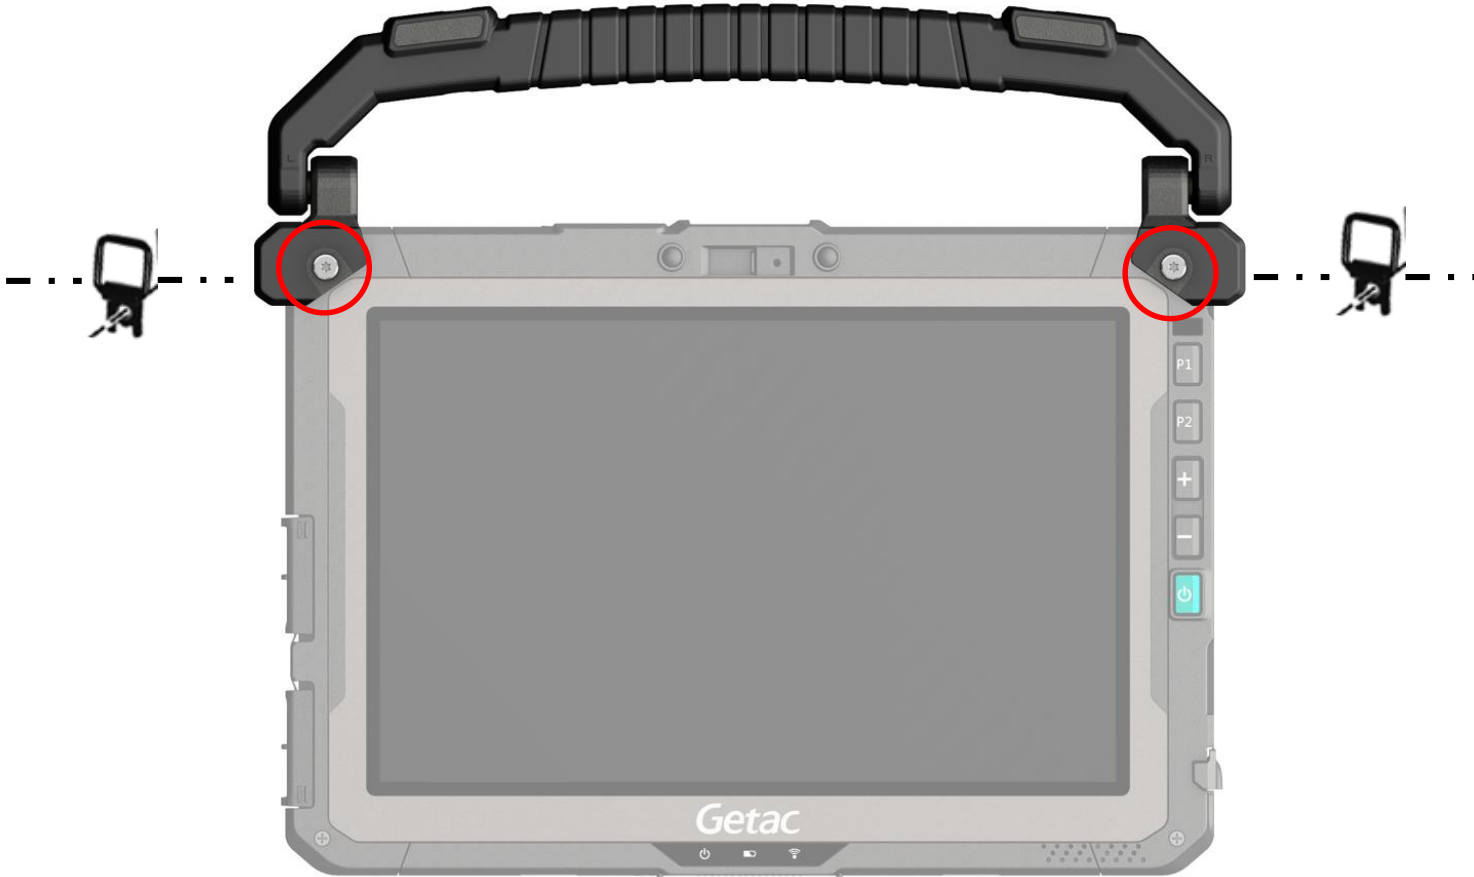



# AUDIO Door (P/N 581191900004)

Remove the screw (370102010620) lock the AUDIO door, then remove the AUDIO door.



## TYPE-C Door (P/N 581191900003)

Remove the screw (370102010620) lock the TYPE-C door, then remove the TYPE-C door.






## DC Door (P/N 345919000001)


Remove the screw (7970I6902080) lock the DC door, then remove the DC door.



# Button ASSY (P/N 340919000020)

1. Remove the handle. (See page 6)
2. Remove the screws locking the right cap.
3. Press down the paint-off button to loosen the glue at the back of the button.
4. Use a flat-head screwdriver from the inside of the cap to lift the button from the side and remove it.
5. Remove the new button assy backing glue, align the hole with the button and attach it back.

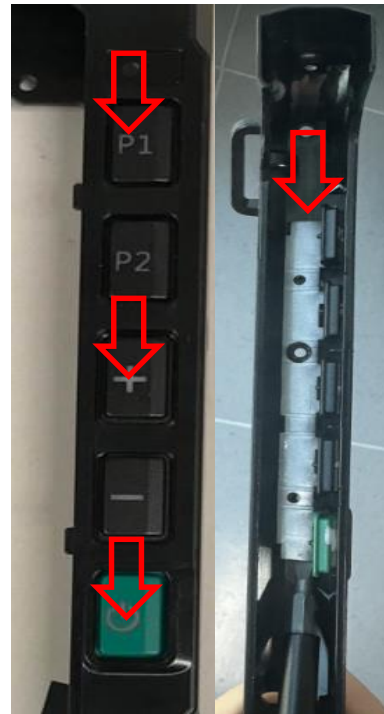

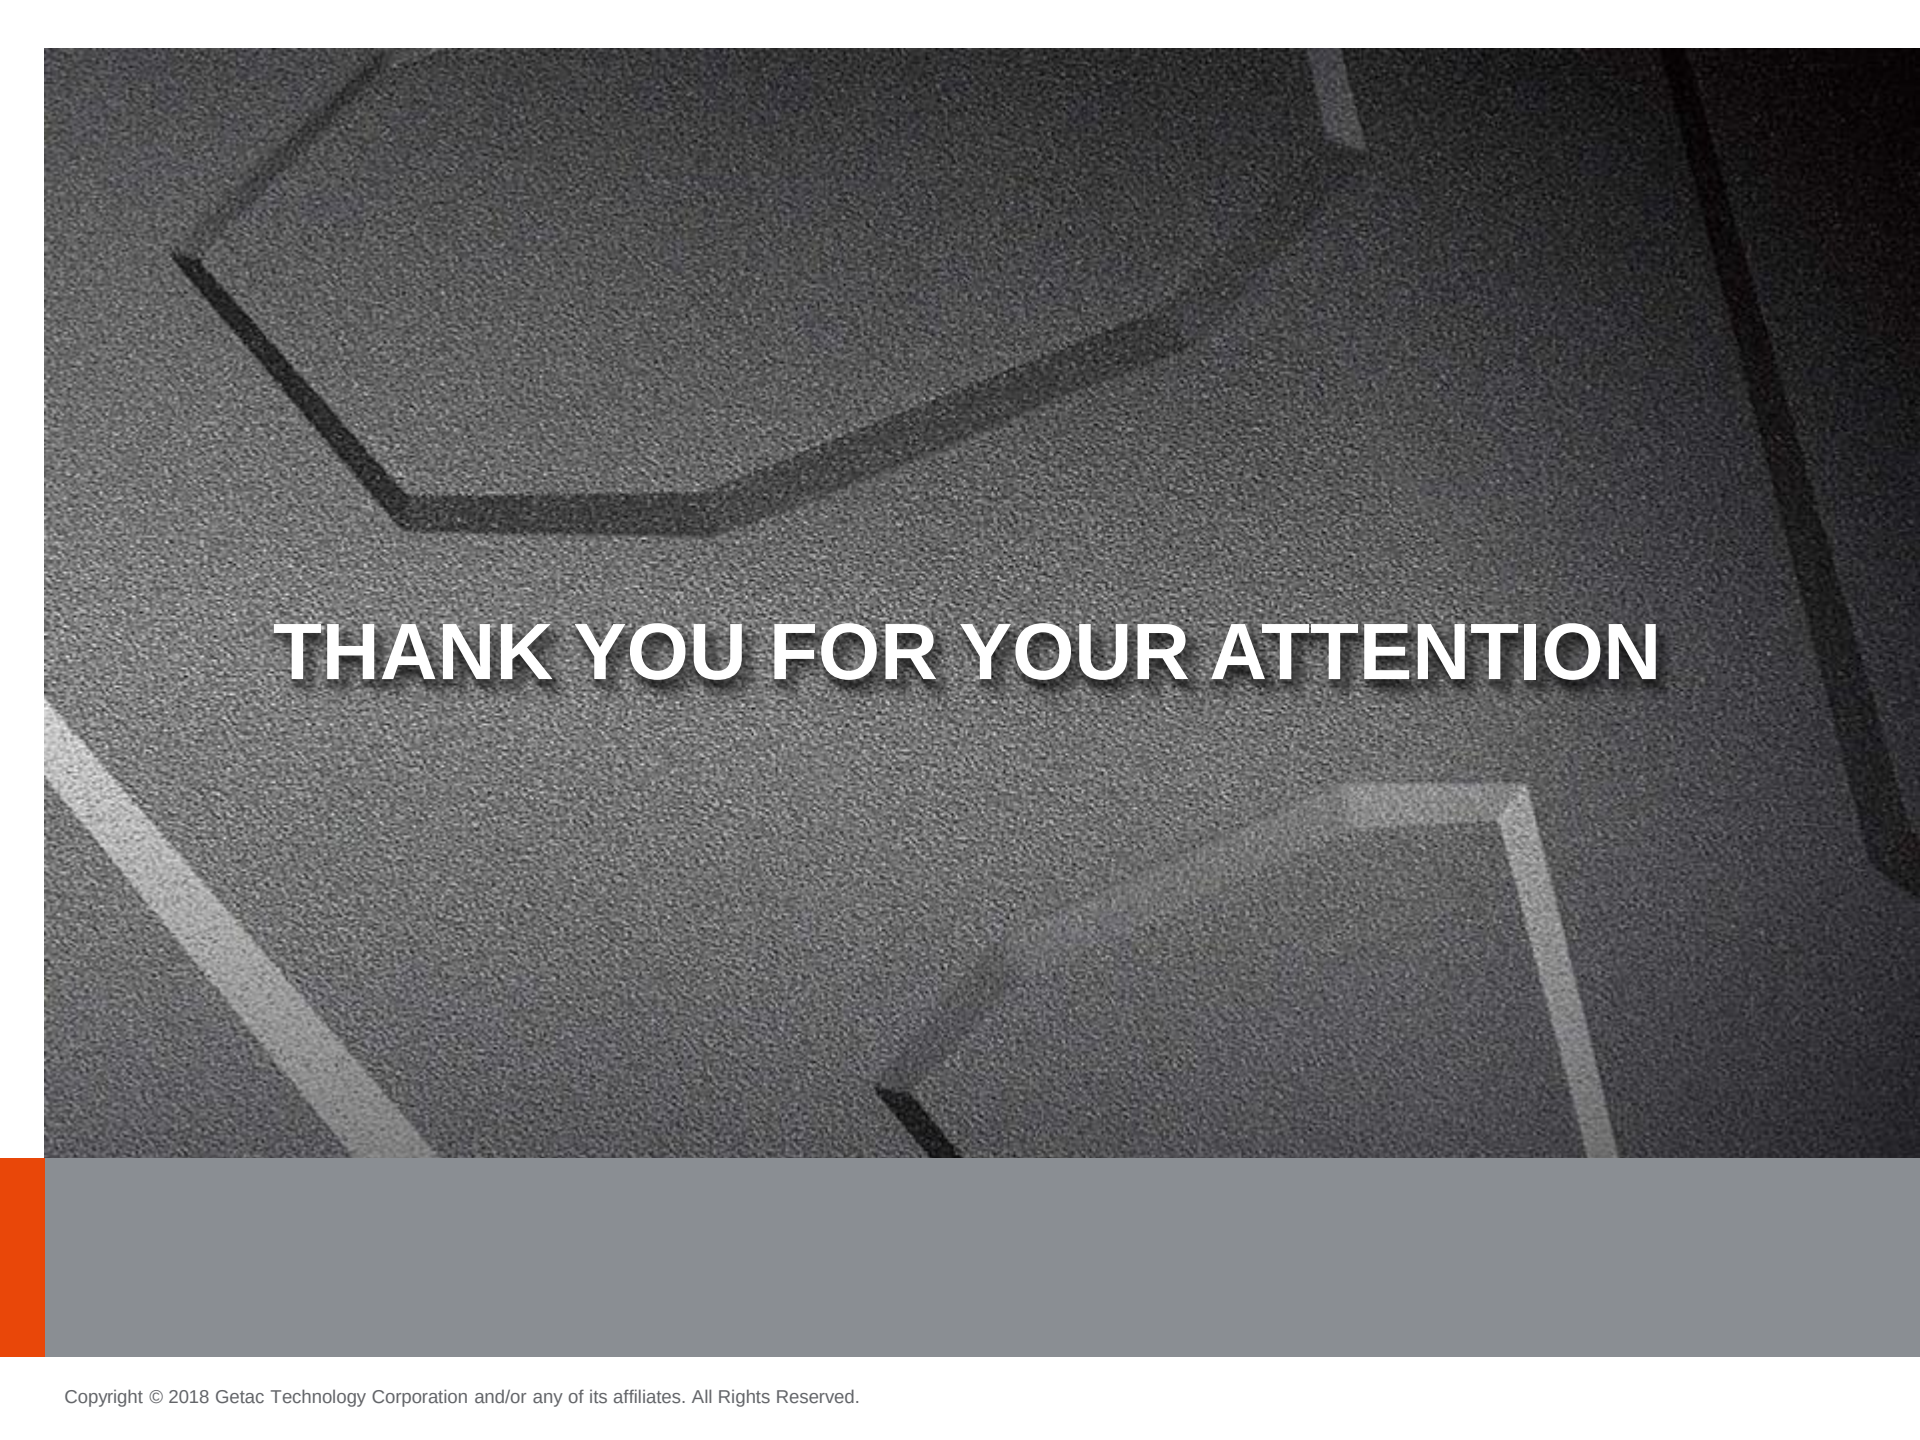

**THANK YOU FOR YOUR ATTENTION**