



Getac



F110G7 SM Parts For Centrica

Aug, 2024



CONFIDENTIALITY NOTICE

All contents / materials of this presentation contain important management and technical information and are proprietary and confidential information of Getac Technology Corporation and its subsidiaries. Leaking or forwarding any content / material of this presentation is strictly prohibited.

All contents / materials of this event are intended for viewing by the attendees only. Photograph and recording are prohibited throughout the presentation.

Photos or recordings taken on-site may result in immediate deletion of the contents and the attendees may be asked to leave this presentation immediately.

THIS IS A COVER SHEET FOR CONFIDENTIAL INFORMATION



CONFIDENTIALITY

Level 3

This document is confidential and contains proprietary information and intellectual property of Getac Technology Corporation and its subsidiaries (“Getac Group”). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without prior express written permission of Getac Group. Please be aware that disclosure, copying or distribution of this document and the information contained therein is strictly prohibited.

All Getac Employees handling this document must be in accordance with most up-to-date Confidentiality Policy of Getac Group.

THIS IS A COVER SHEET FOR CONFIDENTIAL INFORMATION

Content

- Battery Pack (P/N 541391800001)
- AC Adapter & Power Cord (P/N 442883100001 & 332800003019)
- Protection Film (P/N 319116017012)
- Stylus Holder (P/N 344918000022)
- Stylus & String (P/N 340918000015 & 340142000064 & 340GA3400011)
- DC Door (P/N 340918000022)
- IO Door (P/N 340GA4500004)
- SSD (P/N 5234GA450106)

Battery Pack (P/N 541391800001)

Slide the security lock of the battery release latch to the unlocked position (1). Slide the battery release latch upwards (2). The battery pack will slightly pop up. Remove the battery pack from its compartment (3).



AC Adapter & Power Cord (P/N 442883100001 & 332800003019)

Accessory-AC Adapter & Power Cord



442883100001



332800003019

Protection Film (P/N 319116017012)

Accessory-Protection film



319116017012

Stylus Holder (P/N 344918000022)

1. Remove the one screw (371102010334) lock the stylus holder.
2. Remove the stylus holder.
3. Assemble back the new one.



Stylus & String (P/N 340918000015 & 340142000064 & 340GA3400011)

Accessory- Stylus & String



340918000015



340142000064



340GA3400011

DC Door (P/N 340918000022)

1. Remove the one screw (370102010620) lock the DC door, then remove the bracket and DC door.
2. Assemble back the new one.



340918000022

IO Door (P/N 340GA4500004)

1. Remove the one screw (370102010620) lock the IO door, then remove the IO door.
2. Assemble back the new one.



340GA4500004

SSD (P/N 5234GA450106)

1. Slide the security latch to the unlocked position (1) and hold it there. Meanwhile, pry up the SSD module from one side to detach the module (2)
2. Assemble back the new one.





Thank You for Your Attention

