



Replacement Instructions

This document is intended for service personnel. It provides information not found in the user manual. For information such as replacing the battery pack, see the user manual of the product.

MX50.....	2
-----------	---

MX50

Power Connector Cable

To remove:

1.	Loosen the two screws that lock the Power Connector Cable
	
2.	Remove the Power Connector Cable
	

USB Door & SD Door

To remove:

1.	Remove the two screws (371102010452) that lock the USB door and SD door
2.	Open the doors
	