

Content

Battery Pack (P/N 441901000001)
Corner bumpers (P/Ns 344129000022, 344129000023,
344129000024, 344129000025)
Handle (P/N 340901000016)
Keyboard (P/N 531085910002)
LCD Cover (P/N 340901000036)
DC Door (P/N 340901000013)
USB Door (P/N 340901000014)
LAN Door (P/N 340901000044)
SSD Door(P/N 340901000011)
Smart Card Door (P/N 340901000047)
Audio Door (P/N 340901000012)
SSD in the SSD kit (P/N 523445961004, 523445961005,
523445961006)

Battery Pack (P/N 441901000001)

1. Slide the battery latch toward the right (1) and then upwards (2) to release the battery pack.



2. Remove the battery pack from its compartment.



Corner bumpers (P/Ns 344129000022, 344129000023, 344129000024, 344129000025)

1. Remove eight screws (371102600001) and two screws (342830700020) lock the front corners, then remove the front corners.



Corner bumpers (P/Ns 344129000022, 344129000023, 344129000024, 344129000025)

2. Remove four screws (371102600001) lock the left side rear corner, then remove the left side rear corner.



3. Remove four screws (371102600001) lock the right side rear corner, then remove the right side rear corner.



Handle (P/N 340901000016)

1. Remove eight screws (371102600001) and two screws (342830700020) lock the front corners, then remove the front corners.



2. Lift



Keyboard (P/N 531085910002)

1. Remove the battery packs from B360
2. Remove two screws (371102010432) lock the keyboard cover.



3. Remove three screws (371102600001) lock the keyboard cover. Open the LCD assy to 180 degrees, then remove the keyboard cover.




Keyboard (P/N 531085910002)

4. Remove three screws (371102010066) lock the keyboard. Then slightly lift up the keyboard.




5. Remove four screws (371102010432) lock the keyboard FPC cover, then remove the keyboard FPC cover.

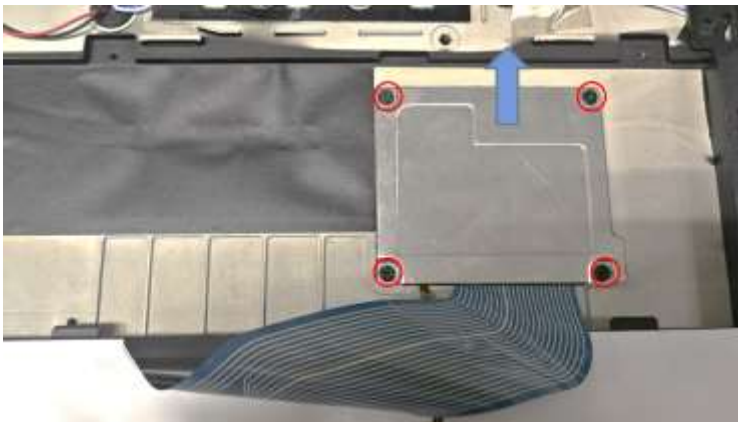


Keyboard (P/N 531085910002)

6. Disconnect the keyboard FPC, then remove the keyboard.

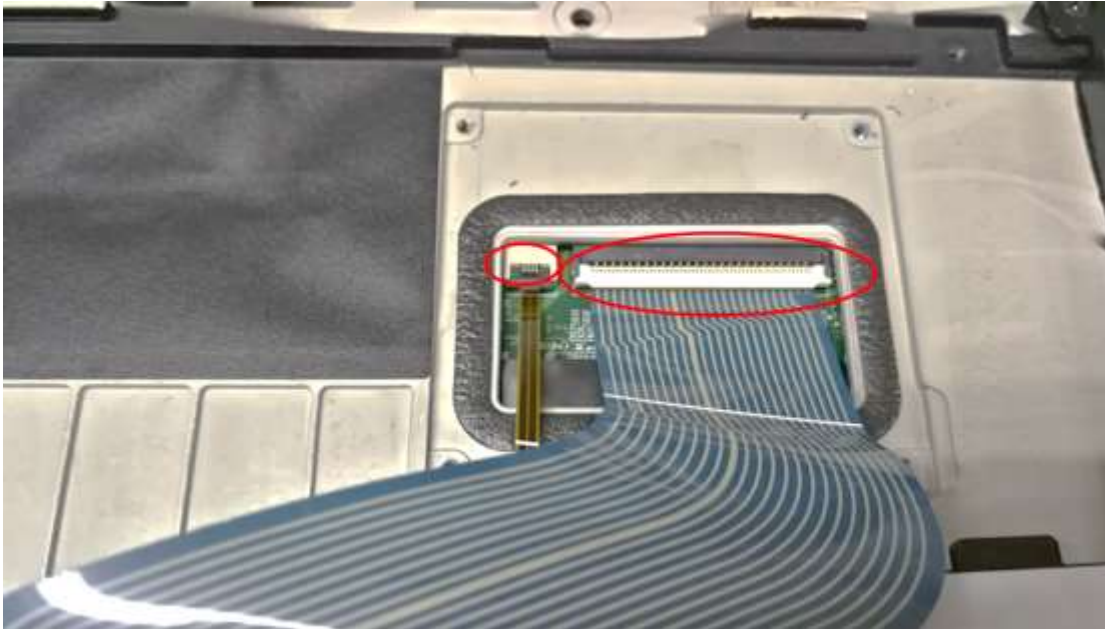

LCD Cover (P/N 340901000036)

1. Remove two screws (37110301060A) and guide pin(342901000018).Then remove the LCD Cover

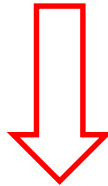

DC Door (P/N 340901000013)

1. Along the screw direction to push the DC door and then unlock the screw.



2. Detach the door from B360.

USB Door (P/N 340901000014)

1. Along the screw direction to push the USB door and then unlock the screw.



2. Detach the door from B360.

LAN Door (P/N 340901000044)


1. Along the screw direction to push the LAN door and then unlock the screw.



2. Detach the door from B360.

SSD Door(P/N 340901000011)

1. Along the screw direction to push the SSD door and then unlock the screw.

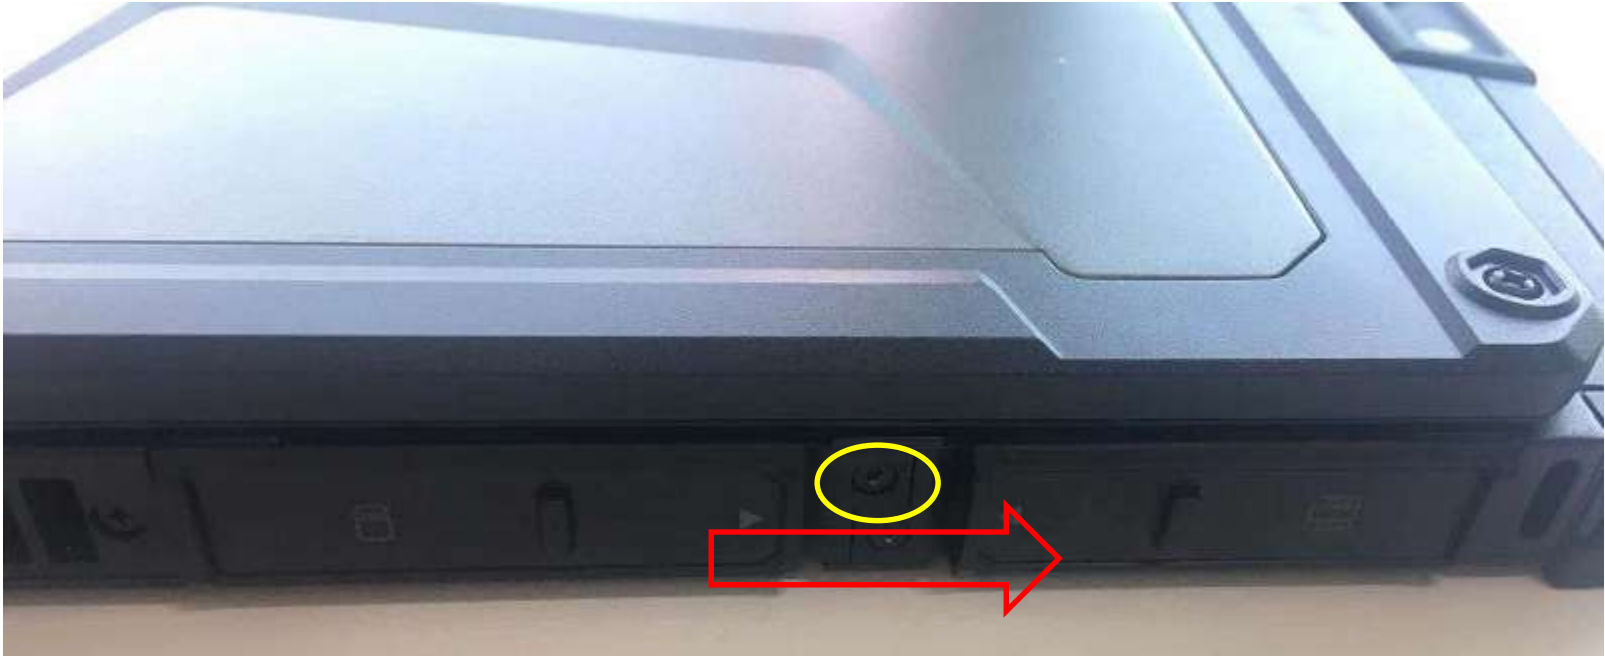

2. Detach the door from B360.

Smart Card Door (P/N 340901000047)

1. Along the screw direction to push the Smart Card door and then unlock the screw.



2. Detach the door from B360.

Audio Door (P/N 340901000012)

1. Along the screw direction to push the Audio door and then unlock the screw.



2. Detach the door from B360.

SSD in the SSD kit (P/N 523445961004, 523445961005, 523445961006)


1. Remove 2 screws (371102010432) and screw (371102610025) from the SSD kit. Lift the metal cover from the kit.



SSD in the SSD kit (P/N 523445961004, 523445961005, 523445961006)

2. Slightly lift up the SSD, and detach it from the kit.



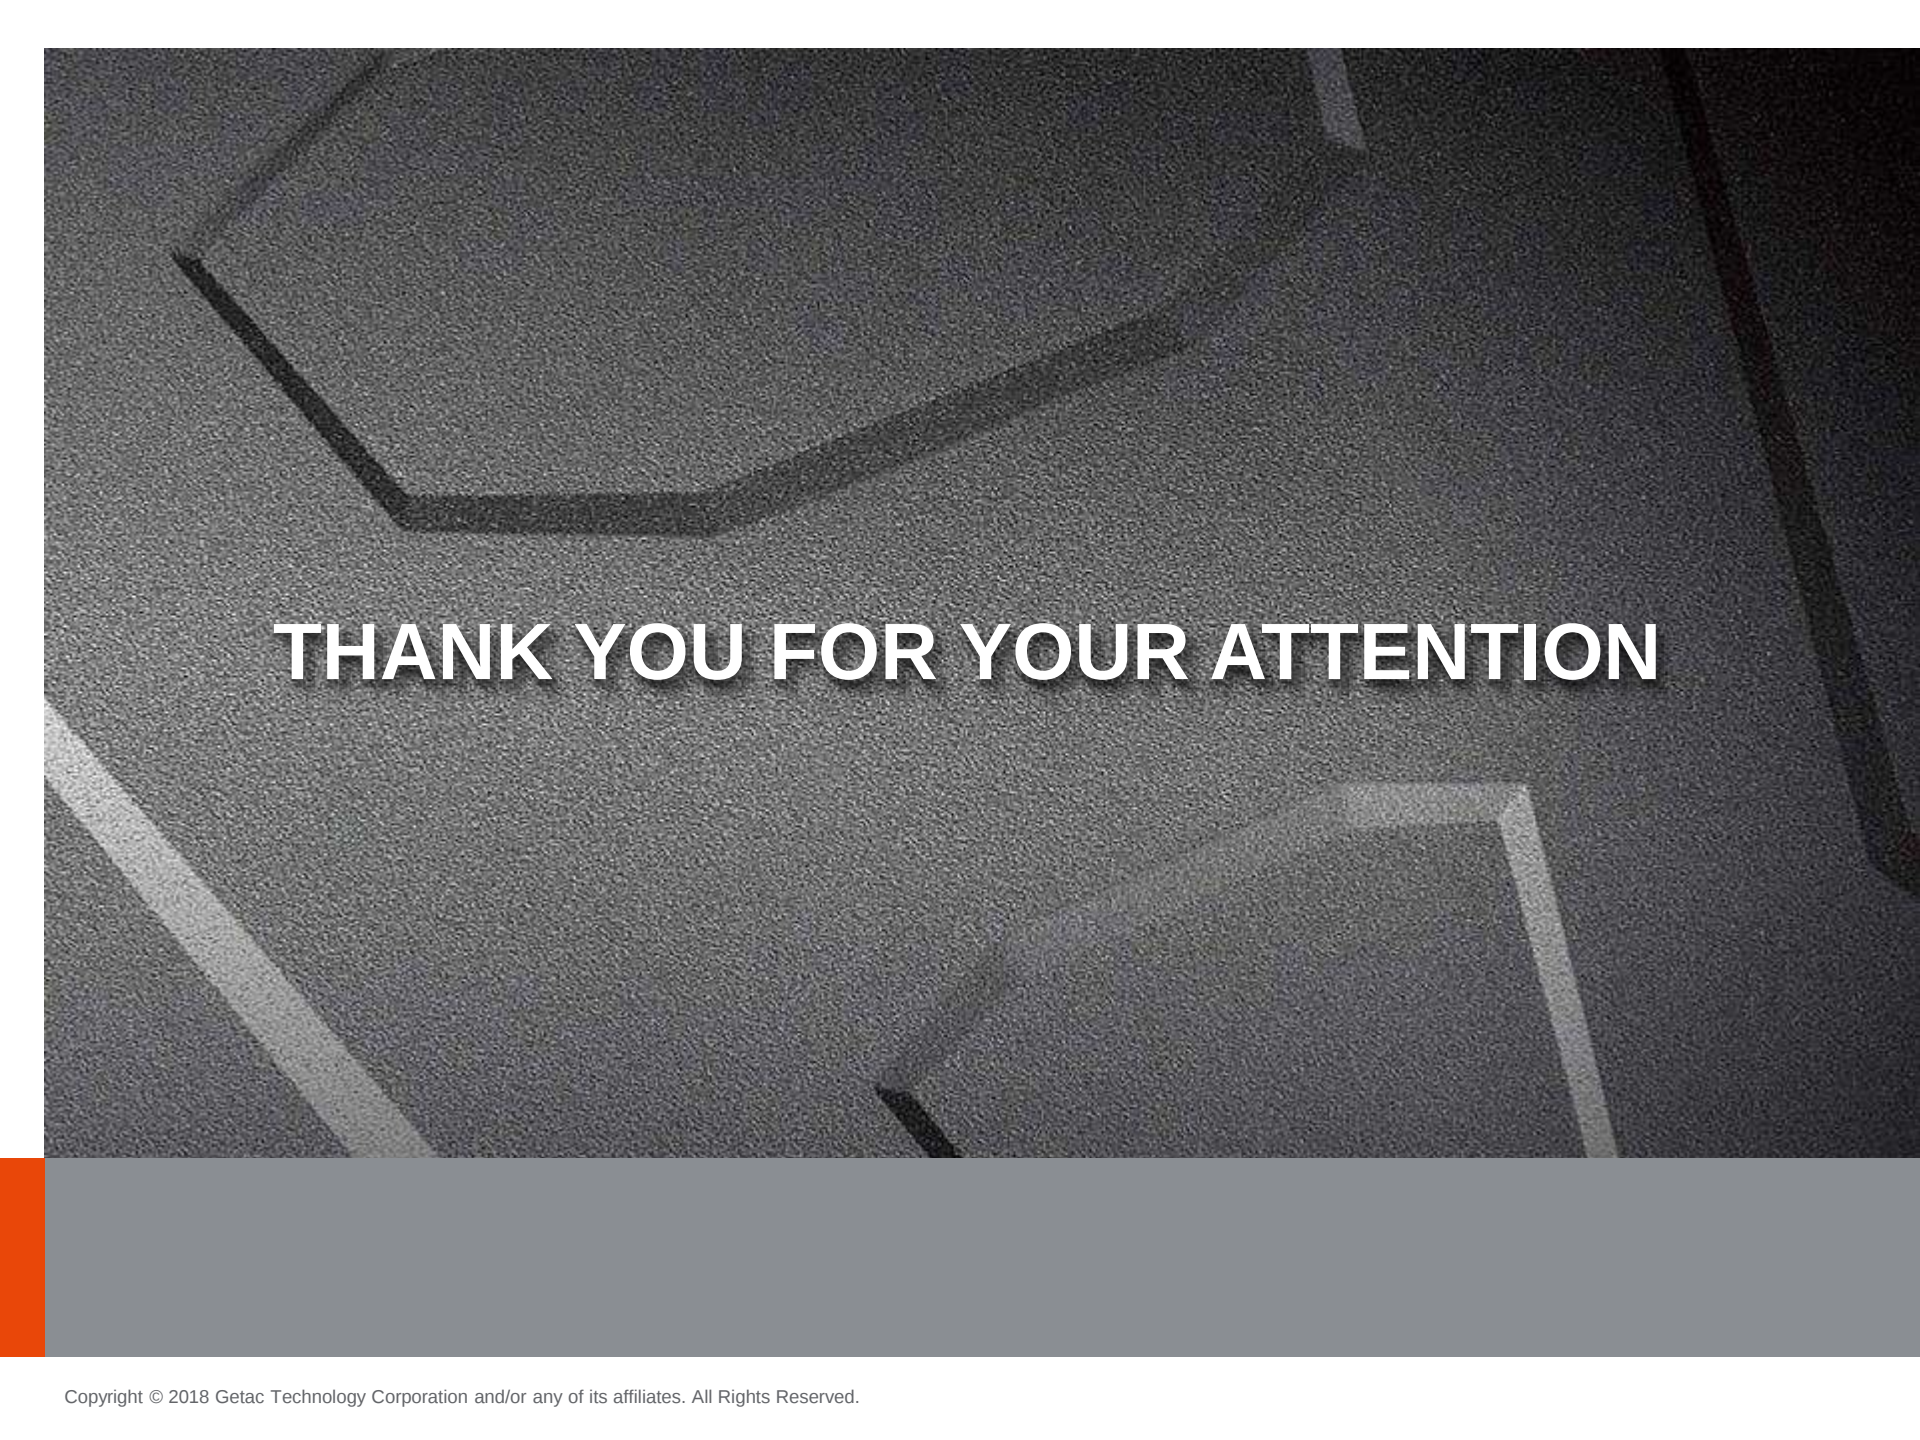

THANK YOU FOR YOUR ATTENTION