



Getac

Getac UX10

Self-Maintenance Manual

Content

Battery Pack (P/N 541314110007)

Handle (P/N 340141100008)

IO Door (P/N 340141100022)

DC Door (P/N 344141100011)

SSD DOOR (P/N 340141100017)

SSD (P/N 523445961008)

KBD Right Cap (P/N 344141100030)

KBD Left Cap (P/N 344141100031)

Cap Screw(P/N 371103010070)

Battery Pack (P/N 541314110007)

Slide the security lock of the battery release latch to the unlocked position (1). Slide the battery release latch upwards (2). The battery pack will slightly pop up. Remove the battery pack from its compartment (3).



Handle (P/N 340141100008)

Using TORX® T15 key wrench, remove the four screws (371102610027), then remove the two D-rings.




IO Door (P/N 340141100022)

Remove the two screws (370102100421) lock the USB door, then remove the USB door.




DC Door (P/N 344141100011)

Remove the one screws (370102100421) lock the DC door, then remove the DC door.

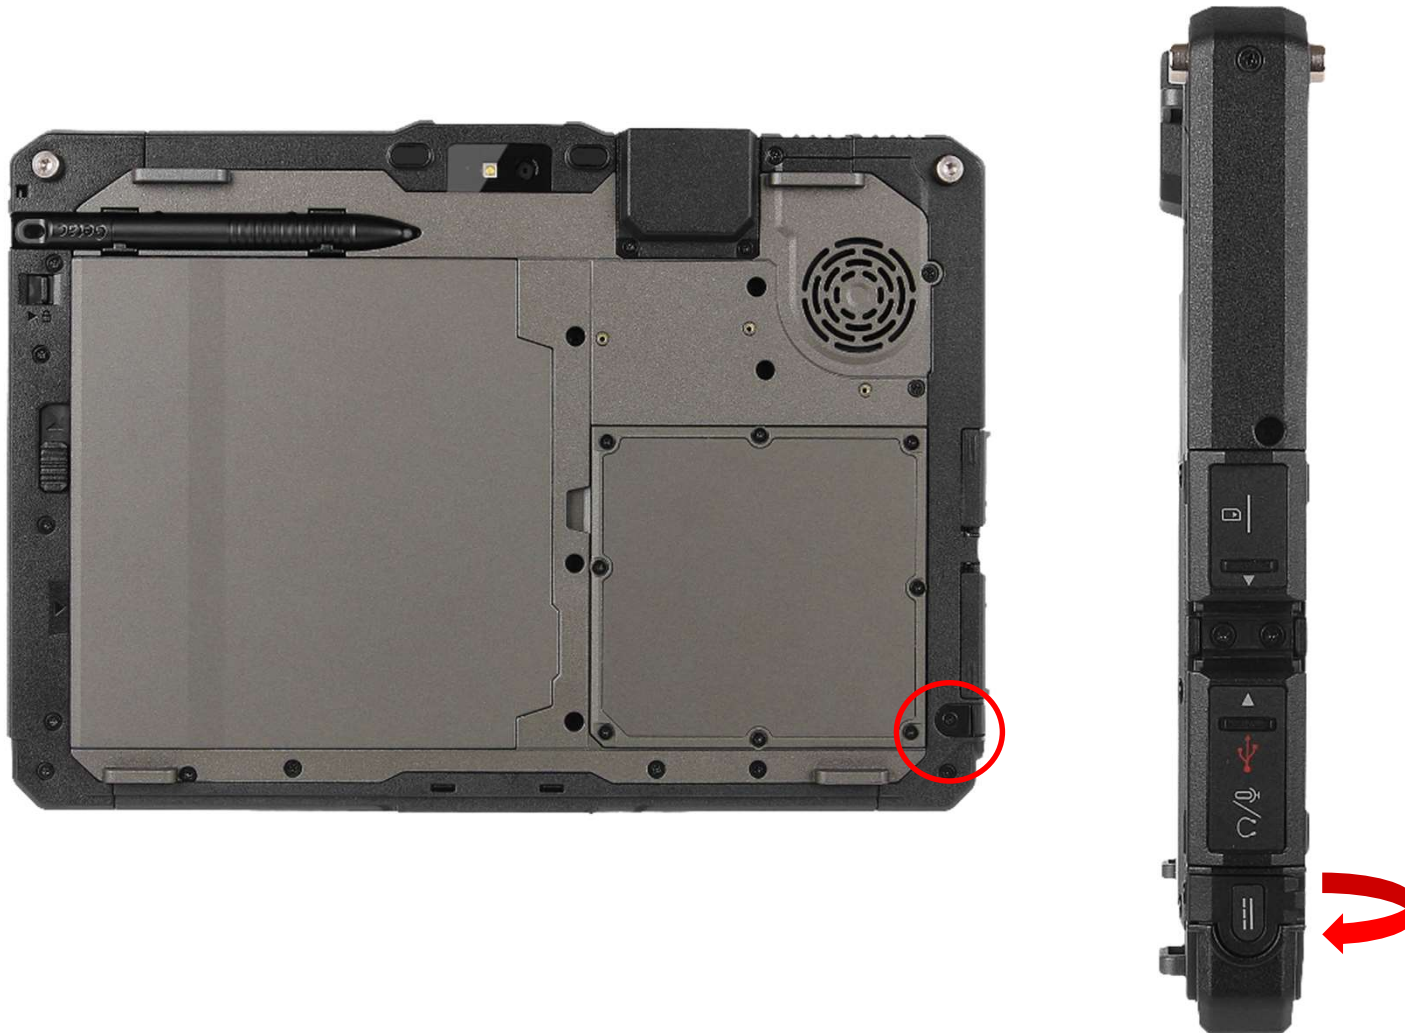

SSD DOOR (P/N 340141100017)

Remove the eight screws (370102010421) lock the SSD door, then remove the SSD door

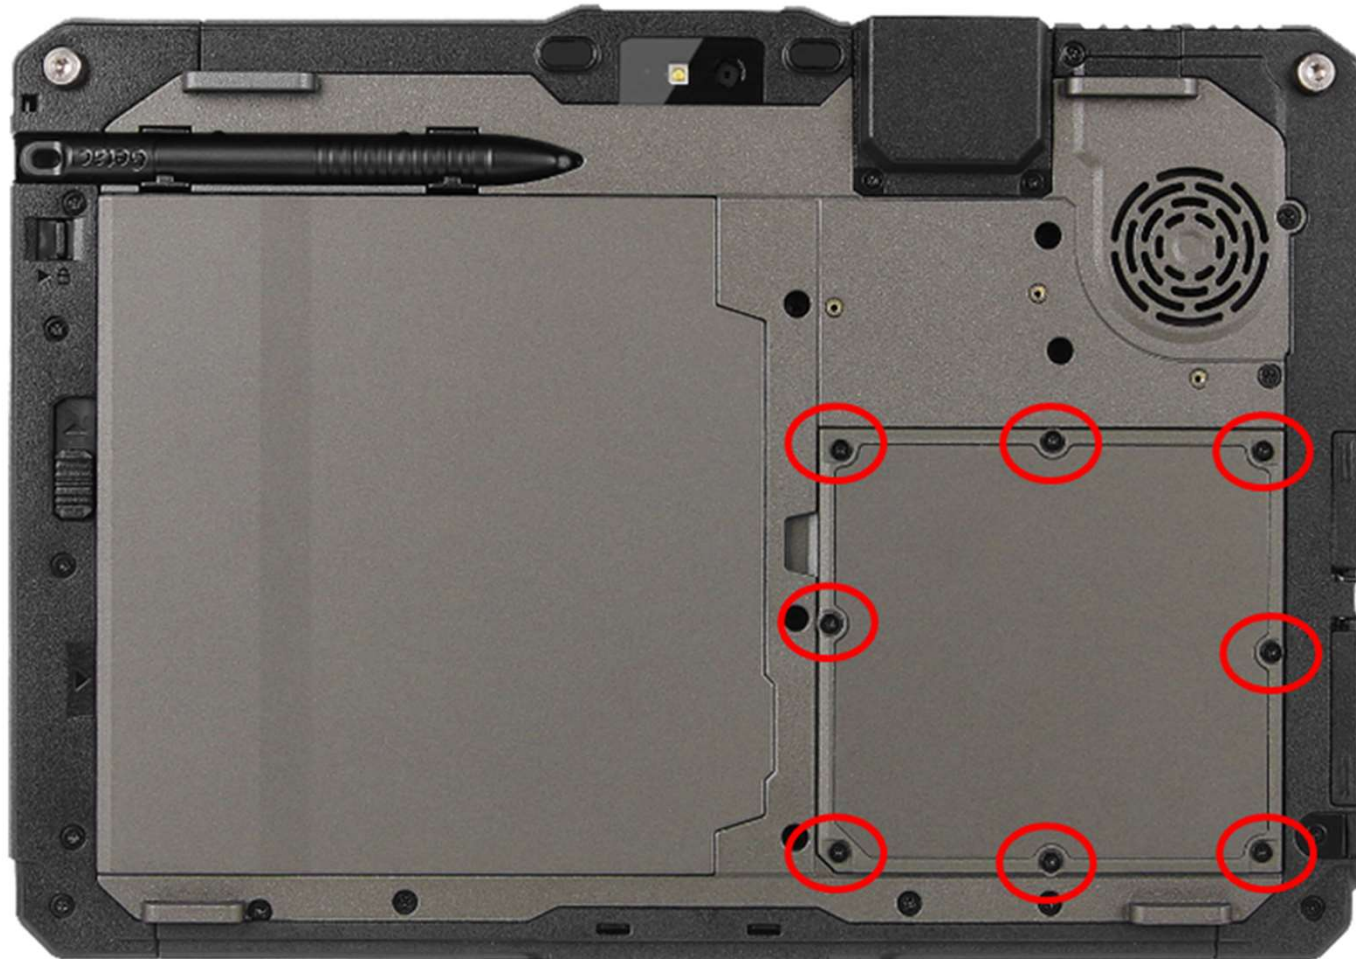

SSD (P/N 523445961008)

Remove the one screw (370102010421) lock the SSD module, remove the THERMAL-PAD. Pull out the SSD module from the connector.



KBD Cap (P/N 344141100030---Right, P/N 344141100031---Left)

Fasten the two screws (371103010070) to lock the KBD cap

The screw torque force value: 7 ~ 7.5kg/f.cm





THANK YOU FOR YOUR ATTENTION