



F110 Parts Replacement Instructions

This document is intended for service personnel. It provides information not found in the user manual. For information such as replacing the battery pack, see the user manual of the product.

DC door (P/N 344857100027)	2
I/O door (P/N 581185710002)	2
Barcode lens (P/N 344878300002)	2
SSD (P/N 523414941010)	3

DC door (P/N 344857100027)

To remove:

1.	Remove the screw that secures the door to F110. 
2.	Detach the door from F110.

To install:

Reverse the removal procedure to install the new part.

I/O door (P/N 581185710002)

To remove:

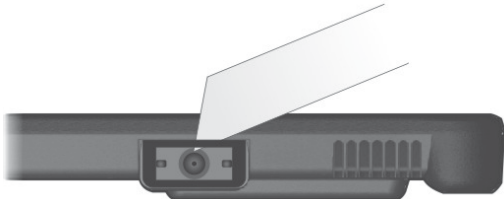
1.	Remove the two screws that secure the door to F110. 
2.	Detach the door from F110.

To install:

Reverse the removal procedure to install the new part.

Barcode lens (P/N 344878300002)

To remove:

1.	Using a small blade, carefully pry out the barcode lens module. 
----	--

To install:

Reverse the removal procedure to install the new part.

SSD (P/N 523414941010)

To remove:

1.	Remove the battery packs from F110.	
2.	Remove screws from the SSD cover and open the cover. The screw types vary with models. Two models are shown below.	
	Standard model:  Screw P/N: 371101610421	Model with smart card reader:  Screw P/N: 371101610704 (x 6) Screw P/N: 371101610421 (x 1)
3.	Select models have a component on top of the SSD. Disconnect the cable (if necessary) and remove the component to access the SSD.	
4.	Remove the SSD bracket by unfastening three screws.  Screw P/N: 371102010014 Bracket P/N: 342857100008	

5. Remove the standoff.



Standoff P/N: 377102030001

6. Detach the SSD from the system board.



To install:

Reverse the removal procedure to install the new part.