



T800 Parts Replacement Instructions

This document is intended for service personnel. It provides information not found in the user manual. For information such as replacing the battery pack, see the user manual of the product.

DC door (P/N 344122100010)	2
I/O door (P/N 344122100011)	2

DC door (P/N 344122100010)

To remove:

1.	Remove the screw that secures the door to T800. 
2.	Detach the door from T800.

To install:

Reverse the removal procedure to install the new part.

I/O door (P/N 344122100011)

To remove:

1.	Open the I/O door.
2.	Remove the four screws that secure the door to T800. 
3.	Detach the door from T800.

To install:

Reverse the removal procedure to install the new part.