



F110G6 Parts Replacement Instructions

This document is intended for service personnel. It provides information not found in the user manual. For information such as replacing the battery pack and SSD, see the user manual of the product.

DC door (P/N 340918000007)	1
Type C door (P/N 340918000005).....	2
Audio door (P/N 340918000006).....	3
Left cap (P/N 344918000033).....	4
Right cap (P/N 344918000035).....	5
Top cap (P/N 344918000006).....	6
Bottom cap (P/N 344918000032).....	7



DC door (P/N 340918000007)

Removing the DC door

1. Open the DC door. Remove the one screw (370102010421) lock the DC door.



2. Detach the DC door and bracket from F110G6, then remove the DC door.

Installing the DC door

Reverse the removal procedure to install the new part.



Type C door (P/N 340918000005)

Removing the type C door

1. Unlock the type C door and audio door. Remove the two screws (370102010620).



2. Detach the type C door and audio door from F110G6, then remove the type C door.



Installing the Type C door

Reverse the removal procedure to install the new part.



Audio door (P/N 340918000006)

Removing the audio door

1. Unlock the type C door and audio door. Remove the two screws (370102010620).



2. Detach the type C door and audio door from F110G6, then remove the audio door.



Installing the audio door

Reverse the removal procedure to install the new part.




Left cap (P/N 344918000033)

Removing the left cap

1. Remove the DC door.
2. Remove two GUIDE-PINs (371102610027). Remove the one screw (371102600001) and one screw (370102010421),



3. Remove the three screws (371102600001). Remove the one screw (342830700019) and washer.

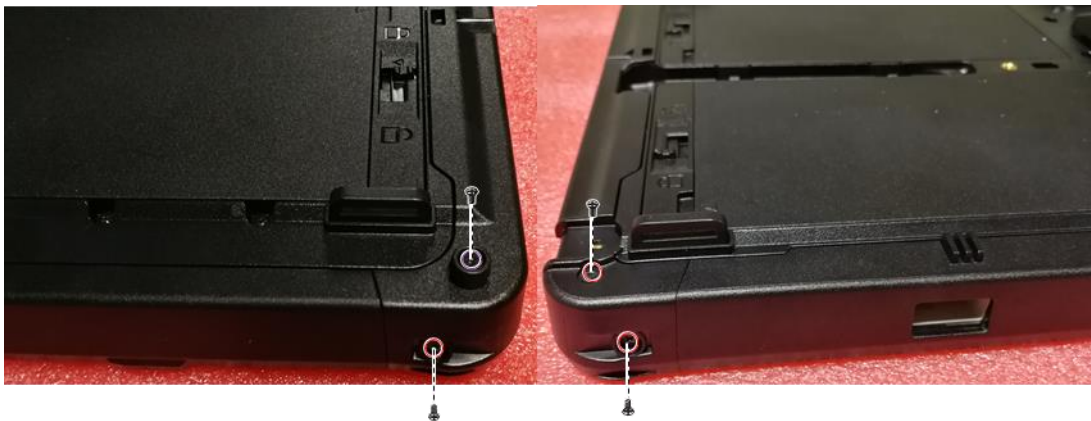

4. Detach the left cap from F110G6,

Installing the left cap

Reverse the removal procedure to install the new part.



Right cap (P/N 344918000035)

Removing the right cap

1. Remove the type C door and audio door.
2. Remove two GUIDE-PINs (371102610027). Remove the one screw (371102600001) and one screw (370102010421),



3. Remove the three screws (371102600001). Remove the one screw (342830700019) and washer.



4. Detach the right cap from F110G6,

Installing the right cap

Reverse the removal procedure to install the new part.



Top cap (P/N 344918000006)

Removing the top cap

1. Remove the left cap.
2. Remove the right cap.
3. Remove the two screws (370102010421) and one screw (370102010620).



4. Detach the top cap from F110G6,

Installing the top cap

Reverse the removal procedure to install the new part.



Bottom cap (P/N 344918000032)

Removing the bottom cap

1. Remove the left cap.
2. Remove the right cap.
3. Remove the two screws (370102010421).



4. Detach the right bottom cap from F110G6,

Installing the bottom cap

Reverse the removal procedure to install the new part.