How to Reconnect a Dymo Printer

Issue:

Dymo printer lost connection to the computer.

Resolution Steps:

1. Unplug the Printer:

o Disconnect both the **power cable** and the **USB cable** from the printer.

2. Discharge Remaining Power:

- o Wait about 10–15 seconds to allow any residual power to discharge completely.
- o Or press the power button till the light turns off.

3. Reconnect the Printer:

o Plug the **power cable** and **USB cable** back into the printer and the computer.

4. Verify Connection:

o Confirm that the printer is recognized by the computer and is ready to print.

Result:

The printer successfully reconnected and was operational.