

Dell Pro 16 (PC16250) Touchpad Gestures

Touchpad Gestures (Windows Precision Touchpad)

- One-Finger Tap: Left-click
 - Two-Finger Tap: Right-click
 - Two-Finger Drag: Scroll vertically or horizontally
 - Two-Finger Pinch: Zoom in or out
 - Three-Finger Tap: Open Search
 - Three-Finger Swipe Up: Open Task View (all open windows)
 - Three-Finger Swipe Down: Show desktop
 - Three-Finger Swipe Left / Right: Switch between open applications
 - Four-Finger Swipe Left / Right: Switch between virtual desktops
-