

S E R V I C E T I P S

C20221006B (Supersedes C20221006A)

October 6th, 2022

Subject: UTY-RSRY Remote Control sensor activation

Discussion:

Default temperature sensing for all Airstage H, J and V Series systems is from the return air temperature sensor within the indoor unit. When desired, the room temperature sensor internal to the UTY-RSRY Fujitsu Remote Control can be activated to sense temperature at the Remote instead of the return air.



In order to activate the sensor in the Remote Control, Item Number 07 within the MENU SETTINGS must be accessed and changed. This document provides an overview of how to activate the Remote Controller sensor, please also refer to the UTY-RSRY Installation Instructions for complete details

Directions:

- ◆ Steps 1 – 8: Unlock the Remote Controller internal sensor.


NOTE: If you are working with Airstage J-Series or V-Series systems, proceed directly to Step 9:

1. From the monitor screen, press and HOLD the FAN down and TEMP up arrows simultaneously until A1 is displayed:
2. When A1 flashes, press and HOLD the FAN up arrow until F1 is displayed for the Initial Settings mode:

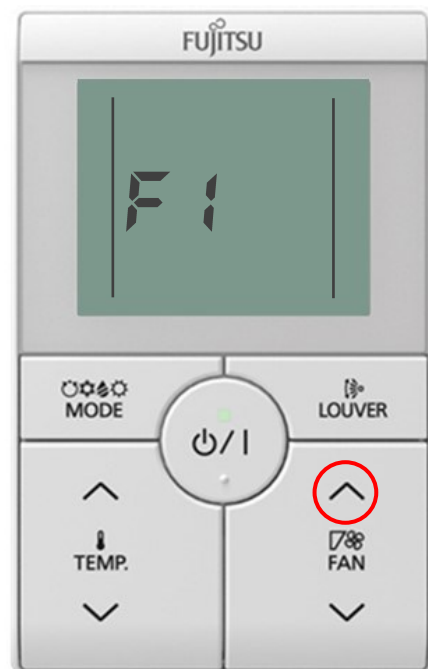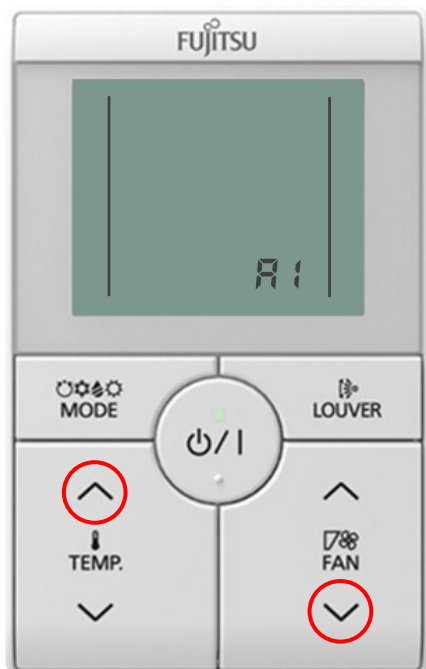


Subject: UTY-RSRY Remote Control sensor activation


3. With F1 flashing, press the START/STOP button to access the Initial Settings menu:

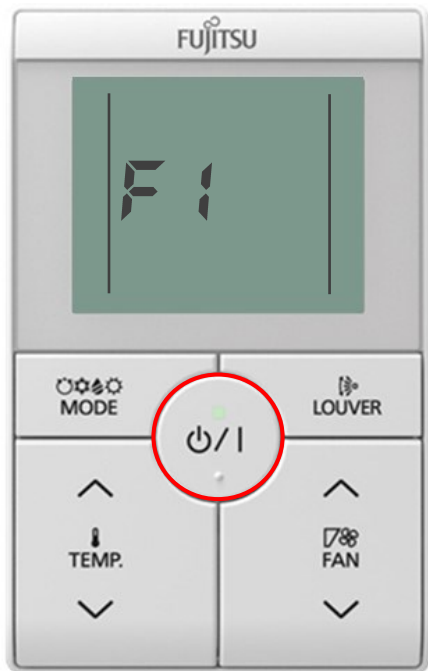


4. Access the Function Settings menu by using the TEMP up arrow, and scroll to item setting 13. When item setting 13 is flashing, press the START/STOP button to enter the Function Settings Menu:

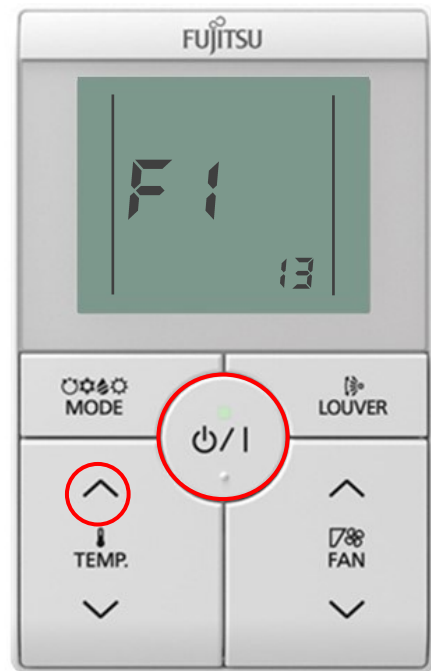

5. Use the TEMP up arrow to scroll to function setting 42. Press the START/STOP button to open the function setting option selection.

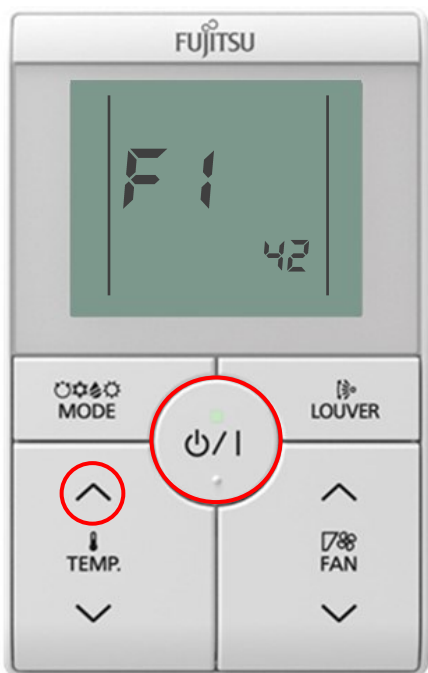

6. Use the TEMP up arrow to adjust the default setting option from 00 to 01. Press the START/STOP button to assign the setting option. **Note: Remote controller address "002" does not need to be changed. Press the START/STOP button to proceed to function setting adjustment**

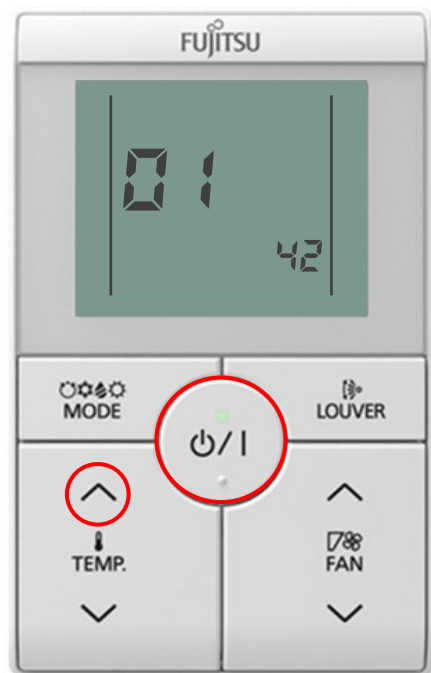


Subject: UTY-RSRY Remote Control sensor activation

7. IMPORTANT- Repeat Step 5 and 6 to adjust function setting 48 to setting value to 01.


8. **IMPORTANT- Cycle power for AT LEAST 2 MINUTES to write the function setting values.**

♦ Steps 9 – 12: Activate the Remote Controller internal sensor.


9. From the monitor screen, press and HOLD the FAN down and TEMP up arrows simultaneously until A1 is displayed:

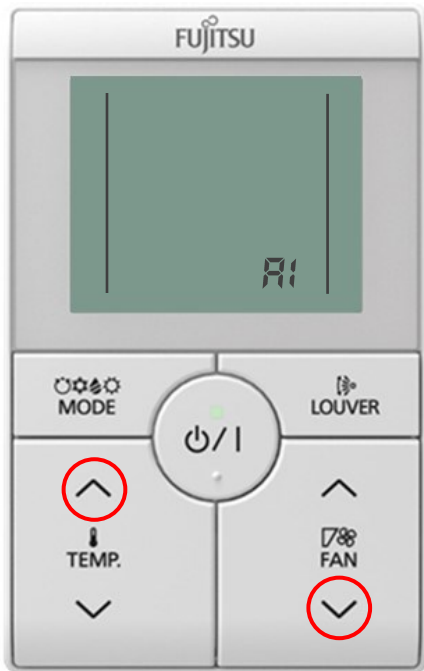


10. When A1 flashes, press and HOLD the FAN up arrow until F1 is displayed for the Initial Settings mode:

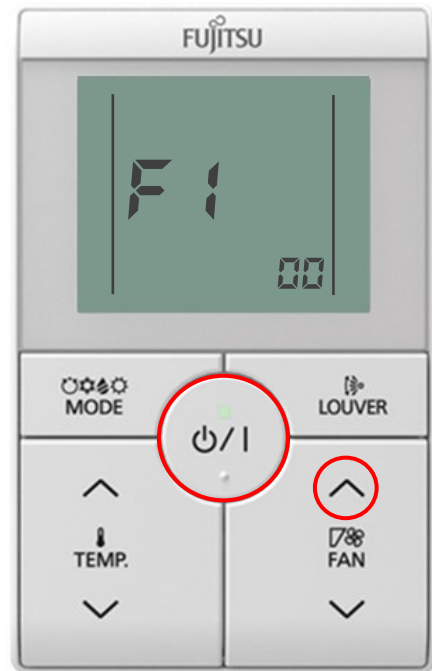

11. Use the TEMP up arrow to scroll to function setting 07. Press the START/STOP button.

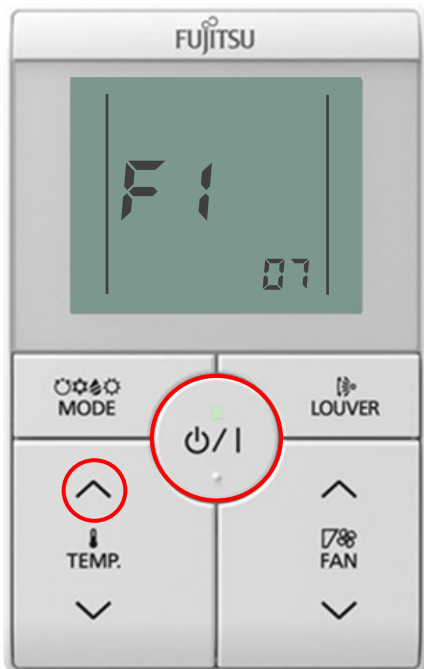


12. Use the TEMP up arrow to adjust setting option to 01. Press the START/STOP button to assign the value.

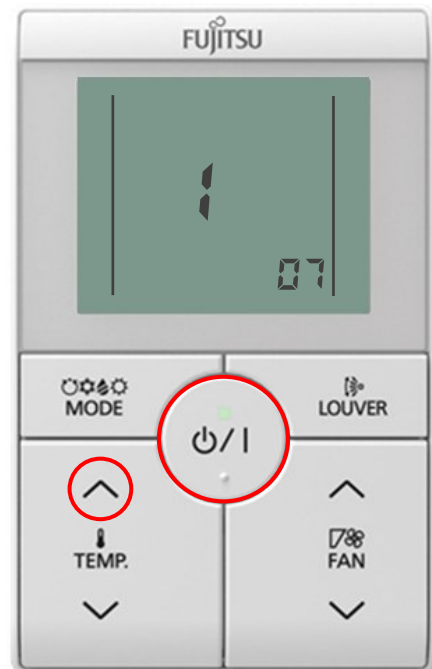

Subject: UTY-RSRY Remote Control sensor activation

- ◆ Confirm function setting option

13. Press and HOLD the TEMP down and FAN up arrows simultaneously to enter the Confirmation C1 menu:

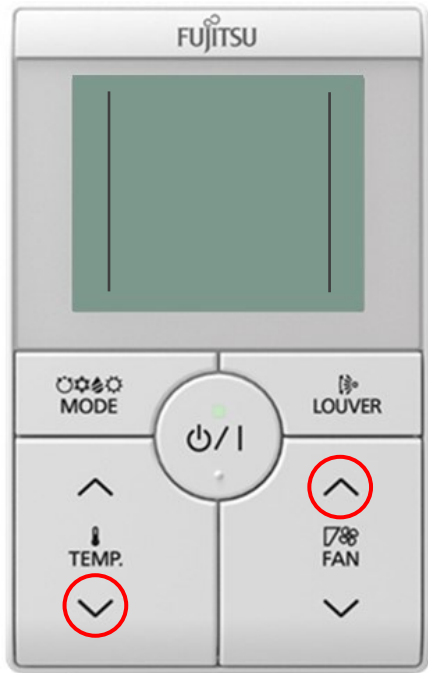

14. The Remote Control sensor icon should be displayed to confirm the function setting change from Steps 11 & 12.

