


DTVGameControl H25 Line Diagram with DSWM 30 Switch

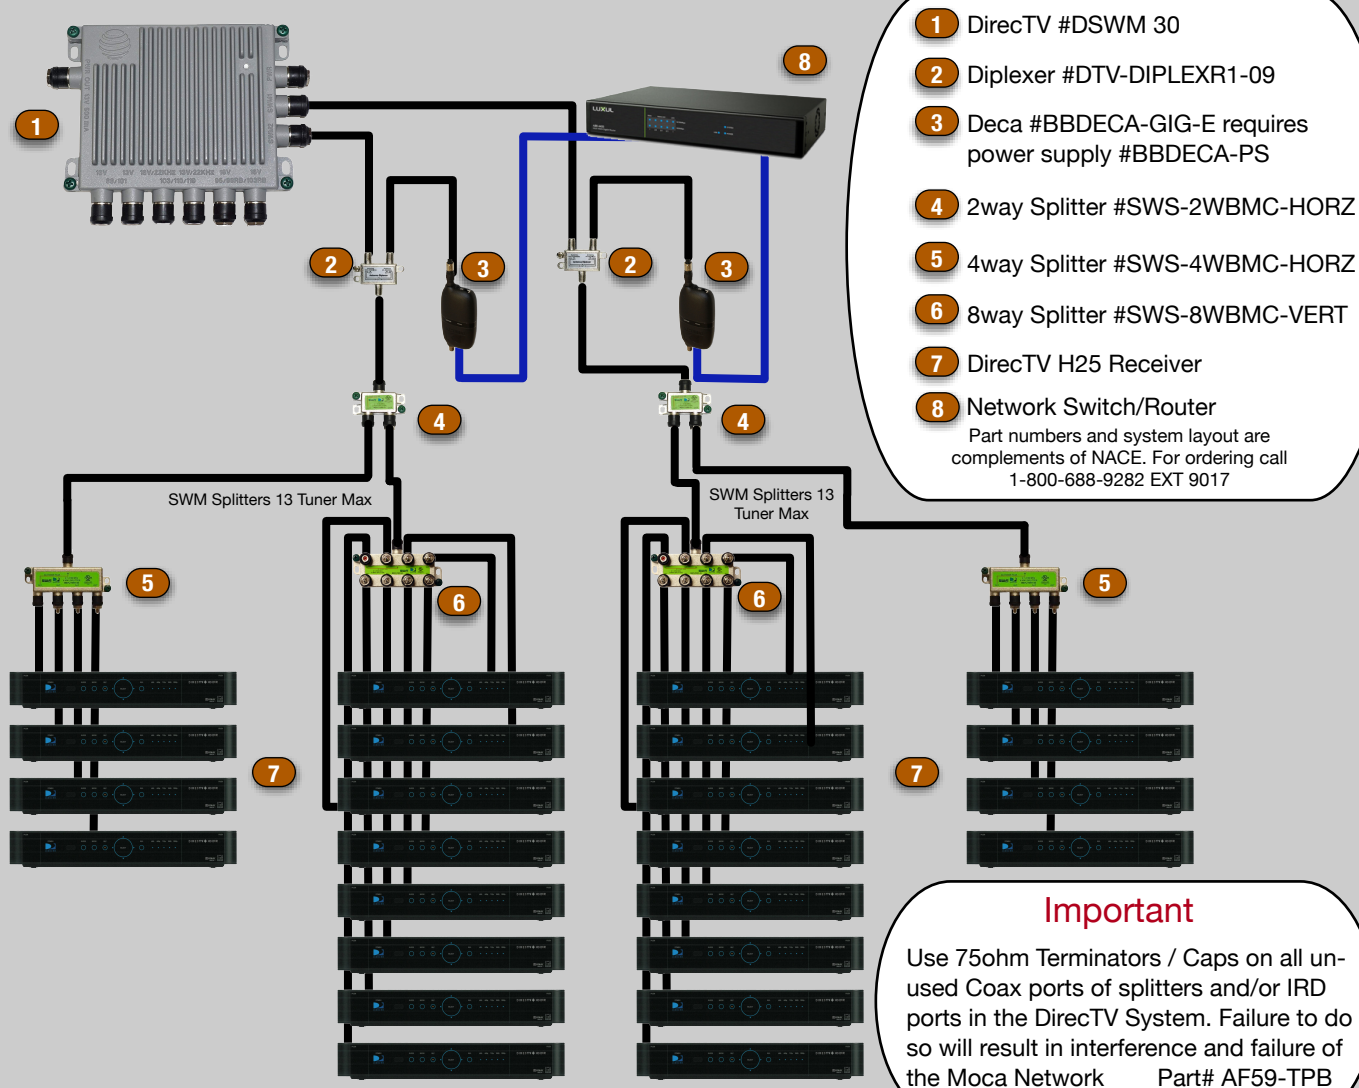

Configuring DIRECTV Receivers

Configuring DIRECTV Receivers Static IP Address and External Device Access

1. Menu - Press the Menu button on the DirecTV remote control. This will take you to the Main Menu.
2. Settings - Select Settings Menu. This will take you to the Settings Menu of the Receiver.
3. Network Setup - Under Settings select Network Setup. Now Select Advanced Setup.
4. Setting Static IP - DTVGameControl recommends using a consecutive IP address scheme for identification purposes starting at .101 for the first DirecTV receiver etc..
5. Connect Now - Select Connect Now. This will check that the DirecTV receiver is properly connected to the internet
6. Whole-Home - Select Whole-Home Menu. This will take you to the screen that will enable external control.
7. External Devices - Under Whole-Home select the External Devices Menu.
8. External Access - Set the External Access to allow Control of the DirecTV receiver from DTVGameControl.