


Deactivating Motion Alarms in eMessenger

When your phone chimes, open eMessenger to view the Motion alert.

Tap the Alert button (highlighted in green). On the Alerts screen Tap the Motion Sensor Clear button, then tap CONFIRM

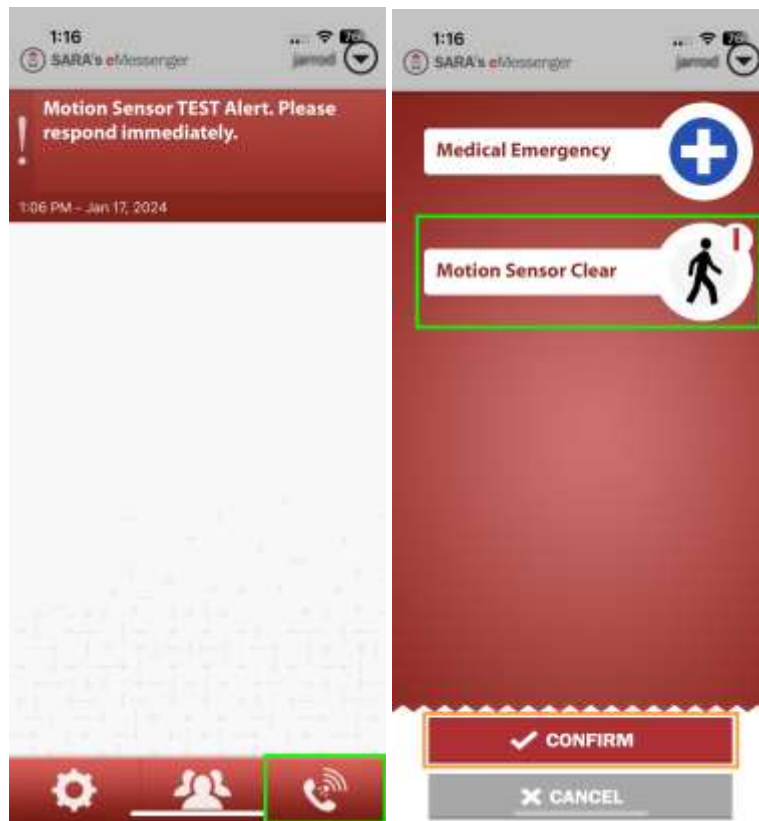

Tap CONFIRM again quickly. There is a short 5 second timeout. The screen will display that the motion sensor has been cleared. Return to the Alarms screen and eMessenger will display no further alert for motion.

