Setup Instructions for SimplicityTouch IFP Router Topic Covered: DISABLE WIRELESS CONNECTION Model Numbers Covered: 70" ST-700, Generation 1

e: support@recordexusa.com

TOOLS REQUIRED:

None.

ESTIMATED TIME REQUIRED:

Disable Wireless Network Feature

3 min

Setup Instructions for SimplicityTouch IFP Router For Model Number: 70" ST-700, Generation 1

This guide will walk you through the steps necessary to disable the wireless networking features of the SimplicityTouch.

1. Go to Home Screen




2. Open **Settings**




3. Open **Network** settings




4. Open Internal Routing Settings Page

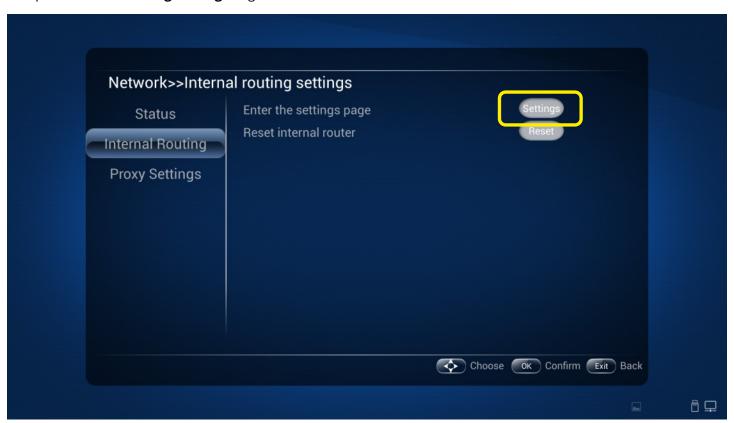


5. Login to Router: UserName: admin Password: <leave blank>

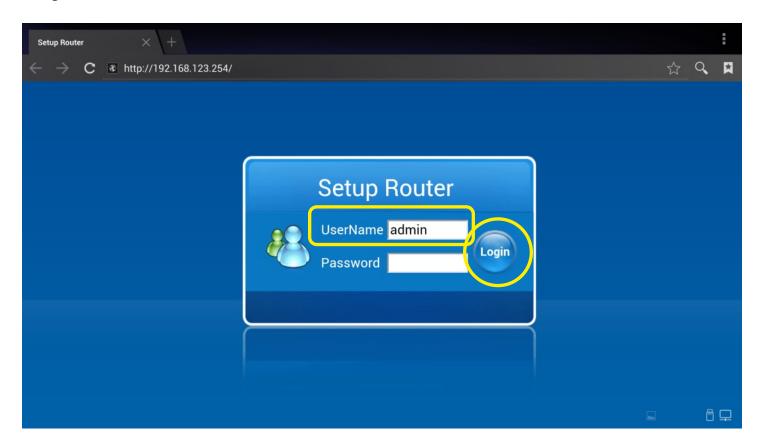

6. Select **Operating Mode** under the **Site contents** menu on left side of screen.

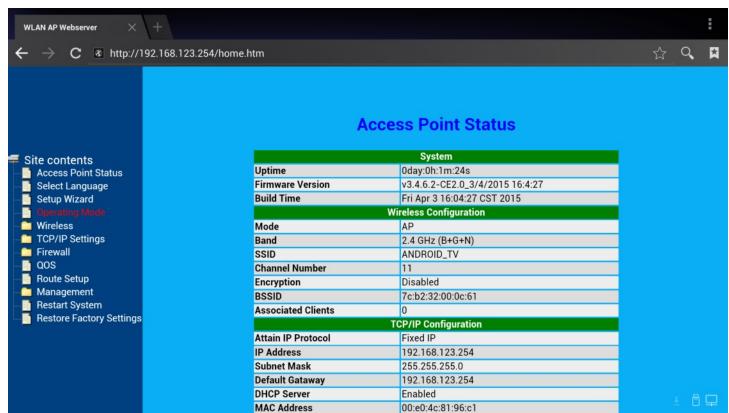

7. Select **Wireless** under Site Contents and then select **Basic Settings** then check the box at top for "Disable Wireless LAN Interface". Then scroll down and click **Apply Changes.**

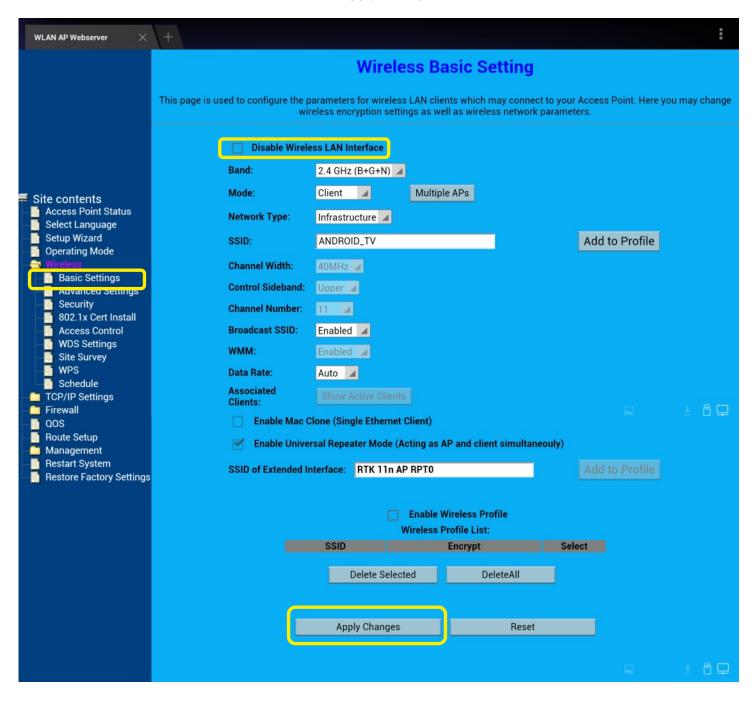

8. After changes are applied choose Reboot Now.

