





## **SimplicityTouch 70” ST-700 Gen 3**

Instructions for resolving *“err\_address\_unreachable”*


### 1. Go to Settings

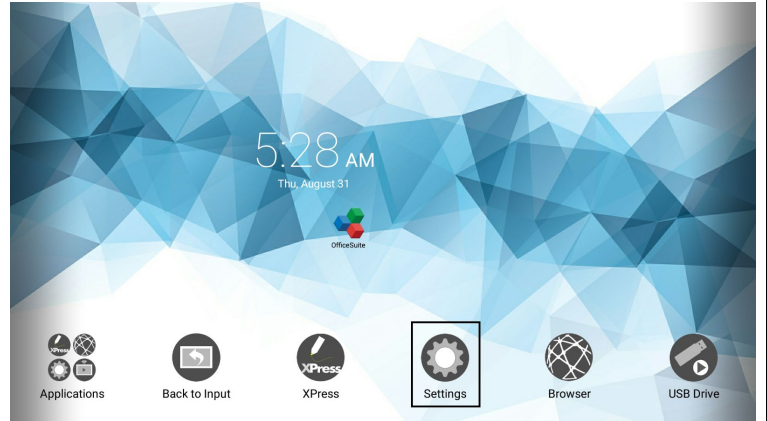


### 2. Input password

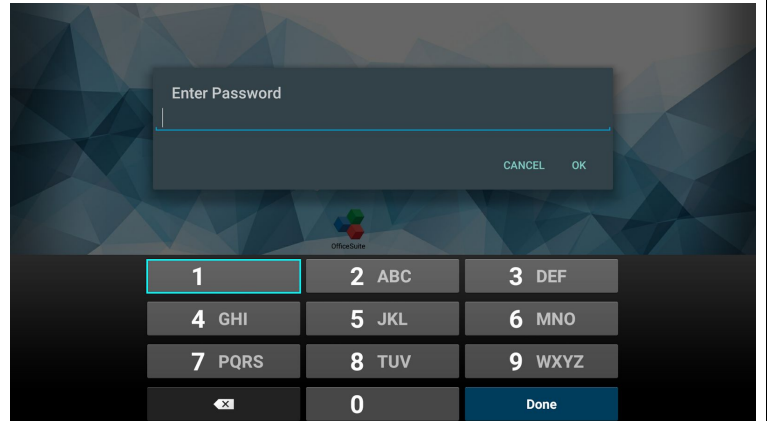


### 3. Select "Network"

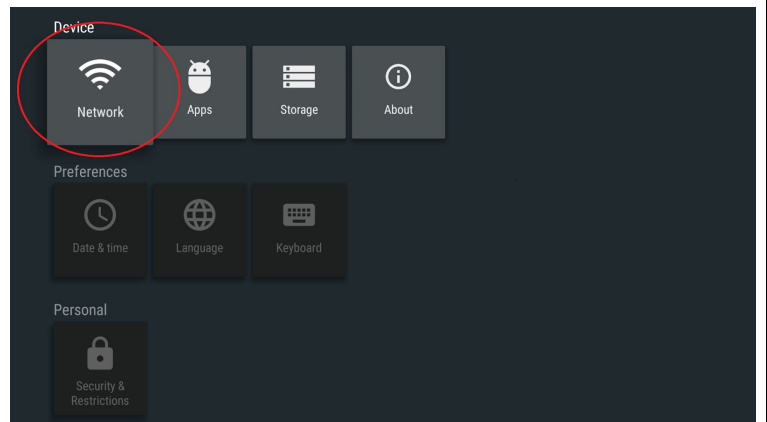


**4. Tap "Ethernet"**

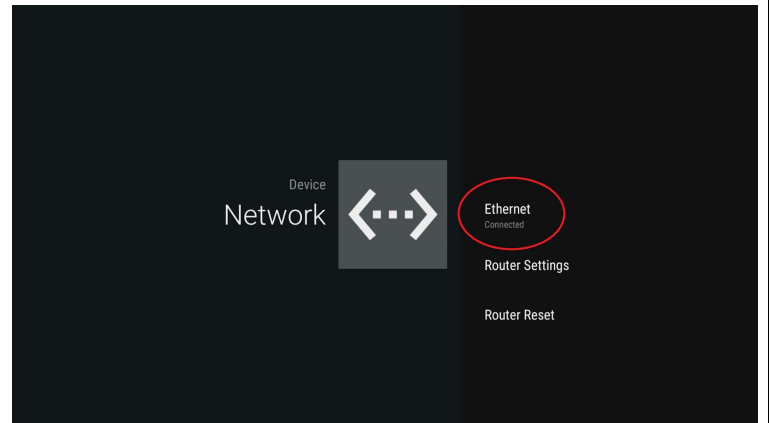


**5. Tap "Advanced Options"**

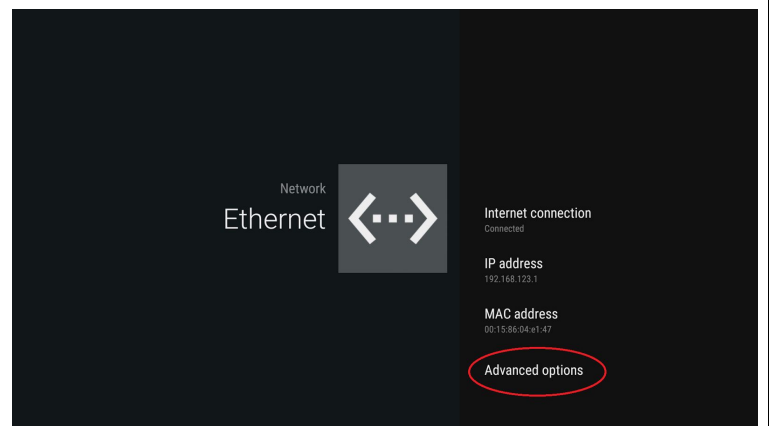


**6. Tap "IP settings"**

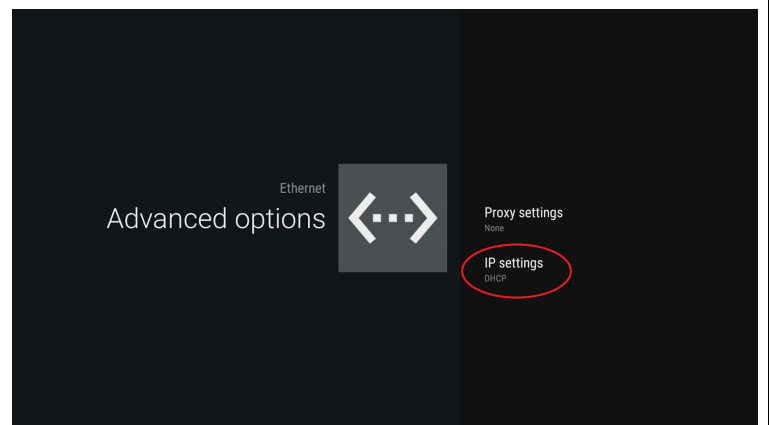


**7. Tap “Static IP”**

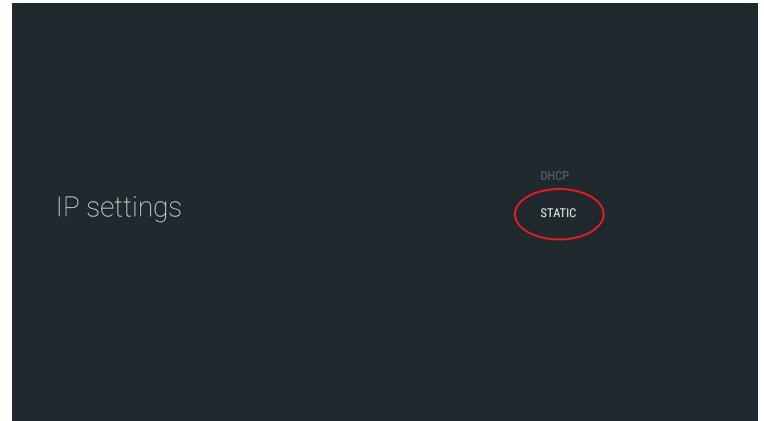

**8. For IP Address type in “192.168.123.1”**

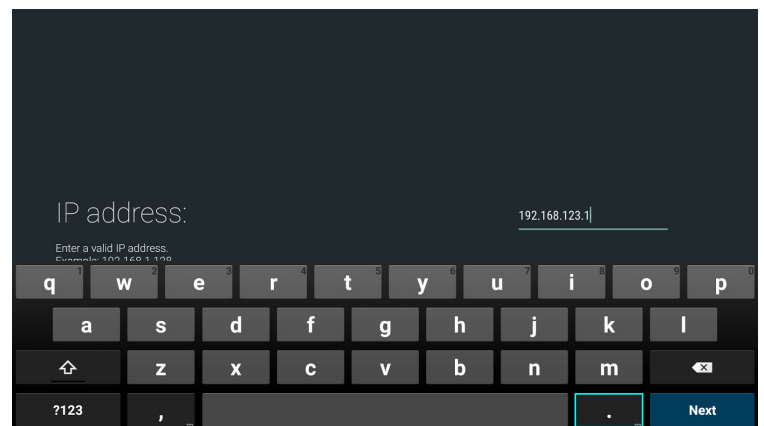

**9. For Gateway type in “192.168.123.254”**

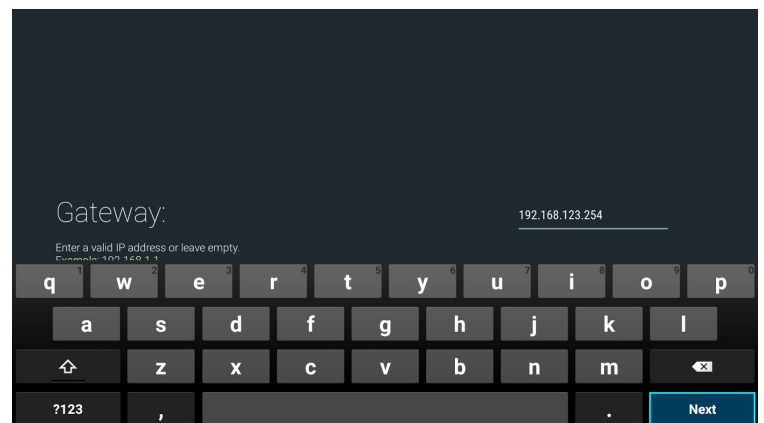

**10. For Network prefix length type "24"**

Network prefix length: 24

Enter a valid network prefix length.  
Example: 24

1 2 3 4 5 6 7 8 9 0

@ # \$ % & \* - + ( )

=\< ! " ' : ; / ?

ABC , . Next

**11. For DNS type "8.8.8.8" (This is Google's public DNS Server)**

DNS 1: 8.8.8.8

Enter a valid IP address or leave empty.  
Example: 0.0.0.0

q w e r t y u i o p

a s d f g h j k l

↑ z x c v b n m

?123 , . Next

**12. Leave DNS 2 blank**

DNS 2:

Enter a valid IP address or leave empty.  
Example: 0.0.0.0


q w e r t y u i o p

a s d f g h j k l


↑ z x c v b n m

?123 , . Next


**13. After selecting Next, A message should appear at the bottom right of the screen saying “Ethernet connected”. (If there is an ethernet cable plugged in.)**

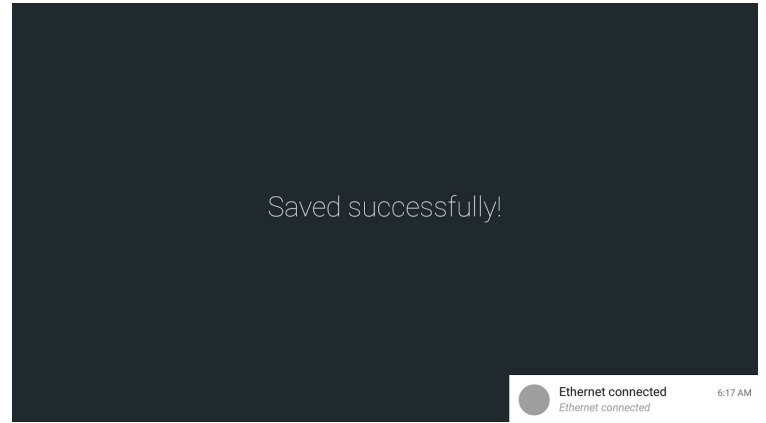


**14. Now goto the Router Settings**

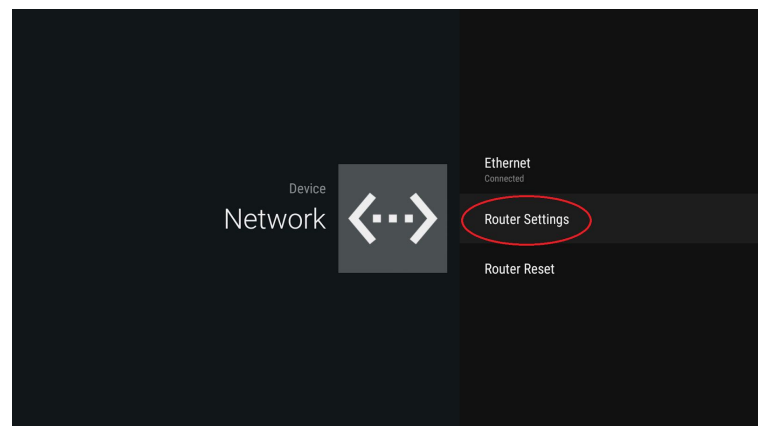

**15. The Router login page should appear, if it does not then move on to step 16.**

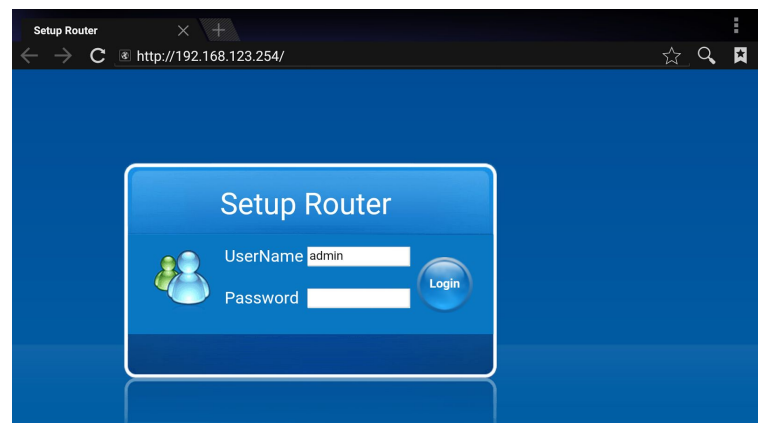

**16. In the event that you receive the same error and cannot connect to the router go back to the Advanced Network Settings and when selecting “IP settings” choose “DHCP”.**

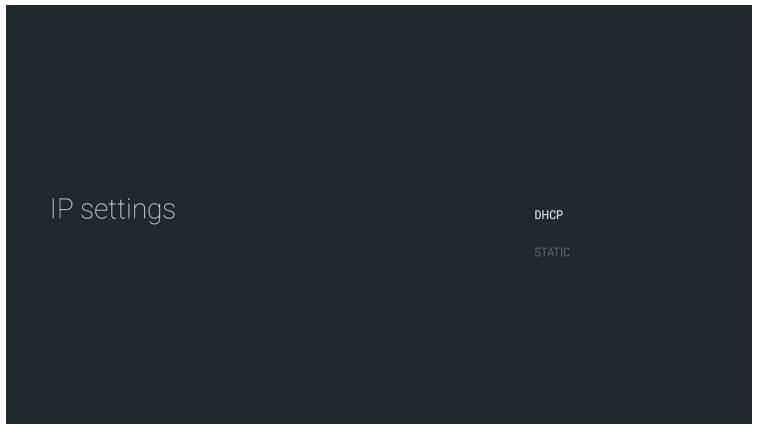

**END OF GUIDE**