

Tightening the hinge bolt of your Recordex SimplicityCam.

Follow these steps if the hinge bolt becomes too loose and the camera will not stay open.

1. Find the hinge bolt access.



2. Remove the rubber grommet using a flat blunt object.



3. Tighten the hinge bolt with an 8 mm or 5/16 inch wrench. Note: You will need to apply more force than expected to turn the bolt. Tighten the bolt about $\frac{1}{4}$ to $\frac{1}{2}$ of a revolution then test the hinge by opening and closing the camera. Repeat until hinge feels tight enough for proper movement of camera arm.



4. Replace rubber grommet.