

Audio Help Guide (Basic Stereo sound)

This room is equipped with an advanced audio system that may require you to select a few settings on the PC if you are not getting sound.

If you need **advanced** training: Please send an email to **AV@utahtech.edu** to schedule a time.

- When the system starts it will default to “Stereo” audio mode
- If another user has changed the mode Press the “Audio Mode” button then press “Stereo”
- In the lower right corner of the PC screen **Click** on the Speaker icon.
 - Makes Sure “ExtronScalerD (NVIDIA High Definition Audio)” is selected
- If not click the “^” in the upper right of the box
- Scroll through the options and select “ExtronScalerD (NVIDIA High Definition Audio)”

