


PRIMAL

Primal Performance Series Plate Loaded Standing Hip Thrust
PSSS0272

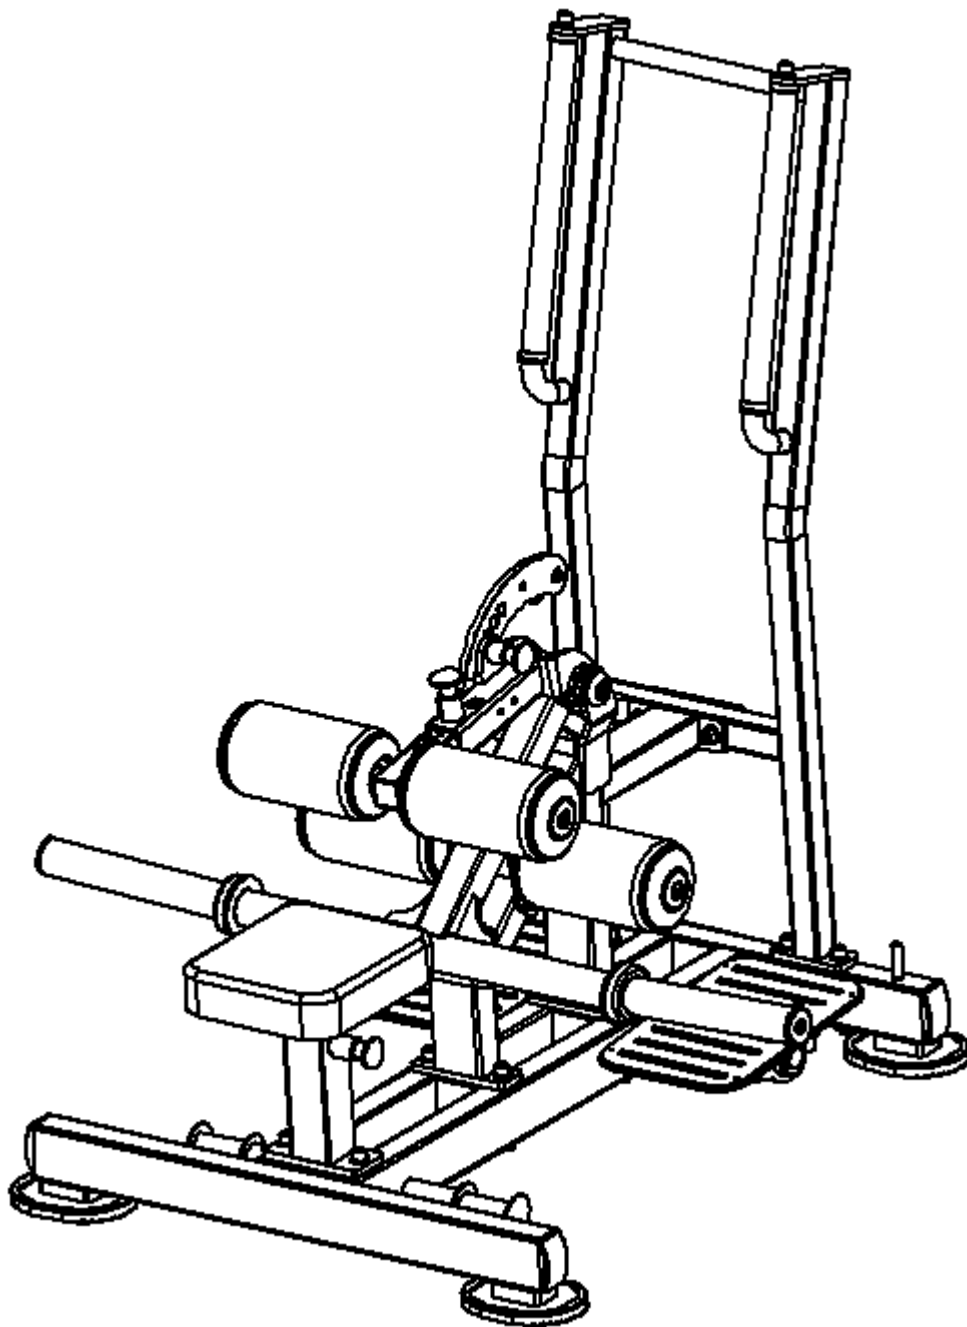

CONTENTS

01/IMPORTANT NOTICE

02/ ASSEMBLY PROCEDURE AND BILL OF MATERIALS

03/PRODUCT DESCRIPTION

04/PRODUCT PARAMETER

05/MAINTENANCE GUIDELINE

06/TROUBLESHOOTING

07/WARRANTY INSTRUCTION

01/IMPORTANT NOTICE



Thank you for choosing our machine, proper use of the machine is important to keep you convenient and away from danger. Please read the instruction before operating the machine:

1. Please read all user manuals before operating the machine, and operate the machine according to the instructions. Please keep the user manual until the machine is scrapped.
2. Keep users read and understand all cautions
3. Keep air fresh, flowing and enough motion space for users when operating the machine.
4. Keep the machine in good condition. Ensure all fixed parts are tightened without extra parts. Inspect the parts easy to wear out regularly.
5. Please contact the dealer or after-sales department to change wear-out or defective parts. DO NOT operate the machine when it out of use.
6. Please wear proper sports dress and gym shoes before operating it, DO NOT wear skirt, jewelry and tie up the hair to avoid any possible dangers.
7. Do warm-up exercises before operating the machine.
8. Stop workout and ask your doctor when any abnormal symptoms occurs such as headache, pain or emesis, etc.
9. Children must exercise under the supervision of adults.
10. WARNING: Keep hands and feet away from moving parts.

11. WARNING: DO NOT beyond adjustable setting range.
12. WARNING: Keep baby or pets away from the machine when operating it.
13. WARNING: Keep all control apparatus in proper position.
14. WARNING: Please operate the machine in proper way, improper operating may not achieve workout effect of the machine, and lead to damage to your health.
15. Operating the machine in controlled area is recommended.

02/ASSEMBLY PROCEDURE

1) Step 1

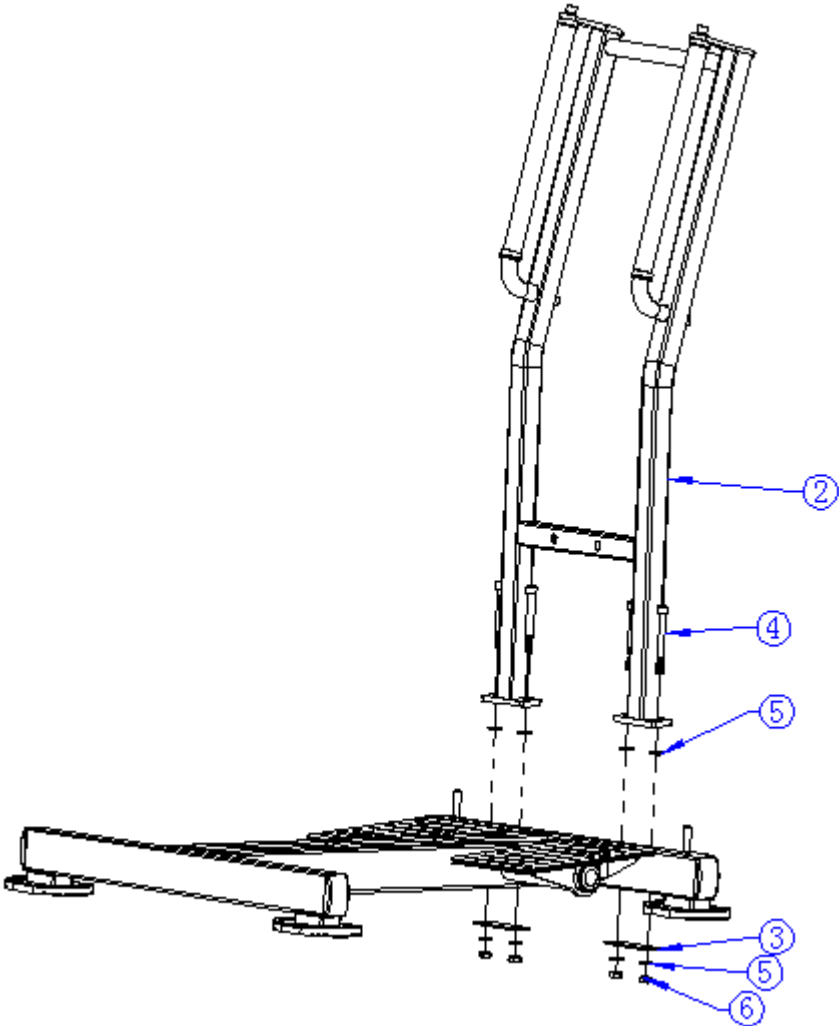
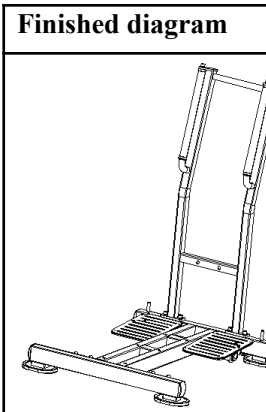



Spec	Qty
	1
	1
)*T3	2
105	4
	8
	4

Bill of materials			
No.	Name	Spec	Qty
7	Support assembly	Weldment	1
8	Protection plate	145*40*T3	3
4	Hexagon socket cylinder bolt	M12X105	4
5	Flat washer	M12	12
6	Hexagon lock nut	M12	6
9	Hexagon socket cylinder bolt	M12X70	2

2) Step 2


Finished diagram

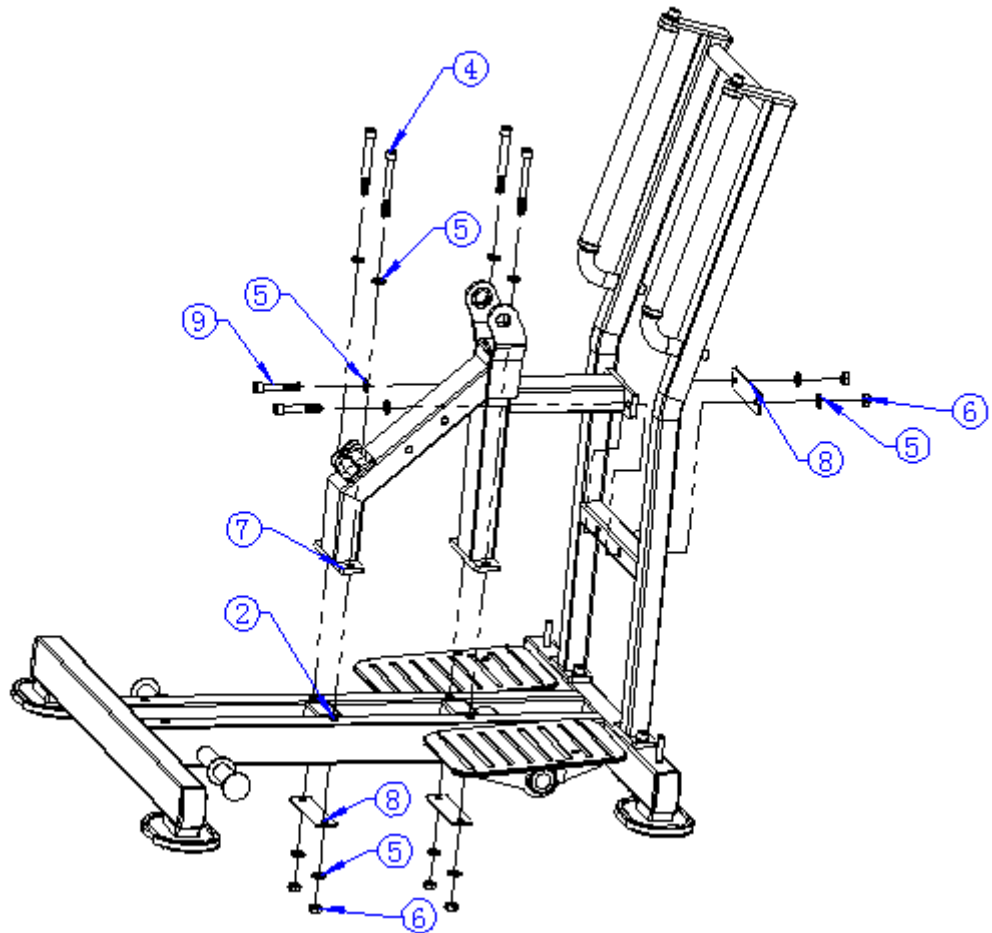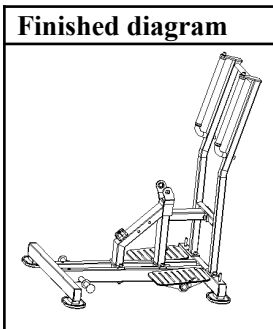

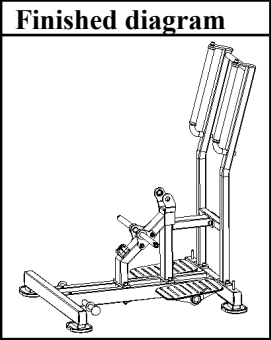


3) Step 3


Bill of materials			
No.	Name	Spec	Qty
10	Fixed assembly	Weldment	1
11	Nut	M12	2
4	Hexagon socket cylinder bolt	M12X105	2
			4

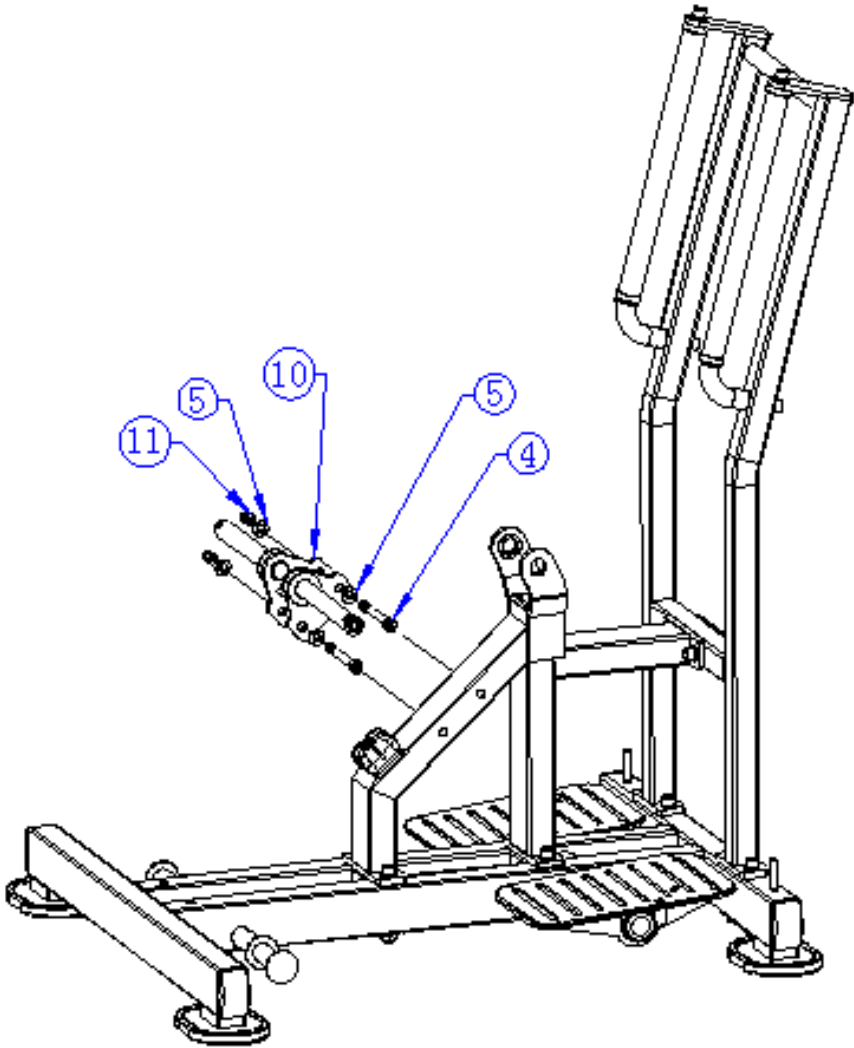


4) Step 4

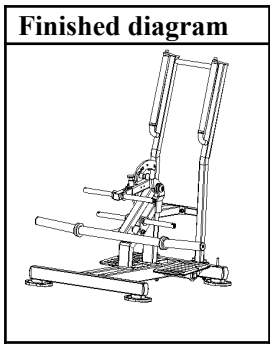


Bill of materials			
No.	Name	Spec	Qty
12	Adjustment assembly	Weldment	1
13	Adjustment assembly	Weldment	1
14	End cover	Φ43.5*14.5	2
15	Moving arm shaft	Φ25*127	1
16	Hexagon socket flat head bolt	M12X35	2
5	Spring washer	M12	2

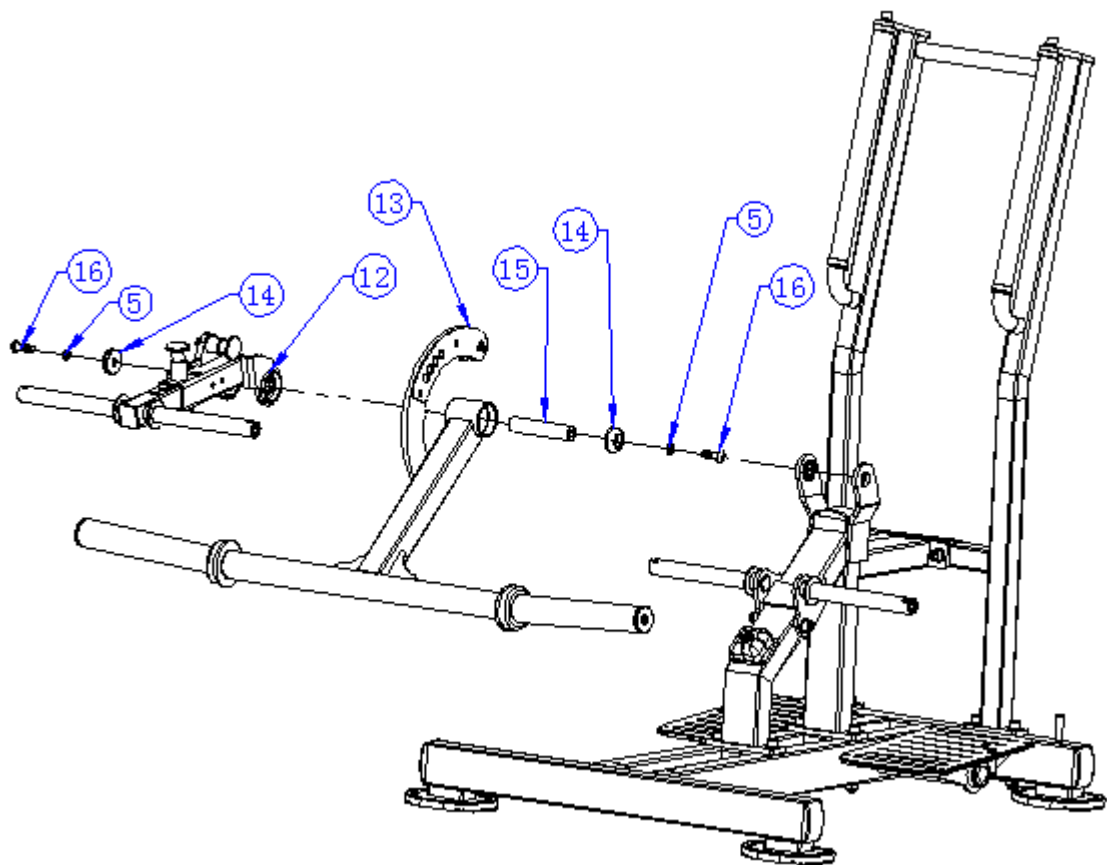


5) Step 5



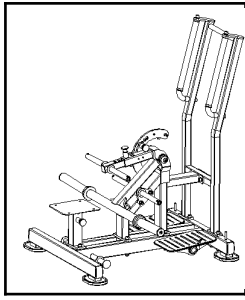


Bill of materials			
No.	Name	Spec	Qty
17	Abdomen pad	Weldment	1
4	Hexagon socket cylinder bolt	M12X105	2
5	Flat washer	M12	4
6	Hexagon lock nut	M12	2
8	Protection plate	145*40*T3	1

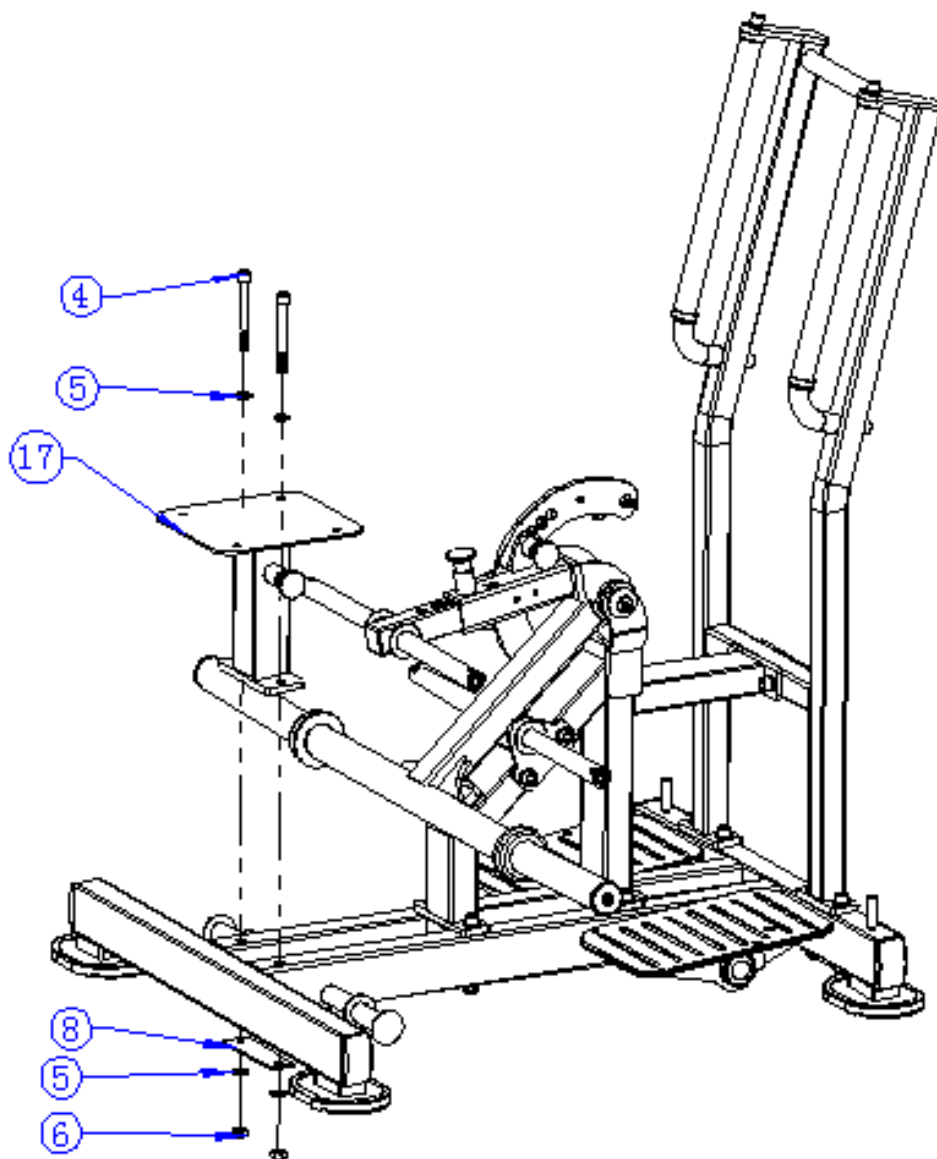


6) Step 6

Finished

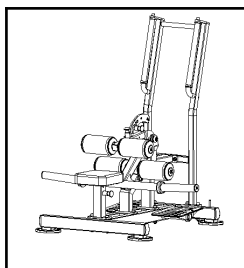

Bill of materials			
No.	Name	Spec	Qty
18	Roller pad	Φ120*200	4
19	Roller pad end cover	Ø113XØ29X46	8
20	Aluminum end cover	Ø50*13	4
21	Hexagon socket flat head bolt	M12X35	4
6	Spring washer	M12	4
22	Abdomen pad	235*260*60	1
23	Hexagon socket flat head bolt	M8X25	4
24	Spring washer	M8	4
25	Flat washer	M8	4

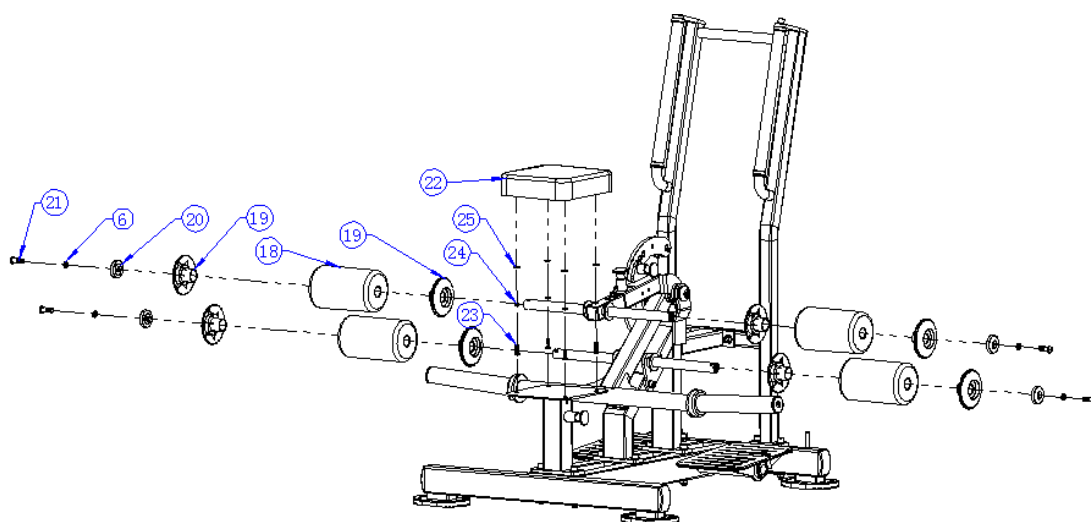

03/ PRODUCT DESCRIPTION

The machine is indoor fitness equipment, is suitable for aerobic exercise, mainly used to strength cardio-pulmonary function, and train the muscles supplemented. By workout with the machine pectorals and other muscles can be built up, achieve the purpose of bodybuilding and fitness.

The machine explains how to operate it properly and build up muscles by functional diagram, easy to learn. User can adjust the resistance by weight stack easily.

The design and manufacture of the machine meets the human motion curve, the safety and durability are

guaranteed.

The design and manufacture of the machine meets the human motion curve, and meets the standard of GB17498.1-2008 and GB17498.2-2008, the safety and durability are guaranteed.

·Large size steel tube and electrostatic spraying guarantee the safety and durability.

04/ PRODUCT PARAMETER

Name	Plate Loaded Standing Hip Thrust	Model	PSSS0272
Floor space			
Net weight		Level	S
Category: S: Professional and Commercial; H: household			

05/ MAINTENANCE GUIDELINE

1. All the bolts and screws should be inspected regularly and keep tightened, rotating parts should be flexible without abnormal sound.
2. The machine should be keep clean. Please DO NOT clean the machine with strong cleaning solvent.
3. Any worn or damaged stress parts should be repaired or changed immediately.

06/ TROUBLESHOOTING

07/ WARRANTY INSTRUCTION

1. Warranty scope

The machine is damaged by any non-impersonal factors under proper maintenance. The warranty card is valid only when the user is original buyer.

2. The warranty period is one year since buying the machine.
3. The below-listed damages are out of warranty:
 - 1). the damages caused by abuse, carelessness, accident or unauthorized modify.
 - 2). the damages caused by improper adjusting weight stack pin.
 - 3). the damages caused by improper maintenance.
 - 4). the damages caused by other violation operating.