


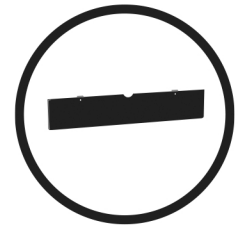

Easy Assembly — Modesty Panel

Modesty is the best policy.



Tools Required



Phillips-head
screwdriver



Hex key
(provided)

Time Required



Less than it takes to
microwave lunch.

Note: Follow these steps to assemble the Modesty Panel.

Don't fret. Assembly is a cinch.

- 1 Locate the two sets of predrilled holes on the underside of the Desktop, near the back edge of the Desktop. There are four factory drilled holes in the desktop to help guide installation. Attach the Modesty Panel Brackets to the Desktop by inserting 5/8-inch #8 wood screws (provided) into each set of holes.
- 2 Fasten the Modesty Panel to the Modesty Panel Brackets on the Desktop using the 12mm-long machine screws (provided). Tighten the machine screws using the 4mm hex key.

