


7900 SERIES STANDING PILOT MODELS (EXCEPT 7995)

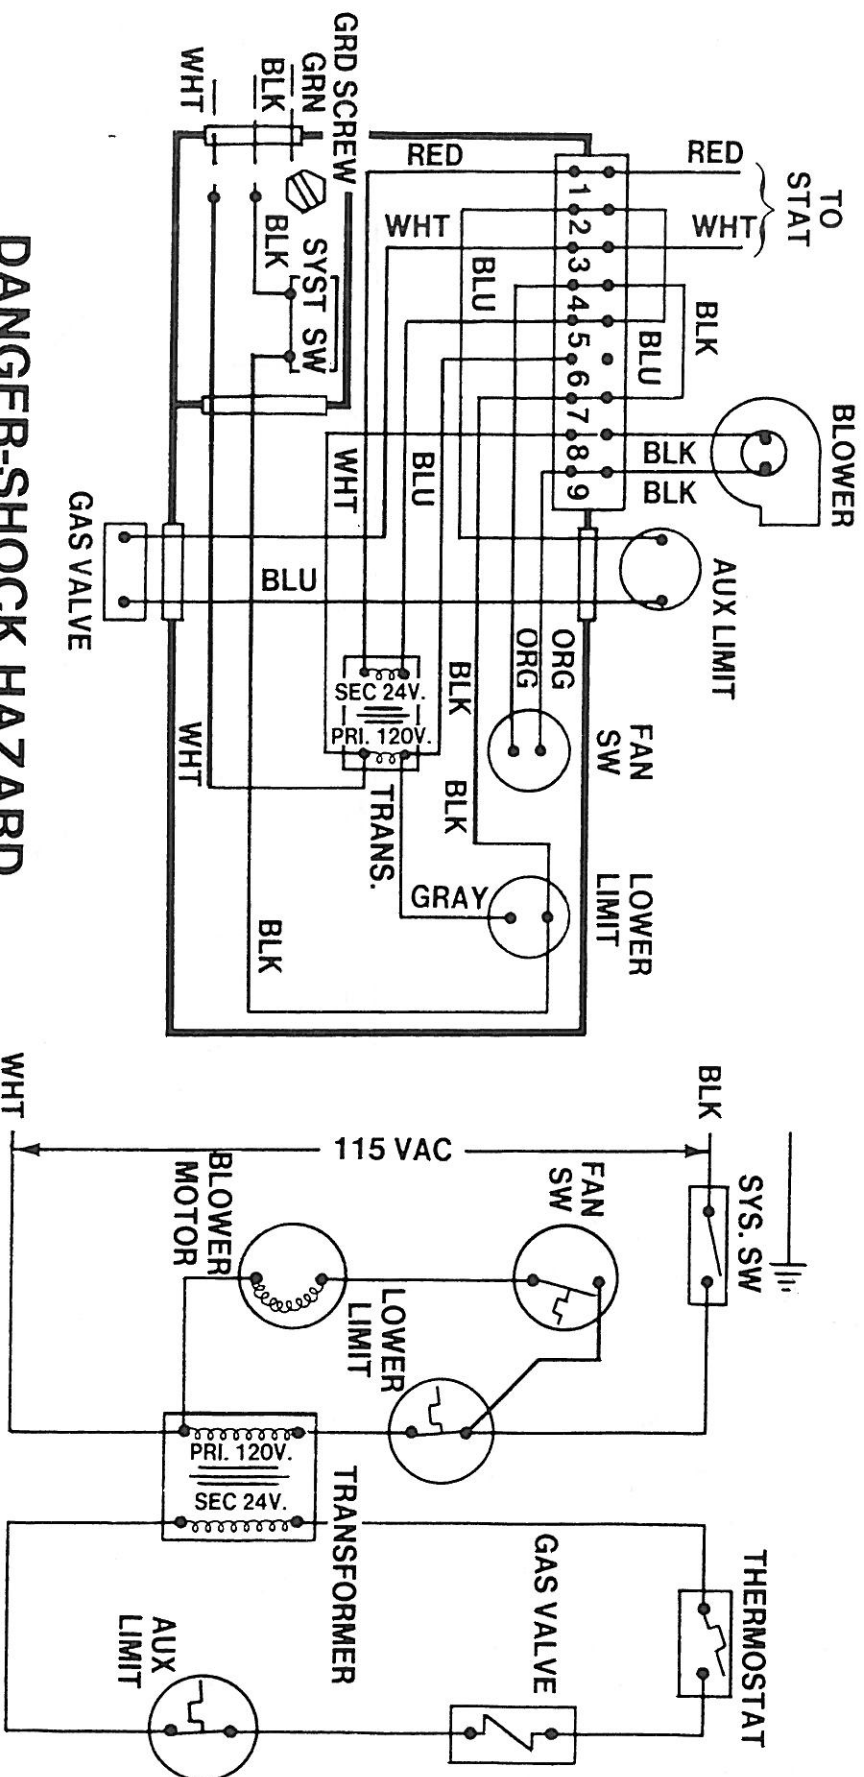


DANGER-SHOCK HAZARD
ELECTRIC POWER MUST BE TURNED OFF BEFORE
REMOVING WIRING BOX COVER

1972-462 (4-84) P.I.

FIGURE 9

7900 SERIES AUTOMATIC IGNITION MODELS

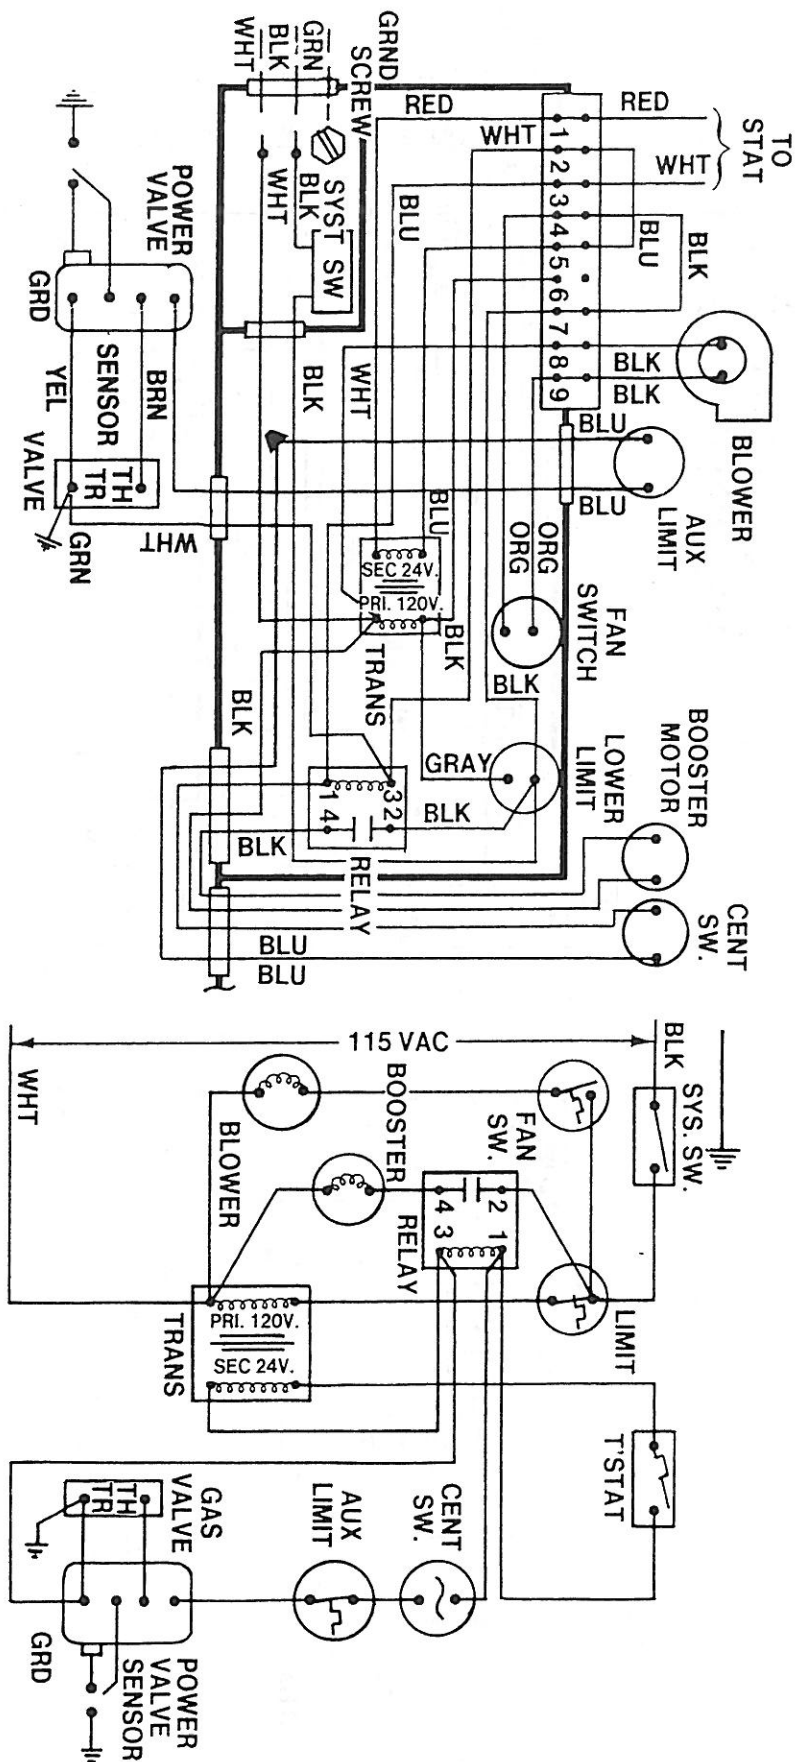

DANGER-SHOCK HAZARD
ELECTRIC POWER MUST BE TURNED OFF BEFORE
REMOVING WIRING BOX COVER

1972-448 (4-84) P.I.

FIGURE 11

WIRING

1. Connect the plug from the blower to the receptacle on the blower control box (See figure 2). **NOTE:** When properly aligned, the plug will slide smoothly into place — **DO NOT FORCE**. Insure clasp tabs snap into place.
2. Connect the plug from the blower control box to the receptacle on the furnace control box (See figure 2).
3. Wire thermostat as shown in:

- 5 Figure 5 for thermostat wiring for the 7900--6021/B (2 wire) control box that uses existing heating thermostat.

- 5 Figure 6 for thermostat wiring for the 7900A6041 (4 wire) control box.

CAUTION

IF PLASTIC WIRE CLAMPS WERE REMOVED DURING THIS PROCEDURE, INSURE THAT THEY ARE RE-PLACED.

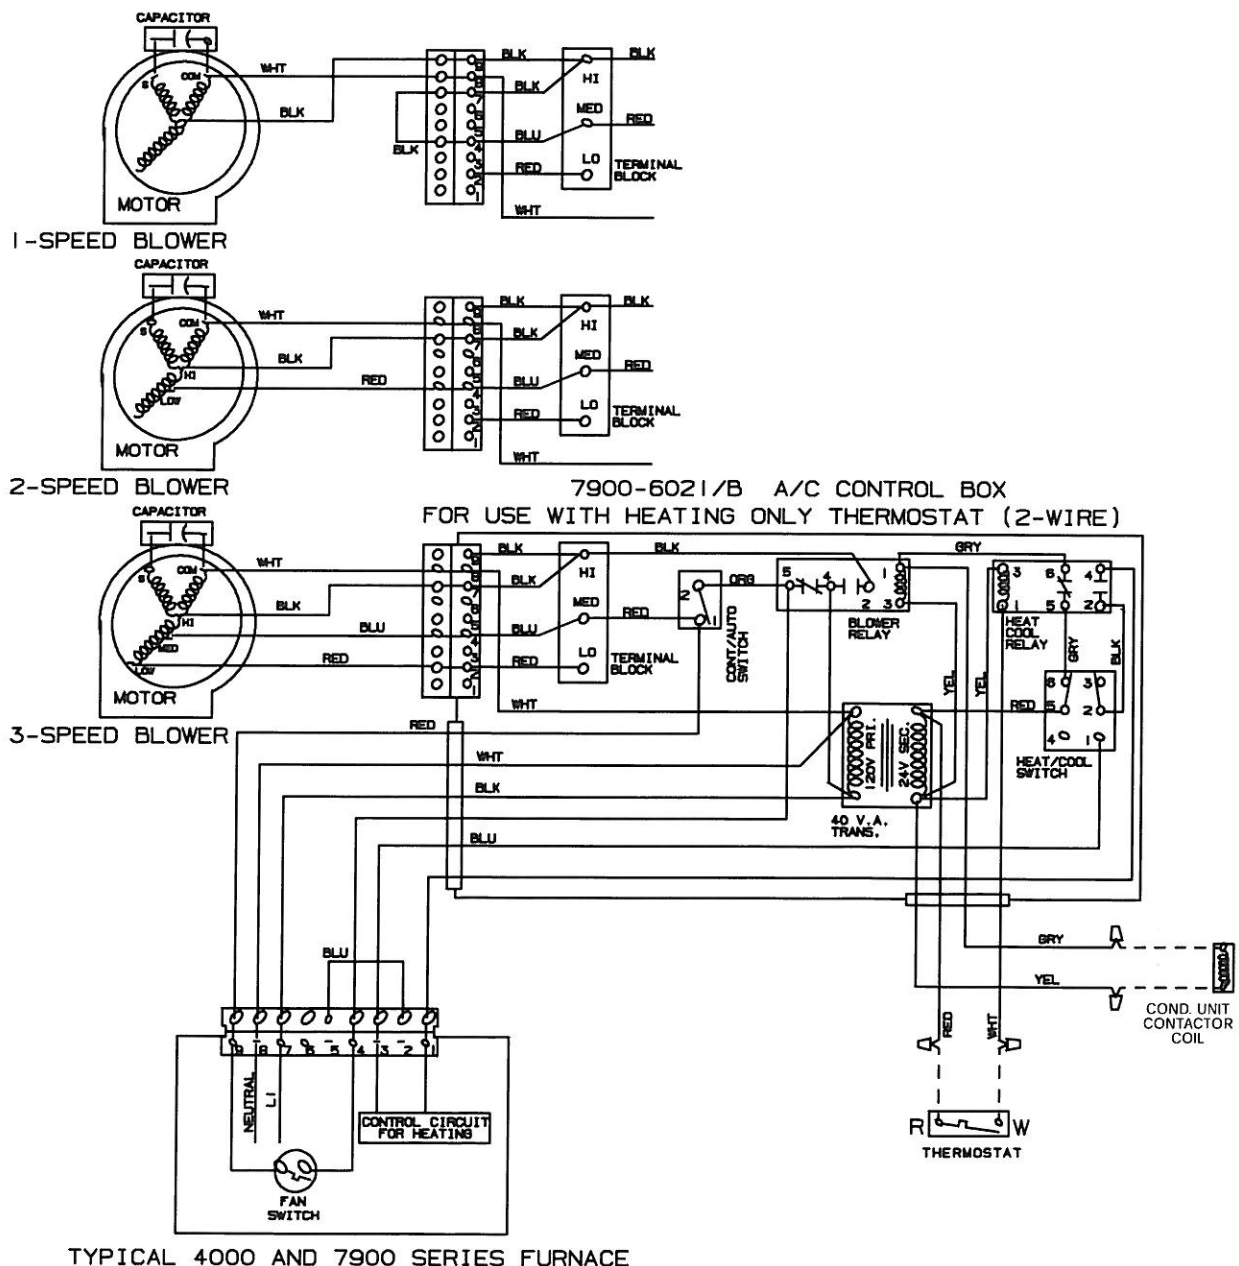


Figure 5